ELECTRONIC CASH REGISTER

TK-950

THANK YOU
YOUR RECEIPT
CALL AGAIN !

GROCERY
DAIRY
H.B.A.
FROZEN
FOOD
DELICATESSEN

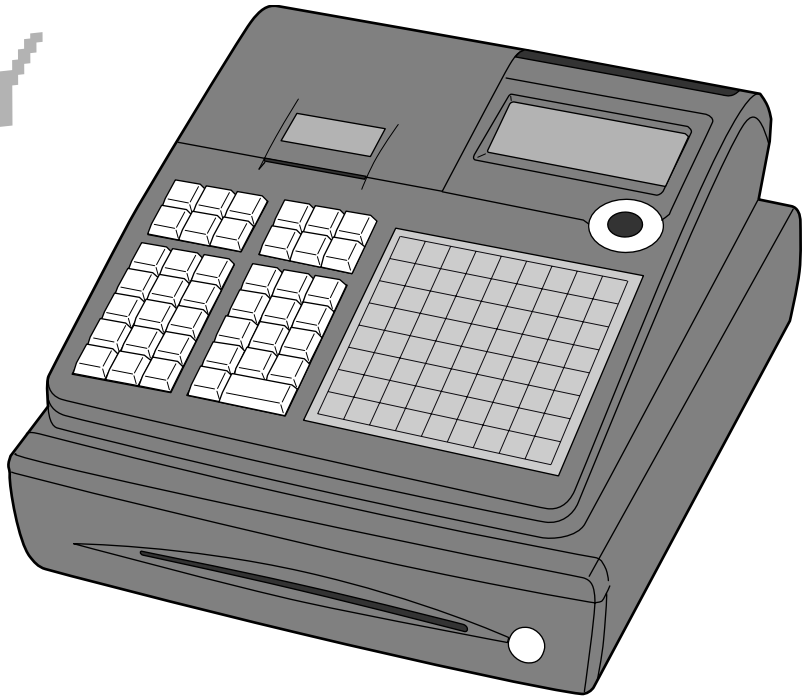

USER'S MANUAL

CI

CASIO

Important!

Your new cash register has been carefully tested before shipment to ensure proper operation. Safety devices eliminate worries about breakdowns resulting from operator errors or improper handling. In order to ensure years of trouble-free operation, however, the following points should be noted when handling the cash register.

Do not locate the cash register where it will be subjected to direct sunlight, high humidity, splashing with water or other liquids, or high temperature (such as near a heater).

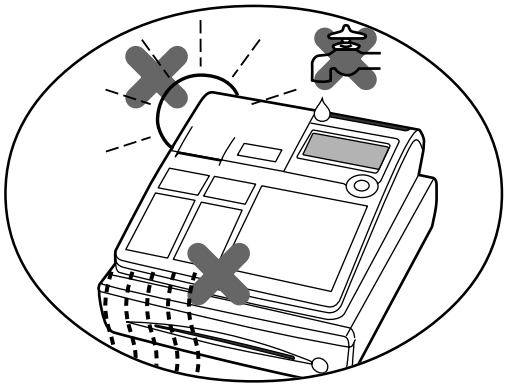

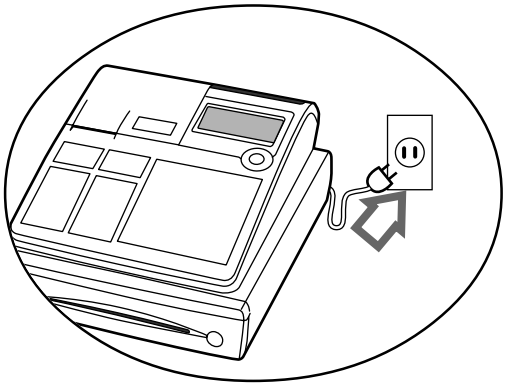

Be sure to check the sticker on the side of the cash register to make sure that its voltage matches that of the power supply in the area.

Never operate the cash register while your hands are wet.

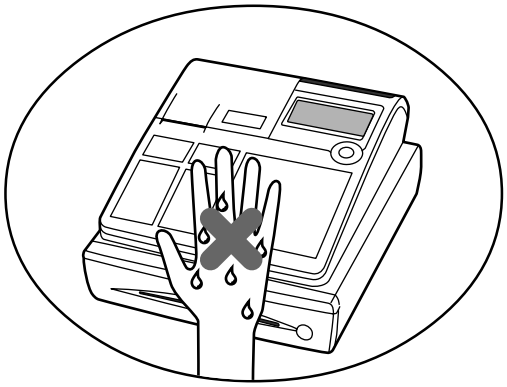

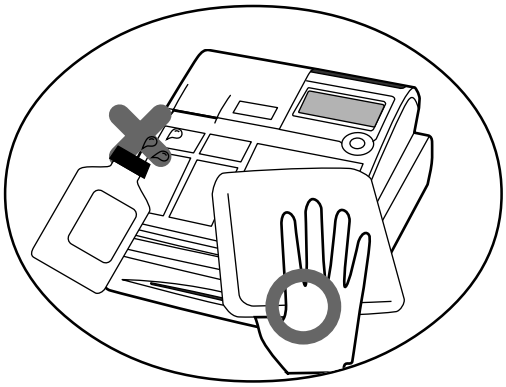

Use a soft, dry cloth to clean the exterior of the cash register. Never use benzene, thinner, or any other volatile agent.

Never try to open the cash register or attempt your own repairs. Take the cash register to your authorized CASIO dealer for repairs.

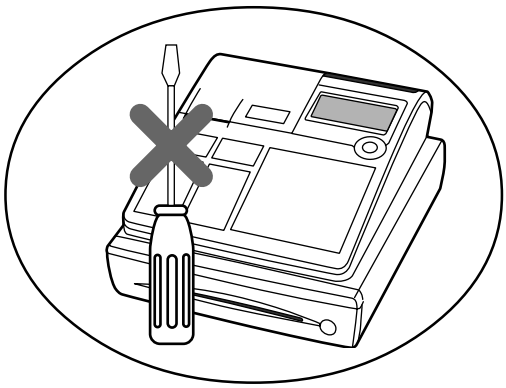

Welcome to CASIO Cash Register!

Congratulations upon your selection of a CASIO Electronic Cash Register, which is designed to provide years of reliable operation.
Operation of a CASIO cash register is simple enough to be mastered without special training. Everything you need to know is included in this manual, so keep it on hand for reference.
Consult your CASIO dealer if you have any questions about points not specifically covered in this manual.

GUIDELINES LAID DOWN BY FCC RULES FOR USE OF THE UNIT IN THE U.S.A.
(Not applicable to other areas)

WARNING: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Please keep all information for future reference.

The main plug on this equipment must be used to disconnect mains power.
Please ensure that the socket outlet is installed near the equipment and shall be easily accessible.

Safety Precautions

- To use this product safely and correctly, read this manual thoroughly and operate as instructed.
  After reading this guide, keep it close at hand for easy reference.
  Please keep all informations for future reference.
- Always observe the warnings and cautions indicated on the product.

About the icons

In this guide various icons are used to highlight safe operation of this product and to prevent injury to the operator and other personnel and also to prevent damage to property and this product. The icons and definitions are given below.

⚠ Indicates that there is a risk of severe injury or death if used incorrectly.

⚠ Indicates that injury or damage may result if used incorrectly.

Icon examples

To bring attention to risks and possible damage, the following types of icons are used.

The △ symbol indicates that it includes some symbol for attracting attention (including warning). In this triangle the actual type of precautions to be taken (electric shock, in this case) is indicated.

The ⦸ symbol indicates a prohibited action. In this symbol the actual type of prohibited actions (disassembly, in this case) will be indicated.

The ● symbol indicates a restriction. In this symbol the type of actual restriction (removal of the power plug from an outlet, in this case) is indicated.

⚠ Warning!

Handling the register

Should the register malfunction, start to emit smoke or a strange odor, or otherwise behave abnormally, immediately shut down the power and unplug the AC plug from the power outlet. Continued use creates the danger of fire and electric shock.

• Contact CASIO service representative.

Do not place containers of liquids near the register and do not allow any foreign matter to get into it. Should water or other foreign matter get into the register, immediately shut down the power and unplug the AC plug from the power outlet. Continued use creates the danger of shorting, fire and electric shock.

• Contact CASIO service representative.

Should you drop the register and damage it, immediately shut down the power and unplug the AC plug from the power outlet. Continued use creates the danger of shorting, fire and electric shock.

• Attempting to repair the register yourself is extremely dangerous. Contact CASIO service representative.

Never try to take the register apart or modify it in any way. High-voltage components inside the register create the danger of fire and electric shock.

• Contact CASIO service representative for all repair and maintenance.

⚠ Warning!

Power plug and AC outlet

Use only a proper AC electric outlet (100V~240V) . Use of an outlet with a different voltage from the rating creates the danger of malfunction, fire, and electric shock. Overloading an electric outlet creates the danger of overheating and fire.

Make sure the power plug is inserted as far as it will go. Loose plugs create the danger of electric shock, overheating, and fire.

- Do not use the register if the plug is damaged. Never connect to a power outlet that is loose.

Use a dry cloth to periodically wipe off any dust built up on the prongs of the plug. Humidity can cause poor insulation and create the danger of electric shock and fire if dust stays on the prongs.
Never use detergent to clean the power cord, especially the plug and jack.

Do not allow the power cord or plug to become damaged, and never try to modify them in any way. Continued use of a damaged power cord can cause deterioration of the insulation, exposure of internal wiring, and shorting, which creates the danger of electric shock and fire.

- Contact CASIO service representative whenever the power cord or plug requires repair or maintenance.

⚠ Caution!

Do not place the register on an unstable or uneven surface. Doing so can cause the register — especially when the drawer is open — to fall, creating the danger of malfunction, fire, and electric shock.

Do not place the register in the following areas.

- Areas where the register will be subject to large amounts of humidity or dust, or directly exposed to hot or cold air.
- Areas exposed to direct sunlight, in a close motor vehicle, or any other area subject to very high temperatures.

The above conditions can cause malfunction, which creates the danger of fire.

Do not overlay bend the power cord, do not allow it to be caught between desks or other furniture, and never place heavy objects on top of the power cord. Doing so can cause shorting or breaking of the power cord, creating the danger of fire and electric shock.

Be sure to grasp the plug when unplugging the power cord from the wall outlet. Pulling on the cord can damage it, break the wiring, or cause short, creating the danger of fire and electric shock.

Never touch the plug while your hands are wet. Doing so creates the danger of electric shock. Pulling on the cord can damage it, break the wiring, or cause short, creating the danger of fire and electric shock.

Never touch the printer head, platen and cutter.

Introduction & Contents 2
Getting Started 10
1. Load the memory protection batteris and Paper rolls 10
2. Install receipt / journal paper. 11
3. Plug the cash register into a wall outlet. 13
4. Insert the mode key marked “PGM” into the mode switch. 13
5. Turn the mode switch to the “PGM” position. 13
6. Set the date. 13
7. Set the time. 13
8. Tax table programming 14
9. Select printouts and watermark on receipt. 16
10. Department unit price programming 17
11. PLU unit price programming 17
12. Discount rate programming 17
13. Issuing daily reset report 17
14. Advanced operations and Setups 18
15. Issuing reports 18
16. Troubleshooting 18
Introducing the Register 20
General guide 20
Roll paper 20
Mode key 20
Drawer 20
Drawer lock / Drawer key 20
Magnetic plate 20
Mode switch 21
How to set the Pop-up display 21
How to set the menu sheet 21
Display 22
Display panel 22
Main display 22
Customer display 22
Keyboard 24
Allocatable functions 26
Basic Operations and Setups 28
How to read the printouts 28
How to use your cash register 29
Before business hours 30
Checking the time and date 30
To display and clear the date/time 30
Preparing coins for change 30
Preparing and using department keys 31
Registering department keys 31
Programming department keys 33
To program a unit price for each department 33
To program the tax calculation status for each department 33
To program high amount limit for each department 33
Registering department keys by programming data 34
Preset price 34
Preset tax status 34
Locking out high amount limitation 34
Preparing and using PLUs 35
Programming PLUs 35
To program a unit price for each PLU 35
To program tax calculation status for each PLU 35

Registering PLUs 36
Preparing and using discounts 38
Programming discounts 38
Registering discounts 38
Discount for items and subtotals 38
Preparing and using reductions 39
Programming for reductions 39
To program preset reduction amount 39
Registering reductions 39
Reduction for items and subtotal 39
Registering credit and check payments 40
Check 40
Charge 40
Credit 40
Mixed tender (cash and check) 40
Shifting the taxable status of an item 41
Calculation merchandise subtotal 41
Registering returned goods in the REG mode 42
Registering returned goods in the RF mode 42
Registering money received on account 43
Registering money paid out 43
No sale registration 43
Making corrections in a registration 44
To correct an item you input but not yet registered 44
To correct an item you input and registered 45
To cancel all items in a transaction 46
Printing the daily sales reset report 47
Advanced Operations 48
Using clerk functions 48
Enable clerk feature 48
Assigning a clerk 48
Clerk number key 48
Single item cash sales 49
Currency exchange function 50
Registering foreign currency 50
Full amount tender in foreign currency 50
Partial tender in a foreign currency 51
Premium 52
Coupon 52
Age verification 53
Check tracking systems 54
Check tracking system 54
Opening a check 54
Adding to a check 54
Issuing a guest receipt 55
Closing a check memory 55
New / old check key operation 55
Add check 56
Flat-PLU 57
Text recall 57
Inputting the number of customers 57
Clerk interrupt function 58
Condiment / preparation PLUs 59
Set menu 59
Arrangement key registrations 60
Tips 60

Item correction by using VOID key 61
Addition 61
Programming department / PLU descriptors and preset messages in the list 62
How to choose and set the department / PLU descriptors in the list 62
How to choose and set the preset receipt message and graphic logo in the list 62
Preset message and graphic print sample 62
Character manual input 63
Entering characters 63
Using character keyboard 63
Entering characters by multi tapping 64
Programming descriptors and messages by entering characters 65
Programming PLU descriptor 65
Programming department / flat-PLU / function key descriptor 66
Function key 66
Department key 66
Flat-PLU key 66
Programming message 67
Receipt message 67
Programming Clerk name 67
Clerk name 67
Programming other descriptors 68
Report descriptor 68
Text recall character 69
Grand total, special character 69
Report title 69
Machine feature program 70
General control program 70
Programming procedure 70
Program data (by address code) 70
Address code 02 (machine number) 70
Address code 03 (consecutive number) 70
Address code 04 (tax system) 70
Address code 05 (print control for receipt) 71
Address code 06 (calculation & operation control) 71
Address code 08 (print control for fixed total report) 72
Address code 10 (print control for taxable amount) 72
Address code 14 (currency exchange control) 73
Address code 15 (print control for reports) 73
Address code 16 (print control for grand total) 74
Address code 17 (print control) 74
Address code 18 (print control for guest receipt) 74
Address code 19 (receipt control) 74
Address code 21 (message control) 75
Address code 26 (check tracking) 75
Address code 27 (clerk control) 75
Address code 30 (thermal printer control) 76
Address code 34 (backlight control) 76
Key function program 78
Department key/Flat-PLU key/PLU program (Batch feature programming) 78
Programming procedure 78
Program data 78
Department key/Flat-PLU key/PLU program (Individual feature programming) 79
Programming procedure 79
Program data (by address code) 80
Transaction key program 81
Programming procedure 81
Program data 81

Clerk program 85
Clerk number, check number programming 85
Clerk other programming 85
Set menu programming 86
Arrangement programming 86
Keyboard layout change 87
Programming the function of each key 87
Printing read/reset reports 88
To print the individual department, PLU read report 88
To print daily read reports (except open check and electronic journal) 89
To print electronic journal read report 89
To print open check read report 89
To print daily reset reports (except open check) 90
To print open check reset report 90
Read / reset report sample 91
To print the periodic 1/2 sales read/reset reports 94
Reading the cash register's program 96
To print unit price/rate program (except PLU) 96
To print key descriptor, name, message program (except PLU) 96
To print the machine program (except PLU) 97
To print the PLU unit price 98
To print the PLU descriptor 98
To print the PLU program 98
To print the key allocation program 98
Troubleshooting 100
When an error occurs 100
When the * sign appears on the display 101
When the register does not operate at all 102
Clearing a machine lock up 102
In case of power failure 103
When the L sign appears on the display 103
User Maintenance and Options 104
To replace journal paper 104
To replace receipt paper 105
Options 105
Specifications 106
Index 107

This chapter shows how to setup the cash register and get it ready to operate. Please read this chapter even if you have used a cash register before.

1. Load the memory protection batteris and Paper rolls

Load the two memory protection batteries

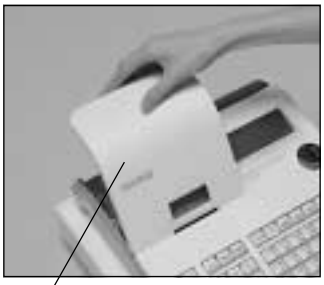

1. Remove the printer cover.

printer cover

2. Remove the battery compartment cover.

battery compartment cover

3. Note the (+) and (–) markings in the battery compartment. Load a set of two new alkaline batteries so that their positive (+) and negative (–) ends are facing as indicated by the markings.

4. Replace the battery compartment cover.

5. Replace the printer cover.

No battery is included in the accessories.

Important!

These batteries protect information stored in your cash register's memory when there is a power failure or when you unplug the cash register. Be sure to install these batteries.

WARNING!

- Never try to recharge the batteries supplied with the unit.
- Do not expose batteries to direct heat, let them become shorted or try to take them apart.

Keep batteries out of the reach of small children. If your child should swallow a battery, consult a physician immediately.

2. Install receipt / journal paper.

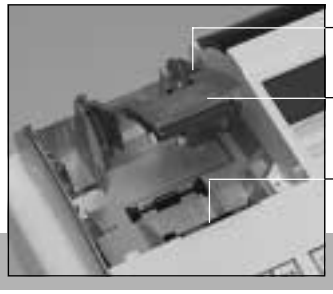

Important!

Take away the head protection sheet from the printer and close the platen arm.

Caution! (in handling the thermal paper)

- Never touch the printer head and the platen.
- Unpack the thermal paper just before your use.
- Avoid heat/direct sunlight.
- Avoid dusty and humid places for storage.
- Do not scratch the paper.
- Do not keep the printed paper under the following circumstances:
  High humidity and temperature/direct sunlight/contact with glue, thinner or a rubber eraser.

To install receipt paper

Step 1

Remove the printer cover.

Step 2

Open the platen arm.

Step 3

Ensuring the paper is being fed from the bottom of the roll, lower the roll into the space behind the printer.

Step 4

Put the leading end of the paper over the printer.

Step 5

Close the platen arm slowly until it locks steadily.

Complete

Replace the printer cover, passing the leading end of the paper through the cutter slot. Tear off the excess paper.

To install journal paper

Step 1

Remove the printer cover.

Step 2

Open the platen arm.

Step 3

Ensuring the paper is being fed from the bottom of the roll, lower the roll into the space behind the printer.

Step 4

Put the leading end of the paper over the printer.

Step 5

Close the platen arm slowly until it locks steadily.

Step 6

Remove the paper guide of the take-up reel.

Step 7

Slide the leading end of the paper into the groove on the spindle of the take-up reel and wind it onto the reel two or three turns.

Step 8

Replace the paper guide of the take-up reel.

Step 9

Place the take-up reel into place behind the printer, above the roll paper.

Step 10

Press the FEED key to take up any slack in the paper.

> During machine installation, press the FEED key after power on.

Complete

Replace the printer cover.

3. Plug the cash register into a wall outlet.

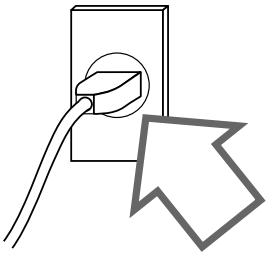

Be sure to check the sticker (rating plate) on the side of the cash register to make sure that its voltage matches that of the power supply in your area.

4. Insert the mode key marked “PGM” into the mode switch.

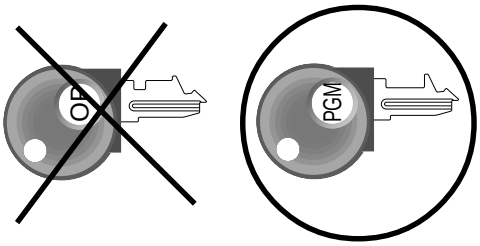

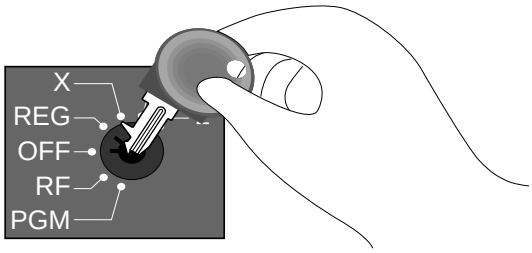

5. Turn the mode switch to the “PGM” position.

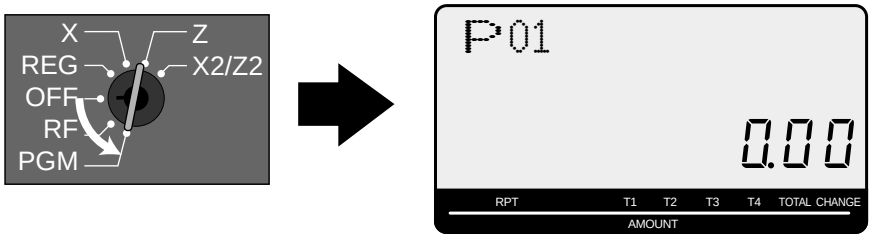

When the display shows “Low battery”, load memory protection batteries (refer to page 10).

6. Set the date.

1. Enter current date in year - month - day order, and press the <X/FOR>
   Example: June 15, 2008 ⇨ 0 8 0 6 1 5 [X/FOR DATE TIME]
2. Press <C> key.
   Example: [C]

7. Set the time.

1. Enter current time in 24 hour system, and press the <X/FOR>
   Example: 08:30 AM ⇨ 0 8 3 0 [X/FOR DATE TIME] (9:45 PM ⇨ 2 1 4 5 [X/FOR DATE TIME])
2. Press <C> key.
   Example: [C]

8. Tax table programming

Programming automatic tax calculation

Important!

After you program the tax calculations, you also have to individually specify which departments (page 33) and PLUs (page 35) are to be taxed.

For this cash register to be able to automatically register state sales tax, you must program its tax tables with tax calculation data from the tax table for your state. There are three tax tables (U. S.) and four tax tables (Canada) that you can program for automatic calculation of three/four separate sales taxes.

Programming for the U.S. tax tables procedure

There are two ways to set up the U.S. tax tables:

A) Input the desired tax rate / Changing the tax rate

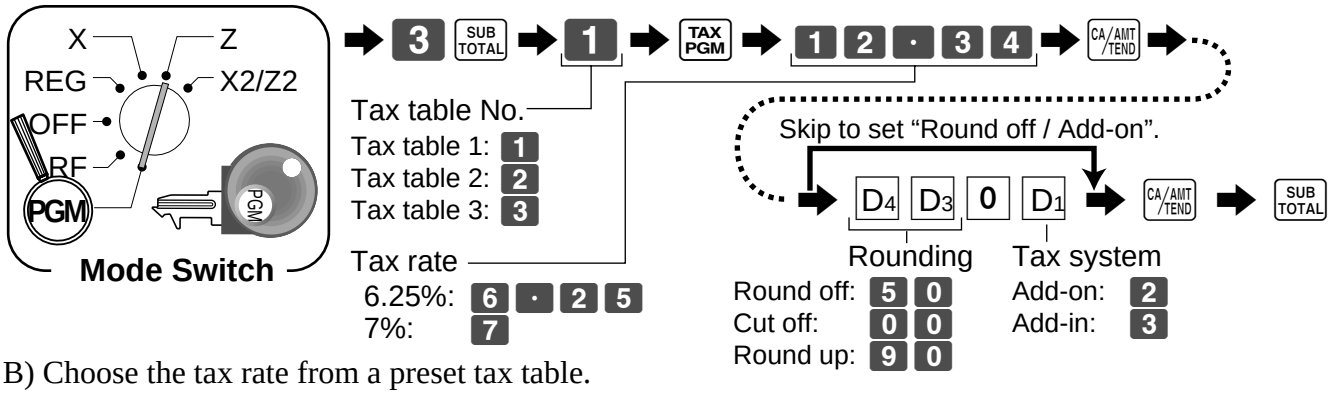

B) Choose the tax rate from a preset tax table.

The procedure to setup the tax table is printed on the guidance receipt. First issue the guidance receitpt by the HELP key and follow it to set the tax table.

HELP ⇨ 2 HELP ⇨ 0 1 0 1 HELP (Alabama)

```
ENTER NUMBER THEN
PRESS <HELP> KEY.

01:HOW TO PROGRAM
   DATE AND TIME?

02:HOW TO PROGRAM
   TAX TABLE? (US)

     :
     :
```

```
02:HOW TO PROGRAM
   TAX TABLE?

·SELECT YOUR STATE AND
 ENTER NUMBER THEN
 PRESS <HELP> KEY.

0101:ALABAMA
0201:ALASKA
0301:ARIZONA
0401:ARKANSAS
0501:CALIFORNIA
       :
       :
5001:WISCONSIN
5101:WYOMING
```

```
PLEASE SELECT YOUR
DISTRICT NUMBER FOR TAx
TABLE 1 (XXXX) AND TABLE
2 (YYYY) FROM BELOW
TABLE.

1)TURN MODE KEY TO PGM.
2)3<SUBTOTAL>
3)0025<SUBTOTAL>
4)XXXX <CASH> KEY.
5)YYYY <CASH> KEY.
(IF YOU DO NOT NEED
 TABLE 2, JUST SKIP
 STEP 5)
6)<SUBTOTAL>
XXXX, YYYY IS DISTRICT
NUMBER

ALABAMA
0101: 4%   State
0102: 4.5% State & Local
       :
0111: 9 %  State & Local
```

Follow these steps.

8. Tax table programming (continued)

Programming Canadian tax table

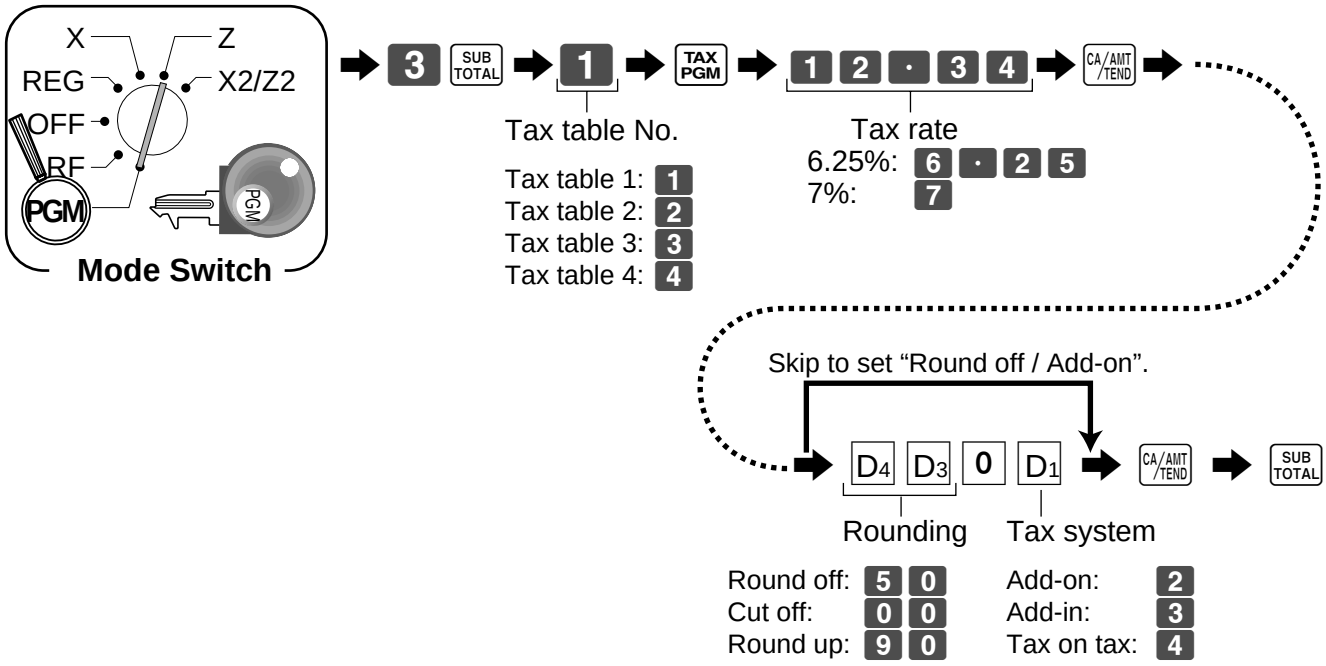

- **4 tax tables are used for the following purpose**
  Table 1: Used for the federal taxable items.
  Table 2: Used for the provincial taxable items.
  Table 3/4: Used for the provincial taxable items for different tax table.

Important!

Be sure you use the federal sales tax data with your provincial sales tax data. Even if your province use the same tax rate as another province, inputting the wrong data will result incorrect tax calculations.

9. Select printouts and watermark on receipt.

Turn the mode switch to “PGM”, enter <0>, <1> or <10>, and press the <CHK>, <ST>

Example: issue receipt (with no watermark) ⇨ 0 CHK SUB TOTAL
issue receipt (with watermark) ⇨ 1 CHK SUB TOTAL
print journal ⇨ 1 0 CHK SUB TOTAL

Note !

If you need journal and are sometimes required receipts by customers, select “issue receipt”. After business hours, issue the electronic journal report.

NOTE:

After completion of register programming, enter 6 2 0 0 and SUB TOTAL in the PGM 7 mode (PGM mode ⇒ 7 SUB TOTAL) to backup the program data into the internal non-volatile memory.

(This opration takes about 30 seconds.)

10. Department unit price programming

Maximum 6-digit unit price can be set to the department.
Refer to page-33.

Tax calculation status can be set to the department.
Refer to page-33.

11. PLU unit price programming

Maximum 6-digit unit price can be set to the PLU.
Refer to page-35.

Tax calculation status can be set to the PLU.
Refer to page-35.

12. Discount rate programming

0.01 - 99.99% rate can be set to the Discount key.
Refer to page-38.

Tax calculation status can be set to the Discount key.
Refer to page-38.

13. Issuing daily reset report

After business hours, issue daily reset report.
Refer to page-47.

14. Advanced operations and Setups

Using clerk functions 48
Single item cash sales 49
Currency exchange function 50
Premium 52
Coupon 52
Age verification 53
Check tracking system 54
Flat-PLU 57
Text recall 57
Input the number of customers 57
Clerk interrupt function 58
Condiment / preparation PLUs 59
Set menu 59
Arrangement key registrations 60
Tips 60
Item correction by using VOID key 61
Addition 61
Department / PLU name selection / set 62
Preset message /graphic selection / set 62
Character manual input 63
Machine feature program 70
Key function program 78
Keyboard layout change 87

15. Issuing reports

Individual item read report 88
Daily read report 89
PLU report 89
Monthly report 89
Hourly report 89
Group report 89
Flash report 89
Electronic journal report 89
Open check report 89
Daily reset report 90
Periodic sales report 94
Program read report 96

16. Troubleshooting

E sign appears 100
* sign appears 101
Drawer does not open 101
L sign appears 103
To replace receipt / journal paper 104, 105

General guide

This part of the manual introduces you to the cash register and provides a general explanation of its various parts.

Roll paper

You can use the roll paper to print receipts and a journal (page 11 ~ 12).

Mode key

There are two types of mode keys: the program key (marked “PGM”) and the operator key (marked “OP”). The program key can be used to set the mode switch to any position, while the operator key can select the **REG** and **OFF** position.

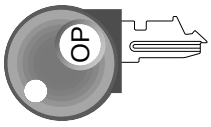

Operator key

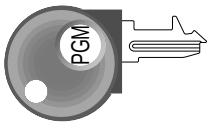

Program key

Drawer

The drawer opens automatically whenever you finalize a registration and whenever you issue a read or reset report. The drawer will not open if it is locked with the drawer key.

Drawer lock / Drawer key

Use the drawer key to lock and unlock the drawer.



Drawer key

Magnetic plate

Use this plate for tacking the notes received from customer.

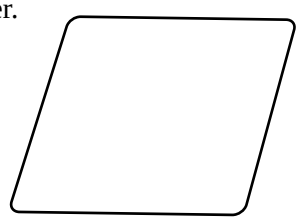

Mode switch

Use the mode keys to change the position of the mode switch and select the mode you want to use.

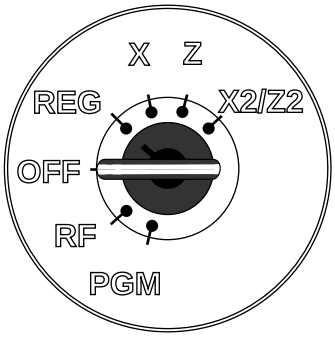

Mode Switch	Mode Name	Description
X2/Z2	**Periodic sale read/reset**	Used to obtain periodic sales reports without resetting total data or while resetting all total data.
Z	**Daily sales reset**	Used to obtain daily reports while resetting (clearing) all total data.
X	**Daily sales read**	Used to obtain daily reports without resetting (clearing) all total data.
REG	**Register**	Used for normal registration.
OFF	**Stand-by**	Cash register standing by.
RF	**Refund**	Used for registering refund transaction.
PGM	**Program**	Used for cash register programming.

How to set the Pop-up display

1. Lift the unit until it stops.

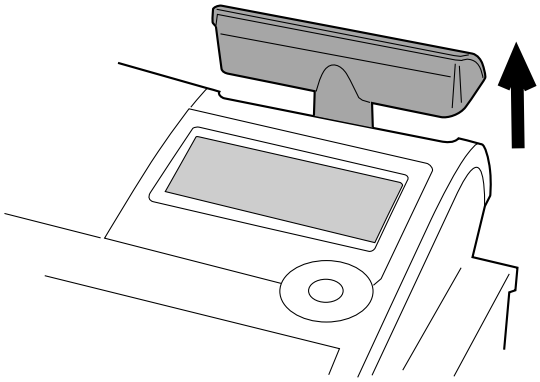

2. Rotate the unit.

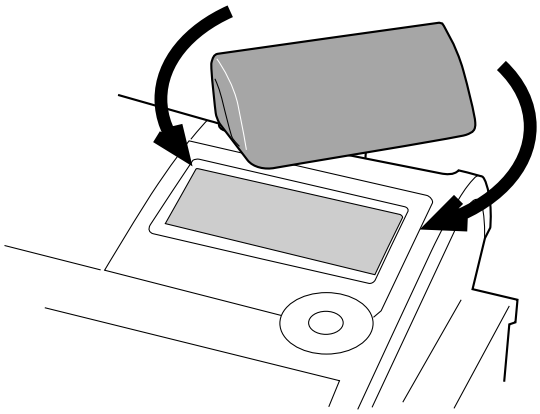

How to set the menu sheet

1. Pull the sheet cover up and remove the old menu sheet.

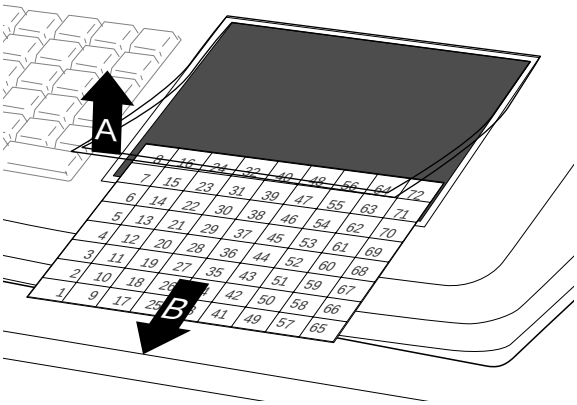

2. Put the new menu sheet and replace the cover.

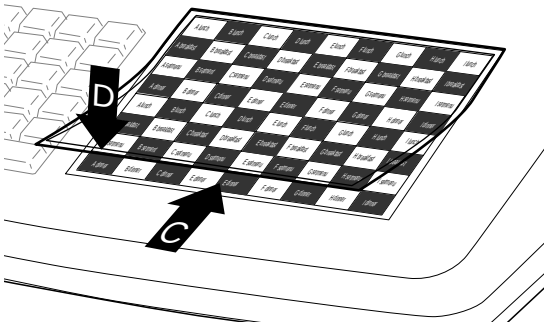

Display

Display panel

Main display

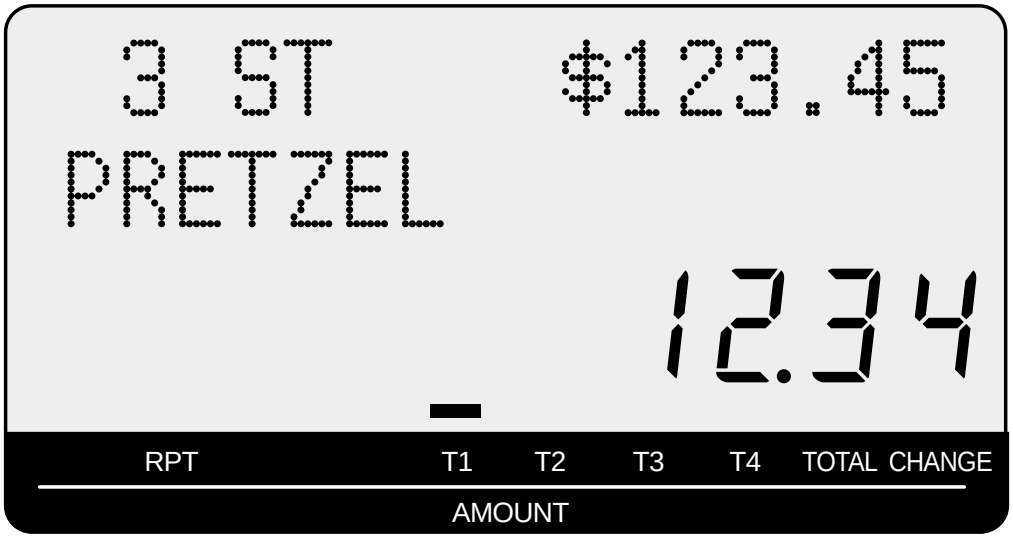

Customer display

Displays

Main Display
(alphanumeric + numeric display)

Pop-up (customer) display
(numeric display)

Item registration (by department/PLU)

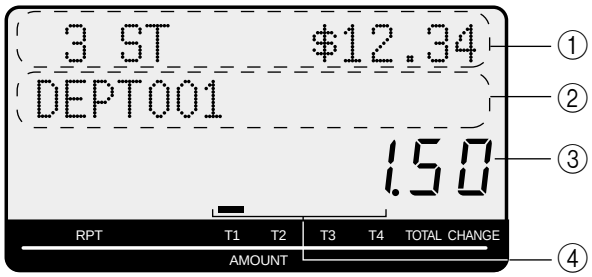

Repeat registration

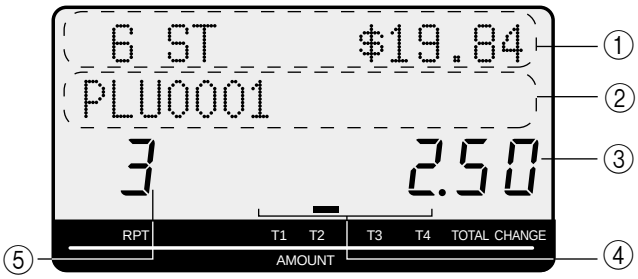

Totalize operation

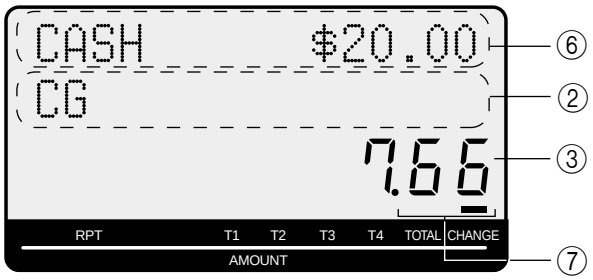

① Item count and subtotal
This part of the display shows item sold count and subtotal.

② Item / Key / Change descriptor
When you register an item or key, the item / key / change descriptor appears here.
Mode descriptor is also displayed here.

③ Amount / Quantity
This part of the display shows monetary amounts. It also can be used to show the current time. (The current date is shown in the alphanumeric display.)

④ Taxable sales status indicators
When you register a taxable item, the corresponting indicator is lit.

⑤ Number of repeats
Anytime you perform a repeat registration (page 31, 36), the number of repeats appears here.
Note that only one digit is displayed for the number of repeats. This means that a “5” could mean 5, 15 or even 25 repeats.

⑥ Tendered amount
When the tender operation is made, the entered value appears here.

⑦ Total / Change indicators
When the TOTAL indicator is lit, the displayed value is monetary total or subtotal amount.
When the CHANGE indicator is lit, the displayed value is the change due.

Keyboard

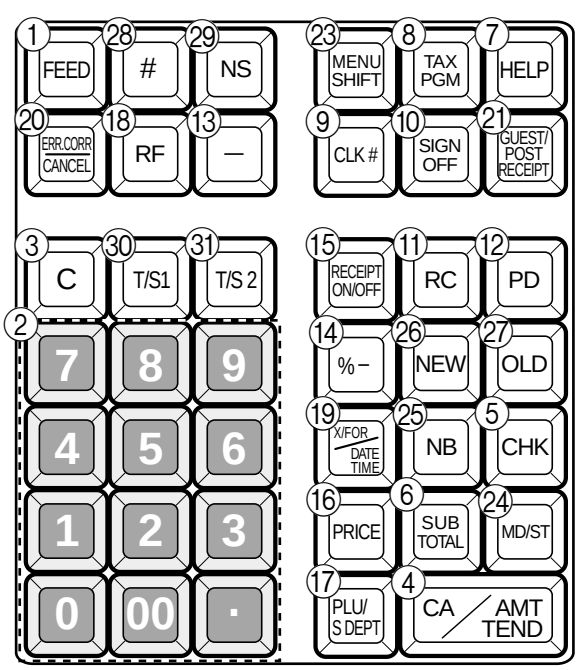

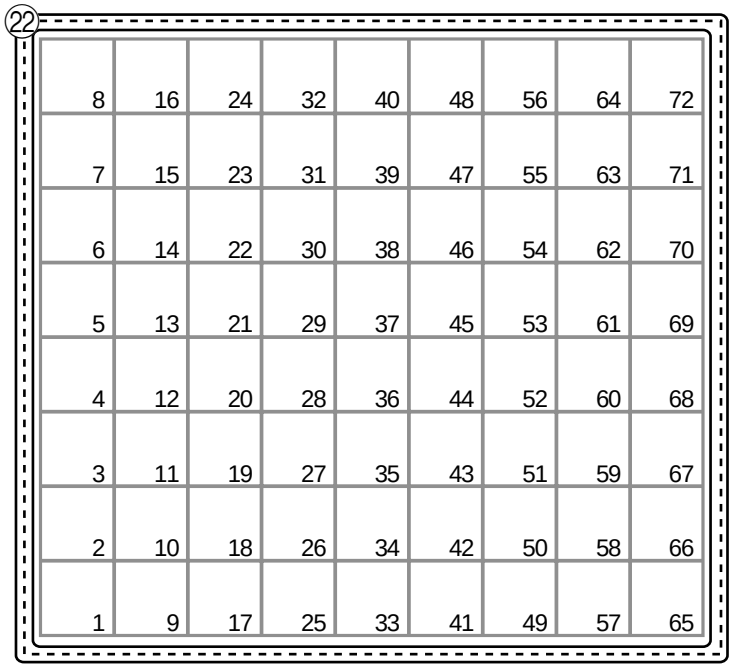

① **Paper feed key** [FEED]
Hold this key down to feed paper from the printer.

② **Ten key pad** [0], [1], ~ [9], [00], [·]
Use these keys to input numbers.

③ **Clear key** [C]
Use this key to clear an entry that has not yet been registered.

④ **Cash amount tendered key** [CA/AMT TEND]
Use this key to register a cash sale.

⑤ **Check key** [CHK]
Use this key to register a check tender.

⑥ **Subtotal key** [SUB TOTAL]
Use this key to display and print the current subtotal (includes add-on tax) amount.

⑦ **Help key** [HELP]
Use this key to look up the procedures to set date/time, tax table etc.

⑧ **Tax program key** [TAX PGM]
Use this key to set the tax status and tax table.

⑨ **Clerk number key** [CLK#]
Use this key to sign clerk on and off the register.

⑩ **Sign off key** [SIGN OFF]
Use this key to sign clerk off the register.

⑪ **Received on account key** [RC]
Use this key following a numeric entry to register money received for non-sale transactions.

⑫ **Paid out key** [PD]
Use this key following a numeric entry to register money paid out from the drawer.

⑬ **Reduction (minus) key** [—]
Use this key to input values for reduction.

⑭ **Discount key** [%–]
Use this key to register discounts.

⑮ **Receipt on/off key** [RECEIPT ON/OFF]
Use this key twice to change the status “receipt issue” or “no receipt.”

⑯ **Price key** [PRICE]
Use this key to register unit prices for subdepartment.

⑰ **PLU/Subdepartment key** [PLU/ S.DEPT]
Use this key to input PLU (subdepartment) numbers.

⑱ **Refund key** [RF]
Use this key to input refund amounts and void certain entries.

⑲ **Multiplication/For/Date/Time key** [× / FOR / DATE TIME]
Use this key to input a quantity for a multiplication and registration of split sales of packaged items. Between transactions, this key displays the current time and date.

⑳ **Error correct / Cancel key** [ERR.CORR. CANCEL]
Use this key to correct registration errors and to cancel registration of entire transactions.

㉑ **Guest / Post receipt key** [GUEST/ POST RECEIPT]
Use this key to produce a guest or post-finalization receipt.

㉒ **Department keys** [1], [2], ~
Use these keys to register items to departments.

㉓ **Menu shift key** [MENU SHIFT]
Use this key to shift flat PLU keys to 1st ~ 3rd menu.

㉔ **Merchandise subtotal key** [MD/ST]
Use this key to display and print the current subtotal (excludes add-on tax) amount.

㉕ **New balance key** [NB]
Use this key for adding the latest registered total amount to the previous balance to obtain a new balance.

㉖ **New check key** [NEW]
Use this key in a check tracking system to input a new check number in order to open a new check under that number.

㉗ **Old check key** [OLD]
Use this key in a check tracking system to input the number of an existing check (previously created by the new check key) whose details are stored in the check tracking memory.

㉘ **Non-add key** [#]
Use this key to print reference number (to identify a personal check, credit card, etc.) during a transaction, use this key after some numerical entries.

㉙ **No sale key** [NS]
Use this key to open the drawer without registering anything.

㉚ **Tax shift 1 key** [T/S1]
Use this key without a numeric entry to change the Taxable 1 status of the next item.

㉛ **Tax shift 2 key** [T/S2]
Use this key without a numeric entry to change the Taxable 2 status of the next item.

Allocatable functions

You can tailor a keyboard to suit your particular type of business.

Add check
Use this key in a check tracking system to combine the details of more than one check into a single check.

Addition (plus)
Use this key for registering surcharge.

Age verification
Use this key to enter tge birthdate of the customer for age verification.

Arrangement
Use this key to activate an arrangement program programmed in the arrangement file. Any operation that can be performed from the keyboard, as well as mode, can be programmed in an arrangement program, and can be performed merely by pressing this key. In addition, one numeric entry can be included in an arrangement program. In this case, input the number and press this key.
The mode control function of this key can be programmed for all modes except for the OFF and PGM mode.

Cash amount tendered
Use this key to register a cash sale.

Charge
Use this key to register a charge sale.

Check tendered
Use this key to register a check tender.

Clerk number
Use this key to sign clerk on and off the register.

Coupon
Use this key to register coupons.

Credit
Use this key to register a credit sale.

Currency exchange
Use this key for calculating subtotal amounts or paying amount due in foreign currency.

Customer number
Use this key to register the number of customers.

Department
Use these keys to register items to departments.

Department no. / Department shift
Department no.: Use this key to input department numbers.
Department shift: Use this key to shift the department key number.

Discount
Use this key to register discounts.

Enter
In an arrangement program, this key is used to insert numbers entered before registering the arrangement.

Error correct / Cancel
Use this key to correct registration errors and to cancel registration of entire transactions.

Flat-PLU
Use this key to register items to flat-PLUs.

Help
Use this key to look up the procedures to set date/time, tax table etc.

Manual tax
Use this key to register a tax amount.

Menu shift
Use this key to shift flat PLU keys to 1st ~ 3rd menu.

Merchandise subtotal
Use this key to obtain subtotal excluding the add-on tax amount and the previous balance.

Multiplication
Use this key to input a quantity for a multiplication operation. Between transactions, this key displays the current time and date.

New balance
Use this key for adding the latest registered total amount to the previous balance to obtain a new balance.

New check
Use this key in a check tracking system to input a new check number in order to open a new check under that number.

New / Old check
Use this key in a check tracking system to input check numbers in order to open new checks and to reopen existing checks. When the clerk inputs a check number, the register checks to see if that number already exists in the check tracking memory. If there is no matching number in the memory, a new check is opened under the input number. If the check number input matches a number already stored in the memory, that check is reopened for further registration or finalization.

No sale
Use this key to open the drawer between transaction.

Non-add
Use this key to print reference numbers (personal check number, card number, etc.)

Non-add / No sale
Non-add: Use this key to print reference number (to identify a personal check, credit card, etc.) during a transaction, use this key after some numerical entries.
No sale: Use this key to open the drawer without registering anything.

Old check
Use this key in a check tracking system to input the number of an existing check (previously created by the New check key) whose details are stored in the check tracking memory. Existing checks are reopened to perform further registration or to finalize them.

Open
Use this key to temporarily release a limitation on the number of digits that can be input for a unit price.

Paid out
Use this key following a numeric entry to register money paid out from the drawer.

PLU/Subdepartment
Use this key to input PLU (subdepartment) numbers.

Premium
Use this key to register premiums.

Price
Use this key to register unit prices for PLU (subdepartment).

Multiplication / For
Use this key to input a quantity for a multiplication operation and registration of split sales of packaged items. Between transactions, this key displays the current time and date.

Post receipt
Use this key to produce a guest or post-finalization receipt.

Receipt on/off
Use this key twice to change the status “receipt issue” or “no receipt.”

Received on account
Use this key following a numeric entry to register money received for non-sale transactions.

Reduction (minus)
Use this key to input values for reduction.

Refund
Use this key to input refund amounts and void certain entries.

Sign off
Use this key to sign clerk off the register.

Subtotal
Use this key to display and print the current subtotal (includes add-on tax) amount.

Tax status shift 1
Use this key to change the Taxable 1 status of the next item.

Tax status shift 2
Use this key to change the Taxable 2 status of the next item.

Tax program
Use this key to program tax status and tax table easily.

Text recall
Use this key to print presett characters.

Tip
Use this key to register tips.

VAT
Use this key to print a VAT breakdown.

Void
Use this key to invalidate preceding item data registered.

How to read the printouts

- The journal / receipts are records of all transactions and operations.
- The contents printed on receipts and journal are almost identical.
- You can choose the journal skip function.
  If the journal skip function is selected, the cash register will print the total amount of each transaction, and the details of premium, discount and reduction operations only, without printing department and PLU item registrations on the journal.
- The following items can be skipped on receipts and journal.
  - Taxable status
  - Taxable amount
  - Item counter

Receipt Sample

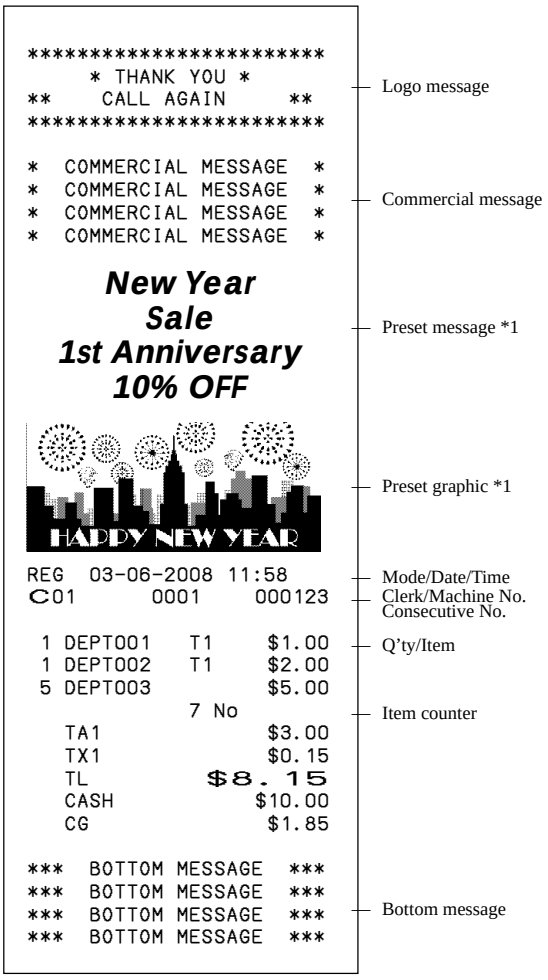

Journal Sample (Item lines Included)

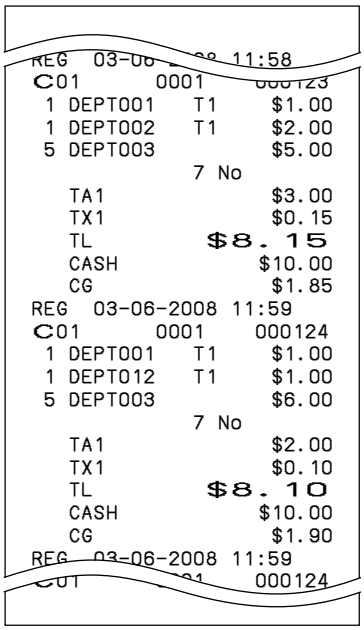

Journal Sample (by half height character)

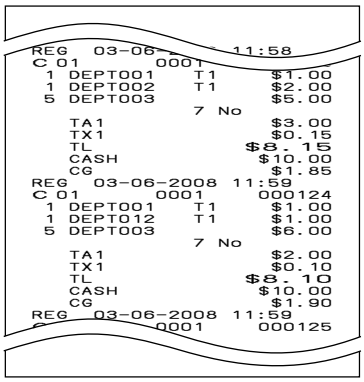

*1 You can choose to print preset message and graphic at the top of the receipt or at the bottom of the receipt.

In the operation examples contained in this manual, the print samples are what would be produced if the roll paper is being used for receipts. They are not actual size. Actual receipts are 58 mm wide. Also, all sample receipts and journals are printout images.

How to use your cash register

The following describes the general procedure you should use in order to get the most out of your cash register.

BEFORE business hours…

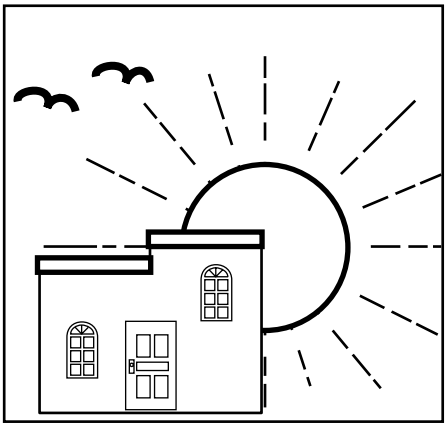

- Check to make sure that the cash register is plugged in securely. Page 13
- Check to make sure there is enough paper left on the roll. Pages 11, 12
- Read the flash report to confirm that totals are all zero. Page 88
- Check the date and time. Page 30

DURING business hours…

- Register transactions. Page 31 -
- Periodically read totals. Page 88

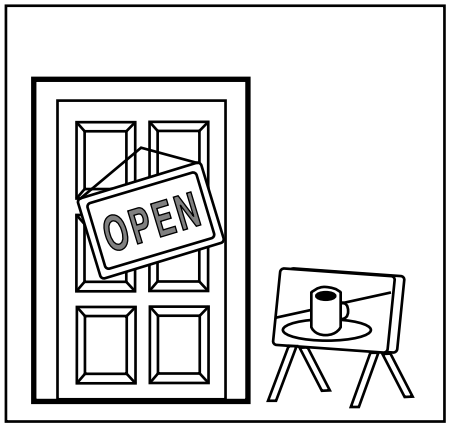

AFTER business hours…

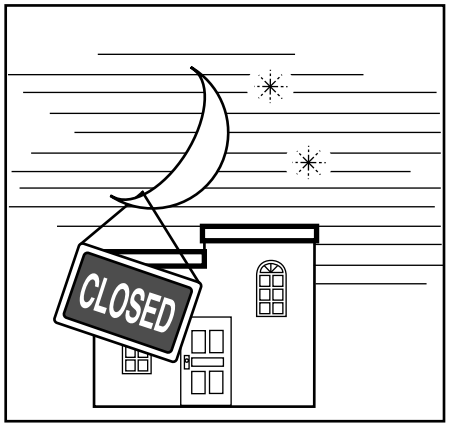

- Issue electronic journal report (if necessary). Page 89
- Reset the daily totals. Page 47, 89
- Remove the journal. Page 104
- Empty the cash drawer and leave it open. Page 20
- Take the cash and journal to the office.

Before business hours

Checking the time and date

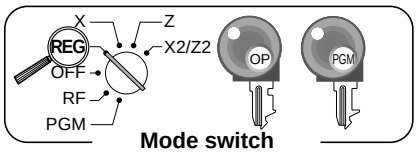

Mode switch

You can show the time or date on the display of the cash register whenever there is no registration being made.

To display and clear the date/time

OPERATION	DISPLAY
[×/FOR /DATE TIME]	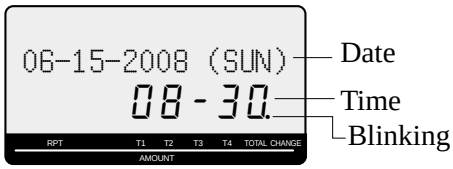
Date/time appears on the display.	
[C]	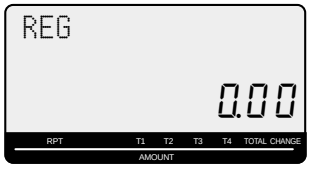
Clears the date/time display.	

Preparing coins for change

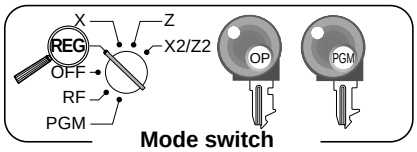

Mode switch

You can use the following procedure to open the drawer without registering an item. This operation must be performed out of a sale.
(You can use the [RC] key instead of this key. See page 43.)

Opening the drawer without a sale

OPERATION	RECEIPT
[NS]	

Preparing and using department keys

Registering department keys

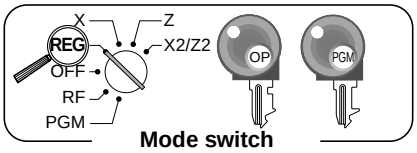

Mode switch

The following examples show how you can use the department keys in various types of registrations.

Single item sale

Example 1

Item	Unit price	$1.00
	Quantity	1
	Dept.	1
Payment	Cash	$1.00

OPERATION

1 00
Unit price

1
Department

CA/AMT TEND

RECEIPT

```
1 DEPT001          $1.00
  TL               $1.00
  CASH             $1.00
```

Department No./ unit price
Total amount

Example 2 (Subtotal registration and change computation)

Item	Unit price	$12.34
	Quantity	1
	Dept.	1
Payment	Cash	$20.00

OPERATION

1 2 3 4
Unit price

1
Department

SUB TOTAL

2 0 00 CA/AMT TEND
Amount tendered

RECEIPT

```
1 DEPT001          $12.34
  TL               $12.34
  CASH             $20.00
  CG                $7.66
```

Total amount
Amount tendered
Change

Repeat

Item	Unit price	$1.50
	Quantity	3
	Dept.	1
Payment	Cash	$10.00

OPERATION

1 5 0 1
1
1
SUB TOTAL
1 0 00 CA/AMT TEND

RECEIPT

```
1 DEPT001          $1.50
1 DEPT001          $1.50
1 DEPT001          $1.50
  TL               $4.50
  CASH            $10.00
  CG               $5.50
```

Repeat
Repeat

Multiplication

Item	Unit price	$1.00
	Quantity	12
	Dept.	1
Payment	Cash	$20.00

OPERATION

1 2 [×/FOR DATE TIME]
Quantity
(4-digit integer/3-digit decimal)
1 00 [1]
[SUB TOTAL]
2 0 00 [CA/AMT TEND]

RECEIPT

```
12 DEPT001          $12.00
   TL            $12.00
   CASH             $20.00
   CG                $8.00
```

Quantity/result

Split sales of packaged items

Item	Unit price	4 for $10.00
	Quantity	3
	Dept.	1
	Taxable	No
Payment	Cash	$10.00

OPERATION

3 [×/FOR DATE TIME]
Quantity being purchased
(4-digit integer/3-digit decimal)
4 [×/FOR DATE TIME]
Package quantity
(4-digit integer/3-digit decimal)
1 0 00 [1]
Package price [SUB TOTAL]
1 0 00 [CA/AMT TEND]

RECEIPT

```
3 DEPT001           $7.50
   TL             $7.50
   CASH             $10.00
   CG                $2.50
```

Quantity/result

Department shift

Item	Unit price	$1.00
	Quantity	1
	Dept.	73
Payment	Cash	$1.00

OPERATION

[DEPT# DEPT SHIFT] 1 00 [1]
Designating upper department
press [DEPT# DEPT SHIFT] first.
(-2- shows).
[CA/AMT TEND]

RECEIPT

```
1 DEPT073           $1.00
   TL             $1.00
   CASH              $1.00
```

Department number

Item	Unit price	$13.00
	Quantity	1
	Dept.	31
Payment	Cash	$13.00

OPERATION

3 1 [DEPT# DEPT SHIFT]
Department No.
1 3 00 [PRICE]
Unit price
[CA/AMT TEND]

RECEIPT

```
1 DEPT031          $13.00
   TL            $13.00
   CASH             $13.00
```

- If [DEPT# DEPT SHIFT] is not allocated on the keyboard, key allocation is necessary.

Programming department keys

To program a unit price for each department

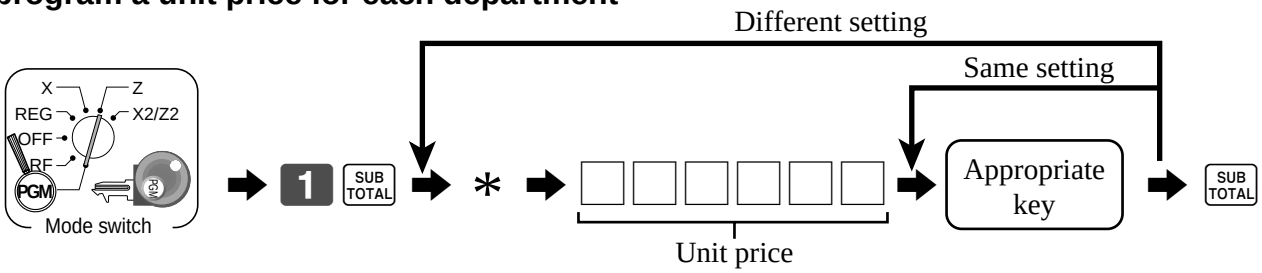

* In case of shifting upper department, press DEPT# DEPT SHIFT key here.

To program the tax calculation status for each department

Tax calculation status

This specification defines which tax table should be used for automatic tax calculation.

Programming procedure

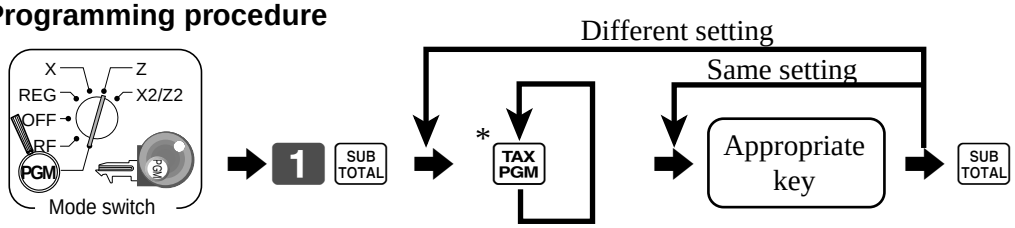

* Press TAX PGM key repeatedly until the status you want to program is appeared on the display.

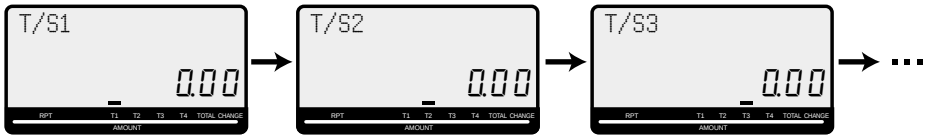

Appropriate key: In case of shifting department, press DEPT# DEPT SHIFT key first.

To program high amount limit for each department

Programming procedure

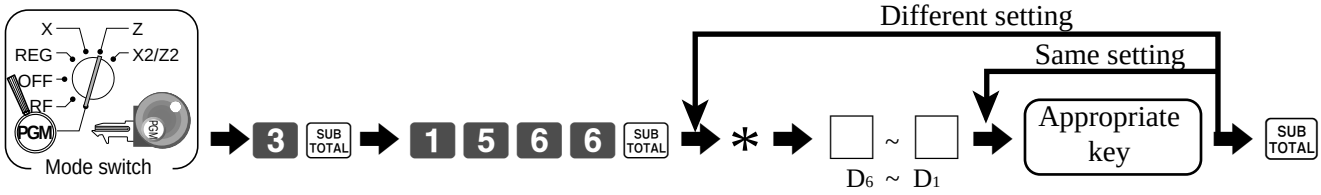

* In case of shifting upper department, press DEPT# DEPT SHIFT key here.

Description	Choice	Program code
High amount limit for entering unit price manually.	Significant numbers	☐ ~ ☐ D_6~D_1

- If DEPT# DEPT SHIFT is not allocated on the keyboard, key allocation is necessary.

Registering department keys by programming data

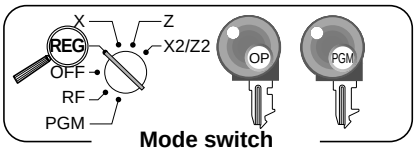

Mode switch

Preset price

Item	Unit price	($1.00)$_{preset}$
	Quantity	1
	Dept.	2
Payment	Cash	$1.00

OPERATION

2

CA/AMT TEND

RECEIPT

```
1 DEPT002          $1.00
  TL             $1.00
  CASH             $1.00
```

Department No./ unit price

Preset tax status

Item 1	Unit price	($2.00)$_{preset}$
	Quantity	5
	Dept.	3
	Taxable	(1)$_{preset}$
Item 2	Unit price	($2.00)$_{preset}$
	Quantity	1
	Dept.	4
	Taxable	(2)$_{preset}$
Payment	Cash	$20.00

OPERATION

5 × / FOR DATE TIME

3

4

SUB TOTAL

2 0 00 CA/AMT TEND

RECEIPT

```
                  T1
5 DEPT003         T2
1 DEPT004
  TA1
  TX1
  TA2
  TX2
  TL
  CASH
  CG
```

Tax status

```
$10.00
$2.00
$10.00
$0.40
$2.00
$0.20
$12.60
$20.00
$7.40
```

Taxable Amount 1
Tax 1
Taxable Amount 2
Tax 2

Locking out high amount limitation

Item	Unit price	$1.05
	Quantity	1
	Dept.	3
	Max.amount	($10.00)$_{preset}$
Payment	Cash	$2.00

OPERATION

1 0 5 0 3

ERROR ALARM
(Exceeding high amount)

C

1 0 5 3

SUB TOTAL

2 00 CA/AMT TEND

RECEIPT

```
1 DEPT003          $1.05
  TL             $1.05
  CASH             $2.00
  CG               $0.95
```

Preparing and using PLUs

This section describes how to prepare and use PLUs.

CAUTION:

Before you use PLUs, you must first program the unit price and tax status.

Programming PLUs

To program a unit price for each PLU

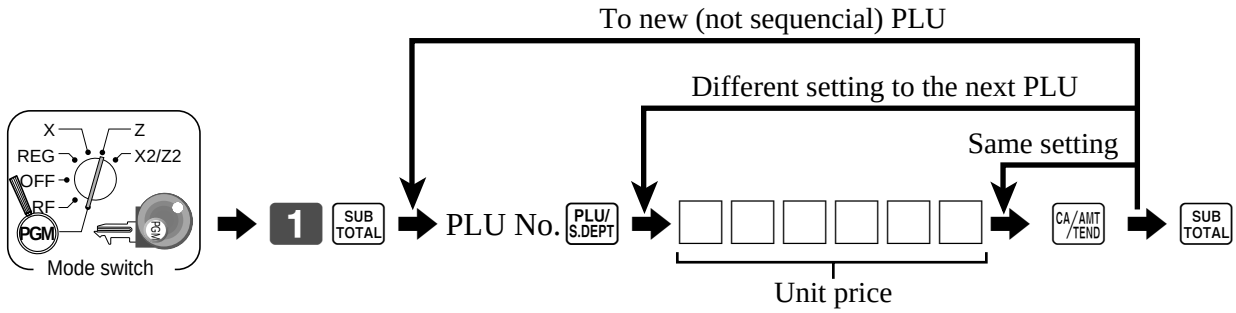

To program tax calculation status for each PLU

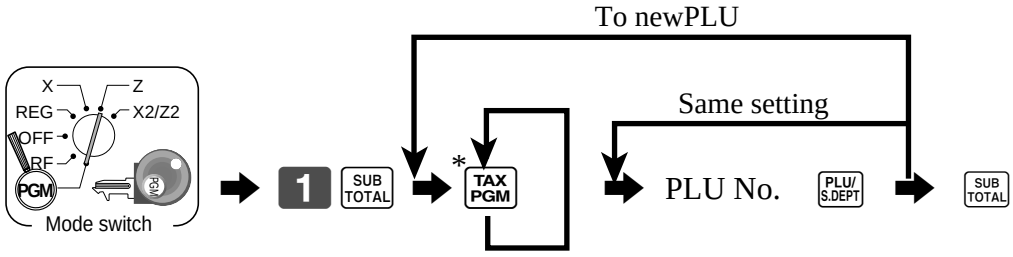

* Press TAX PGM key repeatedly until the status you want to program is appeared on the display.

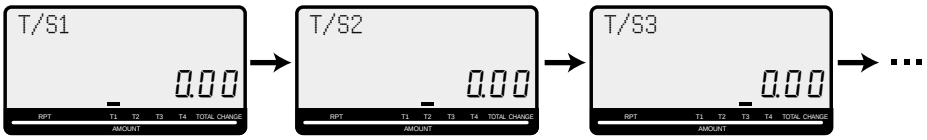

Registering PLUs

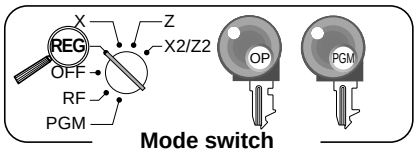

The following examples show how you can use PLUs in various types of registrations.

PLU single item sale

Item	Unit price	($2.50)$_{preset}$
	Quantity	1
	PLU	14
Payment	Cash	$3.00

OPERATION

1 4
PLU code
PLU/S.DEPT
SUB TOTAL
3 00 CA/AMT TEND

RECEIPT

```
1 PLU0014          $2.50   — PLU No./unit price
  TL               $2.50
  CASH             $3.00
  CG               $0.50
```

PLU repeat

Item	Unit price	($2.50)$_{preset}$
	Quantity	3
	PLU	14
Payment	Cash	$10.00

OPERATION

1 4 PLU/S.DEPT
PLU/S.DEPT
PLU/S.DEPT
SUB TOTAL
1 0 00 CA/AMT TEND

RECEIPT

```
1 PLU0014          $2.50
1 PLU0014          $2.50
1 PLU0014          $2.50
  TL               $7.50
  CASH            $10.00
  CG               $2.50
```

PLU multiplication

Item	Unit price	($2.00)$_{preset}$
	Quantity	10
	PLU	7
Payment	Cash	$20.00

OPERATION

1 0 ×/FOR/DATE TIME
Quantity
(4-digit integer/3-digit decimal)
7 PLU/S.DEPT
SUB TOTAL
2 0 00 CA/AMT TEND

RECEIPT

```
10 PLU0007         $20.00   — Quantity/result
  TL               $20.00
  CASH             $20.00
  CG                $0.00
```

Split sales of packaged item

Item	Unit price	(5for$20.00)$_{preset}$
	Quantity	3
	PLU	28
Payment	Cash	$15.00

OPERATION

3 [×/FOR/DATE/TIME]
Quantity being purchased
(4-digit integer/3-digit decimal)
5 [×/FOR/DATE/TIME]
Package quantity
(4-digit integer/3-digit decimal)
2 8 [PLU/S.DEPT]
[SUB TOTAL]
1 5 00 [CA/AMT/TEND]

RECEIPT

```
3 PLU0028          $12.00
 TL              $12.00
 CASH               $15.00
 CG                  $3.00
```

Quantity/result

Open PLU

Item 1	Unit price	$32.80
	Quantity	1
	PLU	30
Item 2	Unit price	$13.00
	Quantity	2
	PLU	31
Payment	Cash	$60.00

OPERATION

3 0 [PLU/S.DEPT]
3 2 8 0 [PRICE]
Unit price

3 1 [PLU/S.DEPT]
1 3 00 [PRICE]
Repeat
[PRICE]

[SUB TOTAL]
6 0 00 [CA/AMT/TEND]

RECEIPT

```
1 PLU0030          $32.80
1 PLU0031          $13.00
1 PLU0031          $13.00
  TL            $58.80
  CASH               $60.00
  CG                  $1.20
```

- Before registering an open PLU, it is necessary to preset it as an open PLU.

Preparing and using discounts

This section describes how to prepare and register discounts.

Programming discounts

To program a rate to the [%−] key

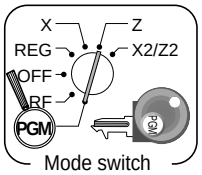

➡ 1 [SUB TOTAL] ➡ □□□□ ➡ [%−] ➡ [SUB TOTAL]

Preset rate

Example: 10.0% ⇨ 1 0 5.5% ⇨ 5 · 5

12.34% ⇨ 1 2 · 3 4

To program the tax calculation status to the [%−] key

Refer to page 33.

Registering discounts

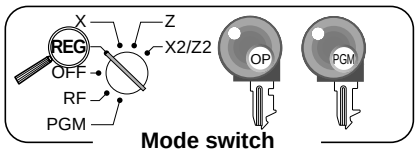

The following example shows how you can use the [%−] key in various types of registration.

Discount for items and subtotals

Item 1	Dept. 1	$5.00
	Quantity	1
	Taxable	$(1)_{preset}$
Item 2	PLU 16	$(\$10.00)_{preset}$
	Quantity	1
	Taxable	$(2)_{preset}$
Discount	Rate	$(5\%)_{preset}$
Subtotal discount	Rate	3.5%
	Taxable	Nontaxable
Payment	Cash	$15.00

OPERATION

5 00 [1]

1 6 [PLU/S.DEPT]

[%−]

Applies the preset discount rate to the last item registered.

[SUB TOTAL]

3 · 5 [%−]

The input value takes priority of the preset value.

[SUB TOTAL]

1 5 00 [CA/AMT TEND]

RECEIPT

```
1 DEPT001    T1      $5.00
1 PLU0016    T2     $10.00
  5%
%-           T2      -0.50
ST                   $14.50
  3.5%
%-                    -0.51
TA1                  $5.00
TX1                  $0.20
TA2                  $9.50
TX2                  $0.48
TL                 $14.67
CASH                 $15.00
CG                    $0.33
```

- You can manually input rates up to 4 digits long (0.01% to 99.99%).

Taxable status of the [%−] key

- Whenever you perform a discount operation on the last item registered, the tax calculation for discount amount is performed in accordance with the tax status programmed for that item.
- Whenever you perform a discount operation on a subtotal amount, the tax calculation for the subtotal amount is performed in accordance with the tax status programmed for the [%−] key.

Preparing and using reductions

This section describes how to prepare and register reductions.

Programming for reductions

You can use the [−] key to reduce single item or subtotal amounts.

To program preset reduction amount

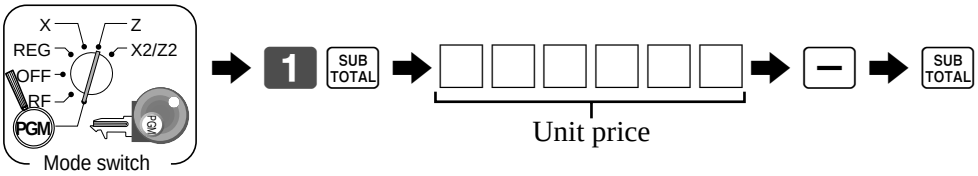

To program the tax calculation status to the [−] key

Refer to page 33.

Registering reductions

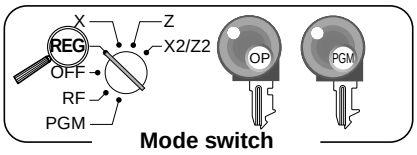

The following examples show how you can use the [−] key in various types of registration.

Reduction for items and subtotal

Item 1	Dept. 1	$5.00
	Quantity	1
	Taxable	$(1)_{preset}$
Reduction	Amount	$0.25
Item 2	PLU 45	$($6.00)_{preset}$
	Quantity	1
	Taxable	$(1)_{preset}$
Reduction	Amount	$($0.50)_{preset}$
Subtotal Reduction	Amount	$0.75
	Taxable	$(No)_{preset}$
Payment	Cash	$10.00

OPERATION

5 00 1

2 5 −

Reduces the last amount registered by the value input.

4 5 PLU/S.DEPT

−

SUB TOTAL

7 5 −

1 0 00 CA/AMT TEND

RECEIPT

```
1 DEPT001    T1      $5.00
  -          T1      -0.25
1 PLU0045    T1      $6.00
  -          T1      -0.50
  -                  -0.75
  TA1               $10.25
  TX1                $0.41
  TL                 $9.91
  CASH              $10.00
  CG                 $0.09
```

- You can manually input reduction values up to 7 digits long.
- If you want to subtract the reduction amount from the department or PLU totalizer, program “Net totaling.”

Registering credit and check payments

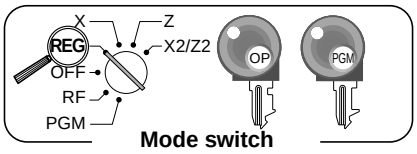

Mode switch

The following examples show how to register credits and payments by check.

Check

Item	Dept. 1	$11.00
	Quantity	1
Reference	Number	1234
Payment	Check	$20.00

OPERATION

1 1 00 [1] [SUB TOTAL]
1 2 3 4 [#]
2 0 00 [CHK]

RECEIPT

```
1 DEPT001          $11.00
NS                   1234   — Reference No.
  TL            $11.00
  CHECK            $20.00
  CG                $9.00
```

Charge

Item	Dept. 4	$15.00
	Quantity	1
Payment	Charge	$15.00

OPERATION

1 5 00 [4] [SUB TOTAL]
[CH]

RECEIPT

```
1 DEPT004          $15.00
  TL            $15.00
  CHARGE           $15.00
```

- If [CH] is not allocated on the keyboard, key allocation is necessary.

Credit

Item	Dept. 3	$10.00
	Quantity	1
Payment	Credit	$10.00

OPERATION

1 0 00 [3] [SUB TOTAL]
[CR]

RECEIPT

```
1 DEPT003          $10.00
  TL            $10.00
  CREDIT           $10.00
```

- If [CR] is not allocated on the keyboard, key allocation is necessary.

Mixed tender (cash and check)

Item	Dept. 4	$55.00
	Quantity	1
Payment	Check	$30.00
	Cash	$25.00

OPERATION

5 5 00 [4] [SUB TOTAL]
3 0 00 [CHK]
2 5 00 [CA/AMT TEND]

RECEIPT

```
1 DEPT004          $55.00
  TL            $55.00
  CHECK            $30.00
  CASH             $25.00
  CG                $0.00
```

Shifting the taxable status of an item

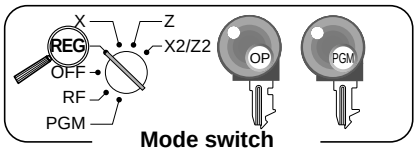

By pressing "Tax Shift" key, you can shift the taxable status of an item.

Calculation merchandise subtotal

Item 1	Dept. 1	$4.00
	Quantity	1
	Taxable	$(2)_{preset}$
Item 2	Dept. 2	$2.00
	Quantity	1
	Taxable	(No)→1
Item 3	Dept. 3	$6.00
	Quantity	1
	Taxable	(1)→1, 2
Item 4	Dept. 4	$7.00
	Quantity	1
	Taxable	(2)→No
Payment	Cash	$20.00

OPERATION	DISPLAY
4 00 1	4.00
T/S1	
2 00 2	2.00
Pressing T/S1 changes the tax status from Nontaxable to Taxable 1	
T/S2	
6 00 3	6.00
Pressing T/S2 changes the tax status from Taxable 1 to Taxable 1, 2	
T/S2	
7 00 4	7.00
Pressing T/S2 changes the tax status from Taxable 2 to Nontaxable	
MD/ST	19.00
SUB TOTAL	19.82
2 0 00 CA/AMT TEND	

OPERATION	RECEIPT

```
1 DEPT001    T2      $4.00
1 DEPT002    T1      $2.00
1 DEPT003    T12     $6.00
1 DEPT004            $7.00
  TA1                $8.00
  TX1                $0.32
  TA2               $10.00
  TX2                $0.50
  TL              $19.82
  CASH              $20.00
  CG                 $0.18
```

Important!

- To change the tax status of the next item to be registered, be sure to press T/S1, T/S2.
  If the last item registered is programmed as nontaxable, a discount (%− key) operation on this item is always nontaxable.
  In this case, you cannot manually change the tax status to Taxable 1 or 2 by pressing the T/S1, T/S2 keys.
- For a partial tender operation, you should press the SUB TOTAL key instead of the MD/ST key.

Registering returned goods in the REG mode

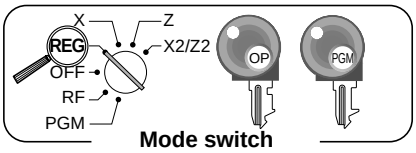

Mode switch

The following example shows how to use the RF key in the REG mode to register goods returned by customers.

Item 1	Dept. 1	$2.35
	Quantity	1
Item 2	Dept. 2	$2.00
	Quantity	1
Item 3	PLU 1	($1.20)$_{preset}$
	Quantity	1
Returned Item 1	Dept. 1	$2.35
	Quantity	1
Returned Item 3	PLU 1	($1.20)$_{preset}$
	Quantity	1
Payment	Cash	$2.00

OPERATION

2 3 5 1
2 00 2
1 PLU/S.DEPT
RF
2 3 5 1

Press RF before the item you want to return.

RF
1 PLU/S.DEPT
SUB TOTAL
CA/AMT TEND

RECEIPT

```
1 DEPT001          $2.35
1 DEPT002          $2.00
1 PLU0001          $1.20
  RF               ******
1 DEPT001          -2.35
  RF               ******
1 PLU0001          -1.20
  TL               $2.00
  CASH               $2.00
```

Registering returned goods in the RF mode

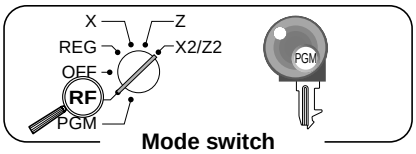

Mode switch

The following examples show how to use the RF mode to register goods returned by customers.

Returned Item 1	Dept. 3	$4.00
	Quantity	1
Reduction	Amount	$0.15
Returned Item 2	PLU 2	($1.20)$_{preset}$
	Quantity	1
Discount	Rate	(5%)$_{preset}$
Payment	Cash	$4.99

OPERATION

4 00 3
1 5 —
2 PLU/S.DEPT
%–
SUB TOTAL
CA/AMT TEND

RECEIPT

```
1 DEPT003          $4.00
  -                -0.15
1 PLU0002          $1.20
  5%
  %-               -0.06
  TL               $4.99
  CASH               $4.99
```

Important

•To avoid miss registrations in the RF mode, return the mode switch to the former position immediately.

Registering money received on account

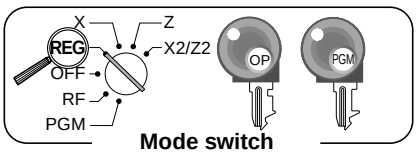

Mode switch

The following example shows how to register money received on account. This registration must be performed out of a sale.

Received amount	$700.00

OPERATION

7 00 00 RC

Amount can be up to 8 digits.

RECEIPT

```
RC                $700.00
```

Registering money paid out

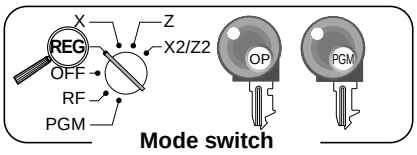

Mode switch

The following example shows how to register money paid out from the register. This registration must be performed out of a sale.

Paid out amount	$1.50

OPERATION

1 5 0 PD

Amount can be up to 8 digits.

RECEIPT

```
PD                $1.50
```

No sale registration

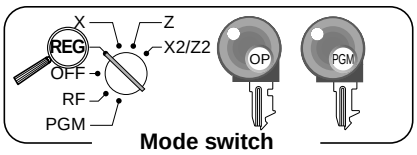

Mode switch

You can use the following procedure to open the drawer without registering a sale. This operation must be performed out of a sale.

OPERATION

NS

RECEIPT

```
NS                .........
```

Making corrections in a registration

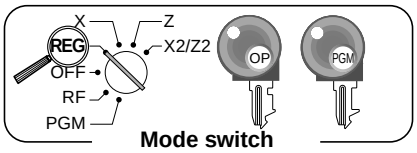

Mode switch

There are three techniques you can use to make corrections in a registration.
$To correct an item that you input but not yet registered.
$To correct the last item you input and registered.
$To cancel all items in a transaction.

To correct an item you input but not yet registered

OPERATION **RECEIPT**

2 00
C
1 00 1
1 2 ×/FOR DATE TIME
— Correction of unit price

C
1 1 ×/FOR DATE TIME
2 00 2
— Correction of quantity

2
C
3 PLU/S.DEPT
— Correction of PLU No.

1 5 PLU

6 00
C
1 5 PLU/S.DEPT
Enter PLU No. again.
1 0 00 PRICE
— Correction of open PLU unit price

SUB TOTAL

1 0 00
C
1 5 00 CA/AMT TEND
— Correction of partial tender amount

CH

```
 1 DEPT001          $1.00
11 DEPT002         $22.00
 1 PLU0003          $1.30
 1 PLU0015         $10.00
   TL              $34.30
   CASH            $15.00
   CHARGE          $19.30
```

To correct an item you input and registered

OPERATION **RECEIPT**

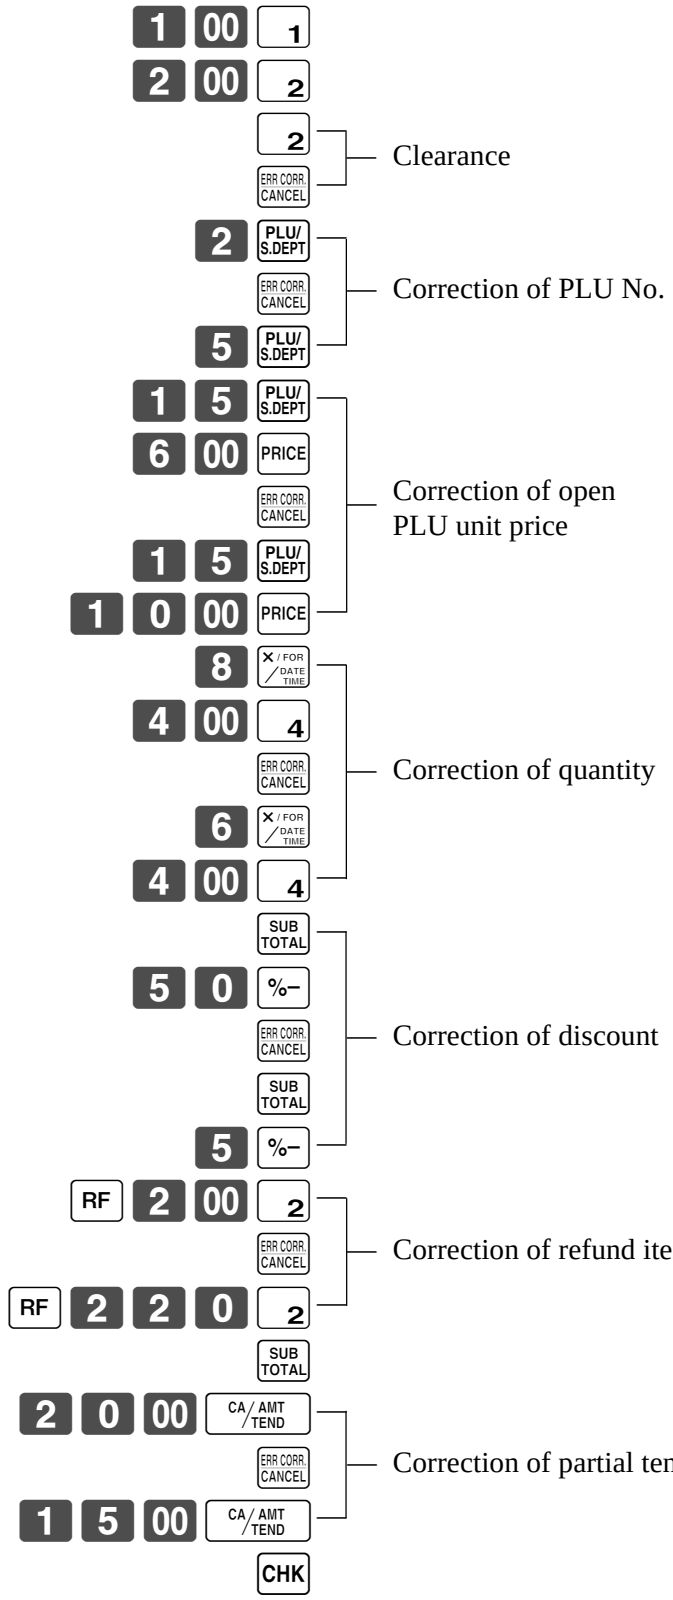


```
 1 DEPT001          $1.00
 1 DEPT002          $2.00
 1 DEPT002          $2.00
   CORR             -2.00
 1 PLU0002          $2.00
   CORR             -2.00
 1 PLU0005          $1.50
 1 PLU0015          $6.00
   CORR             -6.00
 1 PLU0015         $10.00
 8 DEPT004         $32.00
   CORR            -32.00
 6 DEPT004         $24.00
   ST              $38.50
   50%
   %-              -19.25
   CORR            $19.25
   ST              $38.50
    5%
   %-               -1.93
   RF              ......
 1 DEPT             -2.00
   CORR             $2.00
   RF              ......
 1 DEPT002          -2.20
   TL             $34.37
   CASH            $20.00
   CORR            -20.00
   CASH            $15.00
   CHECK           $19.37
```

Corrected items are not printed on receipt (in case of programming "Buffered receipt printing").

To cancel all items in a transaction

OPERATION	RECEIPT
1 00 1 2 00 2 3 00 3 4 00 4 SUB TOTAL Pressing SUB TOTAL key is necessary to cancel the transaction. ERR CORR. CANCEL	1 DEPT001 $1.00 1 DEPT002 $2.00 1 DEPT003 $3.00 1 DEPT004 $4.00 CANCEL .....

Printing the daily sales reset report

This report shows daily sales totals.

OPERATION **REPORT**

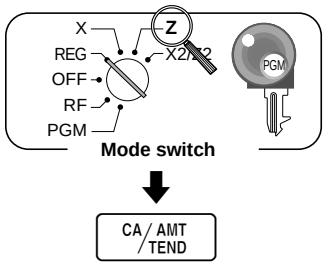


```
Z     03-06-2008 17:00          ← Date/time
        0001      000231        ← Machine No./consecutive No.
------------------------
Z     DAILY Z                   ← Report title
------------------------
Z     DEPT             0001     ← Department report title/reset counter
                     0001015    ← Report code

DEPT001               203.25
                    $1,108.54   ← Department count/amount *1
DEPT002               183
                    $1,362.26
                        5
------------------------
TL                    421.25
                    $2,872.28   ← Department total count/total amount
------------------------
Z     FIX              0001     ← Fixed total report title/reset counter
                     0001011    ← Report code

GROSS                 981.25
                    $6,574.40   ← Gross total *2
NET              No   111
                    $7,057.14   ← Net total *2
CAID                $1,919.04   ← Cash in drawer *2
CHID                  $139.04   ← Charge in drawer *2
CKID                  $859.85   ← Check in drawer *2
CRID(1)               $709.85   ← Credit in drawer 1 *2
CRID(2)                 $0.00   ← Credit in drawer 2 *2
CRID(3)                 $0.00   ← Credit in drawer 3 *2
CRID(4)                 $0.00   ← Credit in drawer 4 *2
------------------------
RF               No     3
                       $10.22   ← Refund mode *2
CUST             CT   111       ← Number of customer *2
AVRG                   $63.57   ← Average sales per customer *2
DC                      $1.22   ← Discount total *2
REF                     $2.42   ← Refund key *2
ROUND                   $0.00   ← Rounding total *2
CANCEL           No     2
                       $12.97   ← Cancellation *2
------------------------
```

```
TA1                 $2,369.69   ← Taxable 1 amount *2
TX1                   $128.86   ← Tax 1 amount *2
TA2                 $2,172.96   ← Taxable 2 amount *2
TX2                   $217.33   ← Tax 2 amount *2
------------------------
GT     $00000000125478.96       ← Grand total *2
------------------------
Z     TRANS            0001     ← Function key report title/reset counter
                     0001012    ← Report code
CASH             No   362
                    $1,638.04   ← Function key count/amount *1
CHARGE           No    56
                    $1,174.85
RC               No     4
                      $810.00
PD               No     5
                      $520.00
                        $5.00
CORR             No    14
                       $39.55
RCT              No     3
NS                      5
------------------------
```

*1 Zero totalled departments/functions (the amount and item numbers are both zero) are not printed.

*2 These items can be skipped by programming.

Using clerk functions

Enable clerk feature

Please follow the below procedure to enable clerk feature.

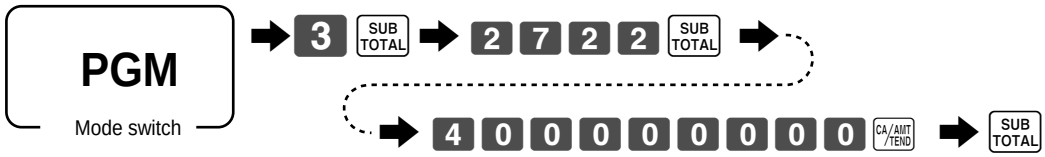

Assigning a clerk

You can assign clerks by using clerk number.

Clerk number key

Clerk sign on

	OPERATION	RECEIPT
Signing clerk 1 on:	1 → CLK#	
Signing clerk 2 on:	2 → CLK#	
Clerk number : :		

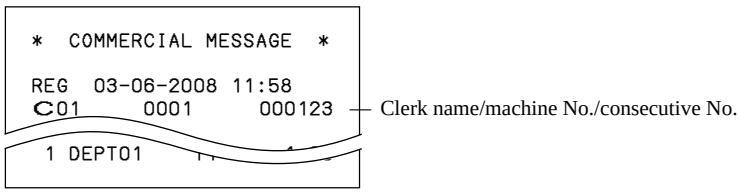

- If you do not want the clerk number to be shown on the display, press CLK# before entering the number.

Clerk sign off

	OPERATION
Signing clerk off: (except PGM mode)	SIGN OFF

- The current clerk is also signed off whenever you set the mode switch to OFF position.

Important!

- The error code “E008” appears on the display whenever you try to perform a registration, a read/reset operation without signing on.
- The signed on clerk is also identified on the receipt/journal.

Single item cash sales

A department key or PLU programmed with single item sale status finalizes the transaction as soon as it is registered.
The single item sales function can only be used for cash sales.

Example 1

Item	Dept. 1	$1.00
	Quantity	1
	Status	S.I.S
Payment	Cash	$1.00

OPERATION

1 00 1

The transaction is immediately finalized.

RECEIPT

```
1 DEPT001          $1.00   — Department No./ unit price
  TL             $1.00
  CASH             $1.00   — Cash total amount
```

Example 2

Item	Dept. 1	($1.00)
	Quantity	3
	Status	S.I.S
Payment	Cash	$3.00

OPERATION

3 × / FOR / DATE TIME

1

The transaction is immediately finalized.

RECEIPT

```
3 DEPT001          $3.00
  TL             $3.00
  CASH             $3.00
```

Example 3

Item 1	Dept. 3	$2.00
	Quantity	1
	Status	Normal
Item 2	Dept. 1	($1.00)
	Quantity	1
	Status	S.I.S
Payment	Cash	$3.00

OPERATION

2 00 3

1

The transaction is not finalized. Because another item is registered before the single item sales department.

CA / AMT / TEND

RECEIPT

```
1 DEPT003          $2.00
1 DEPT001          $1.00
  TL             $3.00
  CASH             $3.00
```

Currency exchange function

When <CE> key is pressed, a current subtotal including tax is converted directly into foreign currency and the result is displayed, and the subsequent finalization is handled using the foreign currency. The currency exchange function is released by finalizing a transaction, partial tender operation, receipt issuance, or by pressing <SUBTOTAL>.
Before using the currency exchange function, it is necessary to program the conversion rate.

Registering foreign currency

Full amount tender in foreign currency

* Pre-programmed exchange rate: ¥ 100 = $0.9524

Important!

Tenders in a foreign currency can be registered using the [CA/AMT/TEND] and [CHK] only.
Other finalize keys cannot be used.

OPERATION	DISPLAY	RECEIPT
[1][0][00][1] ← Enter the unit price and press the applicable department key.	10.00 (Displays in $)	1 DEPT001 $10.00 1 DEPT002 $20.00 TL -30.00 CE CASH ¥5,000 CASH $47.62 CG $17.62
[2][0][00][2] ← Enter the next unit price and press the applicable department key.	20.00 (Displays in $)	
[CE][SUB TOTAL] ← Press [CE] and [SUB TOTAL] without entering a numeric value. This operation converts the subtotal (including tax) dollar value into yen by applying a pre-programmed exchange rate. The result is shown on the display and printed on the receipt/journal by programming.	3150 (Displays in ¥: 3,150)	
[5][0][00][CE] (5,000) ← Enter the amount tendered in yen and press [CE]. This operation converts the entered yen amount into dollars by applying a pre-programmed exchange rate. The result is shown on the display.	5000	
[CA/AMT/TEND] ← Press to finalize the transaction. Note that you do not need to reenter the dollar amount. The register automatically calculates the change amount due in dollars and shows it on the display, receipts and journal.	17.62 (Displays in $)	

Partial tender in a foreign currency

* Pre-programmed exchange rate: ¥ 100 = $0.9524

Important!

Partial tender in a foreign currency can be registered using [CA/AMT/TEND] and [CHK] only. Other finalization keys cannot be used, but the remaining tender can be finalized using any finalize key.

OPERATION		DISPLAY
1 0 00 [1]	← Enter the unit price and press the applicable department key.	10.00 (Displays in $)
2 0 00 [2]	← Enter the next unit price and press the applicable department key.	20.00 (Displays in $)
[CE] [SUB TOTAL]	← Press [CE] and [SUB TOTAL] without entering a numeric value. This operation converts the subtotal (including tax) dollar value into yen by applying a pre-programmed exchange rate. The result is shown on the display and printed on the receipt/journal by programming.	3150 (Displays in ¥: 3,150)
2 0 00 [CE] (2,000)	← Enter the partial amount tendered in yen and press [CE]. This operation converts the entered yen amount into dollars by applying a pre-programmed exchange rate. The result is shown on the display.	2000
[CA/AMT/TEND]	← Press [CA/AMT/TEND] to specify cash tender for the yen partial tender. Note that you do not need to reenter the dollar amount. The register automatically deducts the dollar equivalent of the yen amount tendered from the total amount due and shows the amount on the display.	10.95 (Displays in $)
[CHK/TEND]	← Press to finalize the transaction.	10.95 (Displays in $)

RECEIPT

```
1 DEPT001          $10.00
1 DEPT002          $20.00
  TL               $30.00
  CE
  CASH            ¥2,000
  CASH             $19.05
  CHECK            $10.95
```

- If <Currency Exchange> key is not allocated on the keyboard, key allocation is necessary.

Premium

Example

OPERATION **RECEIPT**

Item 1	Dept. 1	$1.00
	Quantity	1
	Premium	10%
Item 2	Dept. 1	$2.00
	Quantity	3
Subtotal	Premium	(15%)
Payment	Cash	$8.17

1 00 1
1 0 %+
3 ×/FOR/DATE/TIME
2 00 1
SUB TOTAL
%+
CA/AMT/TEND

```
1 DEPT001          $1.00
  10%
  %+               $0.10
3 DEPT001          $6.00
  ST               $7.10
  15%
  %+               $1.07
  TL              $8.17
  CASH             $8.17
```

- If %+ is not allocated on the keyboard, key allocation is necessary.

Coupon

Note that errors result when the result of a calculation is negative if the cash register is programmed to prohibit credit balances.

Example

OPERATION **RECEIPT**

Item 1	Dept. 1	$3.00
	Quantity	2
	Coupon	$0.50 × 2
Item 2	Dept. 3	$4.00
	Quantity	1
	Coupon	($1.00)
Payment	Cash	$8.00

2 ×/FOR/DATE/TIME
3 00 1
2 ×/FOR/DATE/TIME
5 0 CPN
4 00 3
CPN
CA/AMT/TEND

```
2 DEPT001          $6.00
  COUPON           -1.00
1 DEPT003          $4.00
  COUPON           -1.00
  TL              $8.00
  CASH             $8.00
```

- If CPN is not allocated on the keyboard, key allocation is necessary.

Age verification

This function is used to prohibit the item registration for the person whose age is under the programmed value.

Example

Item 1	Dept. 1	$1.00
	Quantity	1
	Age limit	18
Item 2	Dept. 3	$2.00
	Quantity	1
	Age limit	20
Payment	Cash	$1.00
Birthdate	May. 03. 1988	
Current date	Apr. 03. 2006	

OPERATION

1 00 1

Error "PLEASE ENTER BIRTHDATE" occurs.

0 5 0 3

1 9 8 8 AGE

Enter birthdate by "MM-DD-YYYY" order.

1 00 1

2 00 3

Error "AGE DOES NOT PERMIT PRODUCT PURCHASE" occurs.

CA/AMT TEND

RECEIPT

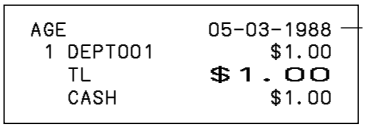

Birthdate *

* This item can be skipped by programming.

- If AGE is not allocated on the keyboard, key allocation is necessary.

Check tracking systems

Check tracking system

With the check tracking system, the amount, check number, store number, date/time and registration detail data are stored in two files (check tracking index file and check tracking detail file).

- Check tracking detail file and index file are cleared by the following timing:

1. The check is cleared after printing finalized data on guest check receipts, or the check is also cleared when the new or old check operation is made.
2. The check is cleared after printing finalized data on guest check receipt, or check is also cleared when the same finalized check number is assigned in new check operation.
   You can select one of these options by programming.

- Either of the following two operations can be used to correct input of a wrong check number.
  <NEW CHECK>
  Re-input the correct check number, or cancel the original check number, issue a receipt, and then re-input the correct check number.
  <OLD CHECK>, <NEW/OLD>
  Temporary finalize the original check number, issue a receipt, and then re-input the correct check number.

Opening a check

Example

OPERATION **RECEIPT**

Check#		1234
Item 1	Dept 1	$10.00
	Quantity	2
Item 2	Dept 2	$20.00
	Quantity	2
Item 3	Dept 3	$30.00
	Quantity	1

1 2 3 4 NEW
1 0 00 1
1
2 0 00 2
2
3 0 00 3
NB

```
CHECK No. 1234

 1 DEPT001          $10.00
 1 DEPT001          $10.00
 1 DEPT002          $20.00
 1 DEPT002          $20.00
 1 DEPT003          $30.00
   SRVC TL          $90.00
```

Press <NEW BALANCE> to temporarily close the transaction. If you want to finalize a check immediately, use <CASH>, <CHARGE>, <CREDIT> or <CHECK>.

Adding to a check

Example

OPERATION **RECEIPT**

Check#		1234
Item 1	Dept 1	$30.00
	Quantity	1
Item 2	Dept 2	$10.00
	Quantity	1

1 2 3 4 OLD
3 0 00 1
1 0 00 2
NB

```
                CT    1
CHECK No. 1234

   ST               $90.00
 1 DEPT001          $30.00
 1 DEPT002          $10.00
   SRVC TL
          $130.00
```

Issuing a guest receipt

The following operation can be used to print out the balance of a temporarily finalized check.

Example

OPERATION	RECEIPT
1 2 3 4 GUEST/POST RECEIPT Input the number of check you want.	CT 1 CHECK No. 1234 1 DEPT001 $10.00 1 DEPT001 $10.00 1 DEPT002 $20.00 1 DEPT002 $20.00 1 DEPT003 $30.00 1 DEPT001 $30.00 1 DEPT002 $10.00 SRVC TL $130.00

Closing a check memory

Example

OPERATION	RECEIPT
1 2 3 4 OLD 1 5 0 00 CA/AMT TEND	CT 1 CHECK No. 1234 ST $130.00 TL $130.00 CASH $130.00 CG $20.00

New / old check key operation

Example 1

When a check number is input and <NEW/OLD> is pressed, the key works as a new check key function if there is no matching check number in the check tracking memory.

OPERATION	RECEIPT
3 4 5 6 NEW/OLD Input a check number and press <NEW/OLD>. 1 0 00 1 2 0 00 2 NB	CHECK No. 3456 1 DEPT001 $10.00 1 DEPT002 $20.00 SRVC TL $30.00

Example 2

When a check number is input and <NEW/OLD> is pressed, the key works as an old check key if there is matching check number in the check tracking memory.

OPERATION	RECEIPT
3 4 5 6 NEW/OLD 3 0 00 CA/AMT TEND	CHECK No. 3456 ST $30.00 TL $30.00 CASH $30.00 CG $0.00

- If NEW/OLD is not allocated on the keyboard, key allocation is necessary.

Add check

This operation lets you combine the amounts of more than one check into a single check.

Example

Registration for check number 1234

OPERATION **RECEIPT**

Original check

Check#		1234
Item 1	Dept 1	$10.00
	Quantity	1
Item 2	Dept 2	$20.00
	Quantity	1

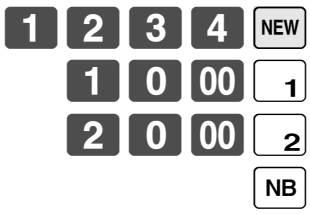


```
CHECK No. 1234

 1 DEPT001          $10.00
 1 DEPT002          $20.00
   SRVC TL          $30.00
```

Registration for check number 3456

OPERATION **RECEIPT**

Added check

Check#		3456
Item	Dept 1	$30.00
	Quantity	1

```
CHECK No. 3456

 1 DEPT001          $30.00
   SRVC TL          $30.00
```

Registration for check number 1234

OPERATION **RECEIPT**

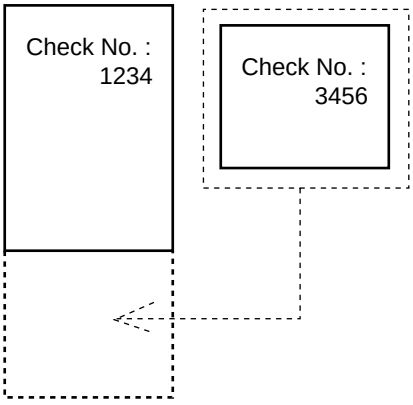

```
                    CT    1
CHECK No. 1234

   ST               $30.00
   ADD CHK            3456
   ST               $30.00
   SRVC TL          $60.00
```

- If ADD CHECK is not allocated on the keyboard, key allocation is necessary.

Flat-PLU

You can use the flat-PLUs to register items.
The procedure to register flat-PLU or to program to flat-PLU is similar to department key.
Please refer to page 31 through 34.
On these pages, replace

1. Department key (1 , 2 ..) to flat-PLU key(001 , 002 ..)
2. Department shift key (DEPT# DEPT SHIFT) to menu shift key (MENU SHIFT)

- If flat-PLU key is not allocated on the keyboard, key allocation is necessary.

Text recall

This procedure is used to recall text by inputting the address where the text is stored. The recalled text is printed on the receipt and journal.

Example

Item 1	Unit price	$46.00
	Dept.	1
Item 2	Unit price	$10.00
	Dept.	2
Payment	Cash	$56.00
Text 1	MEDIUM SIZE	
Text 2	SMALL SIZE	

OPERATION

4 6 00 1
1 TEXT RECALL
1 0 00 2
2 TEXT RECALL
SUB TOTAL
CA/AMT TEND

RECEIPT

```
   CT                    3
 1 DEPT001          $46.00
MEDIUM SIZE
 1 DEPT002          $10.00
SMALL SIZE
   TL              $56.00
   CASH               $56.00
```

- If TEXT RECALL is not allocated on the keyboard, key allocation is necessary.

Inputting the number of customers

Example

Item 1	Unit price	$15.00
	Dept.	1
Item 2	Unit price	$5.00
	Dept.	2
Customer	Number	2
Payment	Cash	$20.00

OPERATION

2 CST
1 5 00 1
5 00 2
SUB TOTAL
CA/AMT TEND

RECEIPT

```
   CT                    2
 1 DEPT001          $15.00
 1 DEPT002           $5.00
   TL              $20.00
   CASH               $20.00
```

- If CST is not allocated on the keyboard, key allocation is necessary.

Clerk interrupt function

There are two types of clerk interrupt function, illustrated by PROCEDURE 1 and PROCEDURE 2 below.
• In PROCEDURE 1, each clerk possesses a unique clerk interrupt buffer, and so the clerk interrupt function gives each individual clerk the ability to perform an independent registration operation. In this case, each clerk is individually linked to a unique clerk interrupt buffer.
• In PROCEDURE 2, multiple clerks use the same clerk interrupt buffer, and so a single clerk interrupt operation (clerk change during registration) can be performed any registration is in progress. In this case, multiple clerks are linked to a single clerk interrupt buffer.
Note the following important points concerning the clerk interrupt function.
• The register must be programmed to allow use of the clerk interrupt function.
• You cannot use the clerk interrupt function on a register set up to function as part of a check tracking system.
In the REG and RF modes, clerks can be change while a transaction is in progress, making it possible for multiple clerks to simultaneously perform registrations using a single register.
For example, if clerk 1 is interrupted while registering a transaction, clerk 2 can use the same machine to register a different transaction. Then clerk 1 can continue the original registration from the point where it was interrupted.

PROCEDURE 1

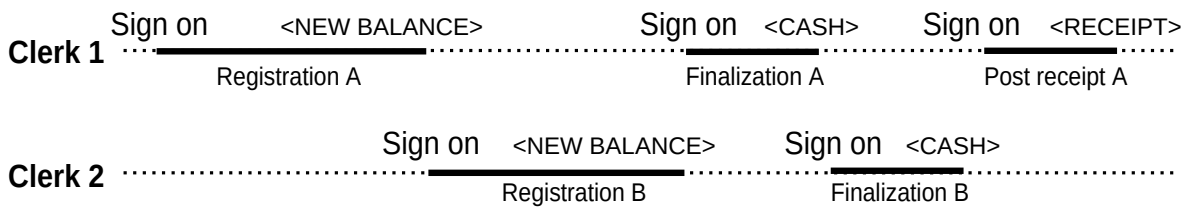

PROCEDURE 2

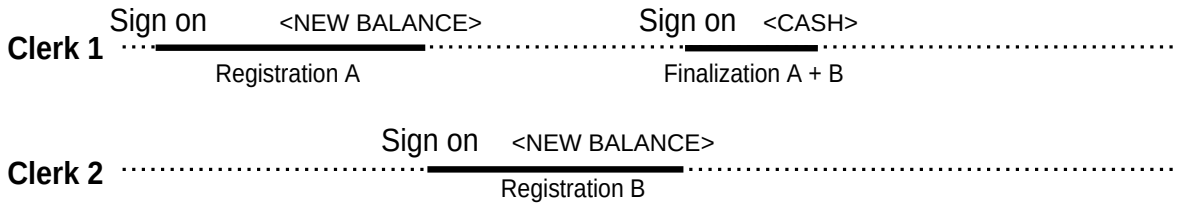

NOTES

- A guest receipt can be issued following clerk change, and receipts can be issued separately for each clerk.

Condiment / preparation PLUs

You can force entering condiment or preparation PLU after the main PLU registration by programming.

Example (condiment PLU)

Main item	PLU 1	$10.00
Condiment	PLU 11	$0.10
	PLU 12	$0.20
	PLU 13	$0.30
Payment	Cash	$10.60

OPERATION

1 PLU/S.DEPT

Registering main PLU.
No condiment registration occurs an error condition.

1 1 PLU/S.DEPT

1 2 PLU/S.DEPT

1 3 PLU/S.DEPT

CA/AMT TEND

RECEIPT

```
1 PLU0001          $10.00
  PLU0011           $0.10
  PLU0012           $0.20
  PLU0013           $0.30
TL                 $10.60
CASH               $10.60
```

Example (preparation PLU)

Main item	PLU 20	$20.00
Preparation	PLU 21	$0.00
	PLU 22	$0.00
	PLU 23	$0.00
Payment	Cash	$20.00

OPERATION

2 0 PLU/S.DEPT

Registering main PLU.

2 1 PLU/S.DEPT

2 2 PLU/S.DEPT

2 3 PLU/S.DEPT

CA/AMT TEND

RECEIPT

```
1 PLU0020          $20.00
  PLU0021
  PLU0022
  PLU0023
TL                 $20.00
CASH               $20.00
```

Set menu

When you register a set menu, its total amount is added to the PLU totalizer and counter. The price of each set menu item is also added to each respective PLU totalizer and counter.

Example

Set menu	PLU 35	$5.00
Item 1	PLU 1	--
Item 2	PLU 2	--
Item 3	PLU 3	--
Item 4	PLU 4	--
Payment	Cash	$5.00

OPERATION

3 5 PLU/S.DEPT

CA/AMT TEND

RECEIPT

```
1 PLU0035           $5.00
  PLU0001
  PLU0002
  PLU0003
  PLU0004
TL                  $5.00
CASH                $5.00
```

Arrangement key registrations

Key operations can be assigned to an <ARRANGE> (arrangement key). Then, simply pressing <ARRANGE> performs all of the key functions assigned to it.
Key operations can also be assigned to an address code. Then, when you input the address code using <ARRANGE>, all of the key functions assigned to the address code are performed.

Example 1

Arrangement 1		
Item 1	PLU 1	($8.00)
	Quantity	1
Item 2	PLU 2	($5.00)
	Quantity	1
Payment	Cash	$13.00

OPERATION

[ARR]

RECEIPT

```
1 PLU0001          $8.00
1 PLU0002          $5.00
  TL              $13.00
  CASH            $13.00
```

Example 2

Arrangement 5		
Item 1	Dept 1	$1.00
	Quantity	1
Item 2	Dept 2	$2.00
	Quantity	1
Payment	Cash	$3.00

OPERATION

5 [ARR]

RECEIPT

```
1 DEPT001          $1.00
1 DEPT002          $2.00
  TL               $3.00
  CASH             $3.00
```

- If [ARR] is not allocated on the keyboard, key allocation is necessary.

Tips

Item 1	Unit price	$3.00
	Dept.	1
Item 2	Unit price	$5.00
	Dept.	2
Tip	Amount	$0.80
Payment	Cash	$10.00

OPERATION

3 00 [1]
5 00 [2]
[SUB TOTAL]
8 0 [TIP]
1 0 00 [CA/AMT TEND]

RECEIPT

```
1 DEPT001          $3.00
1 DEPT002          $5.00
  TIP              $0.80
  TL               $8.80
  CASH            $10.00
  CG               $1.20
```

- If [TIP] is not allocated on the keyboard, key allocation is necessary.

Item correction by using VOID key

The following example shows how to use the [VOID] key to void previous registered items.

			OPERATION	RECEIPT
Item 1	Dept. 1	$2.35	2 3 5 [1]	1 DEPT001 $2.35
	Quantity	1	2 00 [2]	1 DEPT002 $2.00
Item 2	Dept. 2	$2.00	1 [PLU/S.DEPT]	1 PLU0001 $1.20
	Quantity	1	[VOID]	VOID .....
Item 3	PLU 1	($1.20)$_{preset}$	2 3 5 [1]	1 DEPT001 -2.35
	Quantity	1		VOID .....
Void Item 1	Dept. 1	$2.35		1 PLU0001 -1.20
	Quantity	1		TL $2.00
Void Item 3	PLU 1	($1.20)$_{preset}$		CASH $2.00
	Quantity	1		
Payment	Cash	$2.00		

Press [VOID] before the item you want to return.

[VOID] 1 [PLU/S.DEPT] [SUB TOTAL] [CA/AMT/TEND]

Corrected items are not printed on receipt (in case of programming "Buffered receipt printing").

- If [VOID] is not allocated on the keyboard, key allocation is necessary.

Addition

			OPERATION	RECEIPT
Item 1	Dept. 1	$1.00	1 00 [1]	1 DEPT001 $1.00
	Quantity	1	1 0 [+]	+ $0.10
	Addition	$0.10	3 [×/FOR/DATE/TIME]	3 DEPT001 $6.00
Item 2	Dept. 1	$2.00	2 00 [1]	+ $0.60
	Quantity	3	3 [×/FOR/DATE/TIME]	TL $7.70
	Addition	3 × ($0.20)	[+]	CASH $7.70
Payment	Cash	$7.70	[CA/AMT/TEND]	

- If [+] is not allocated on the keyboard, key allocation is necessary.

Programming department / PLU descriptors and preset messages in the list

In this chapter, the procedures to choose department / PLU descriptors and preset messages from the preset list are described. Read help receipt, so that you can set the descriptors and messages easily.

How to choose and set the department / PLU descriptors in the list

1. Turn to the PGM mode.
2. Enter **0** **7** and press the HELP key.
3. Select the item name and follow these steps in the list.

How to choose and set the preset receipt message and graphic logo in the list

1. Turn to the PGM mode.
2. Enter **0** **8** and press the HELP key. (Programming procedure and Preset message list is issued.)
3. Follow these steps in the list.

Preset message and graphic print sample

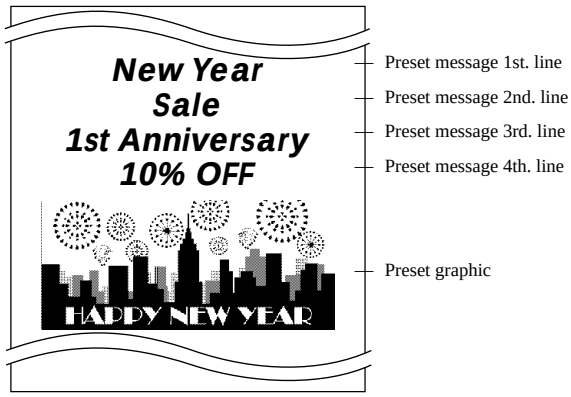

Character manual input

This chapter shows the procedures to program department / PLU descriptors, store messages, key descriptos, report title, total descriptor (such as gross total, net total...) and clerk name.
The characters you entered by the character keyboard or multi-tapping keyboard, can be programmed.
The “Entering characters” section shows how to enter characters, and the “Programming descriptors and messages by entering characters” shows how to program the entered characters to each memory.

Entering characters

In this section, the method to enter descriptors or messages (characters) to the cash register during programming is described.
Characters are specified by character keyboard or by multi tapping method. In the first half of this section, the usage of character keyboard is described. In the latter half, inputting method by multi tapping is described.

Using character keyboard

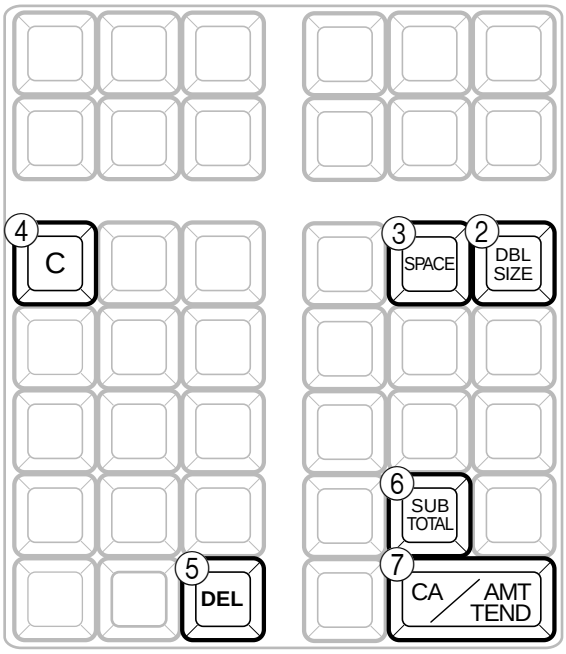

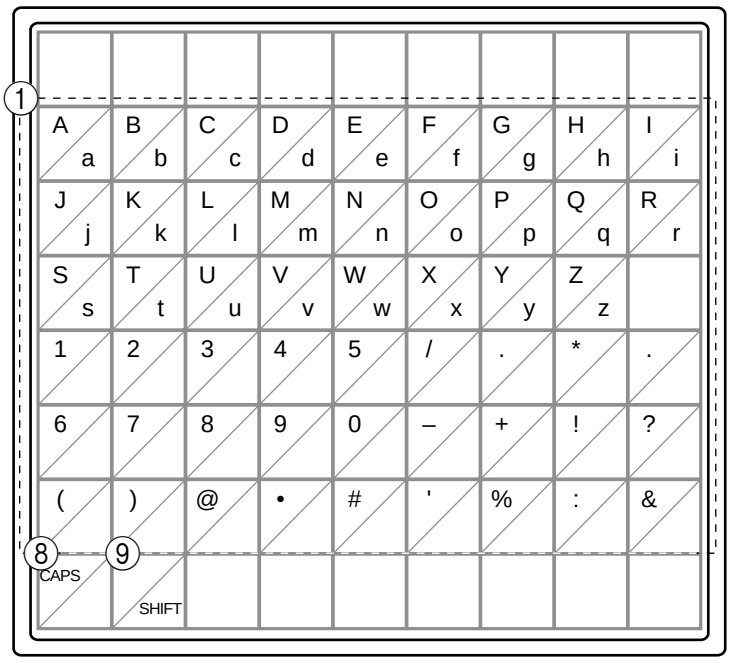

① **Alphabet keys**
Used input to characters.

② **Double size letter key**
Specifies that the next characters you input to double size characters. After completion of inputting double size character, press this key for normal size character.

③ **Space key**
Set a space by depression.

④ **Clear key**
Clears all input characters in the programming.

⑤ **Delete key**
Clears the last input character, much like a back space key.

⑥ **Program end key**
Terminates the character programming.

⑦ **Character enter key**
Registers the programmed characters.

⑧ **CAPS key**
Pressing this key shifts the character from the lowercase letter to upper case letter.

⑨ **Shift key**
Pressing this key shifts the character from the uppercase letter to lower case letter.

Example:
Input “ A p p l e J u i c e ”,
enter <DBL><A> <DBL><Shift><p> <p> <l> <e> <Space> <CAPS><J> <Shift><u> <i> <c> <e> .

Entering characters by multi tapping

When you enter characters by this method, you need to press each key repeatedly until the desired character appears.

Multi tapping keyboard

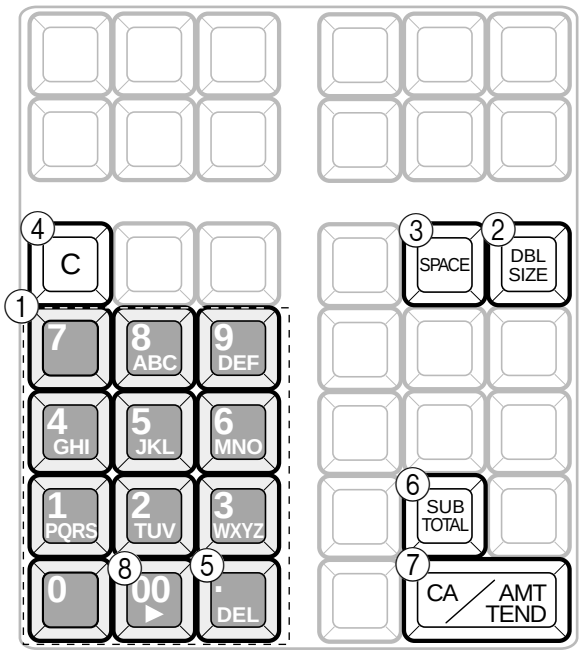

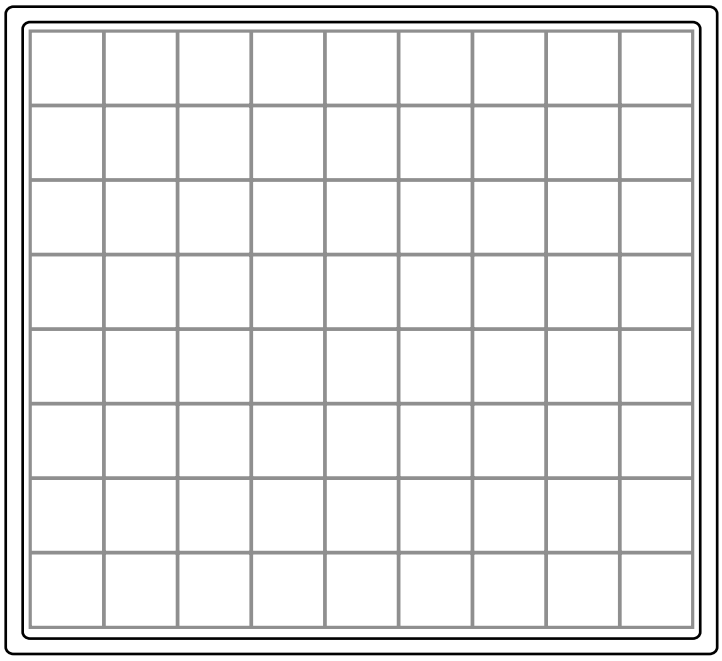

① **Alphabet keys**
Used input to characters.

Key	Text
7	7 @ − / : ! ? ¨ ( ) * # + , ^ ; < = > $ ¥ % & [ ] ' { ¦ } · " . \ _ ' £ x ¿ ¡ € § (space)
8	A B C a b c 8 Ä Å Æ Á Â À Ã Ç â ä à å æ á ã Ç
9	D E F d e f 9 Ð É Ê Ë È ð é ê ë è ƒ
4	G H I g h i 4 Í Î Ï Ì ï î ì í ı
5	J K L j k l 5
6	M N O m n o 6 Ñ Ö ø Ó Ô Ò Õ ñ ô ö ò φ ó õ
1	P Q R S p q r s 1 Þ þ ß
2	T U V t u v 2 Ü Ú Û Ù ü û ù ú µ
3	W X Y Z w x y z 3 Ý ý ÿ
0	0
00	(Right cursor)
.	(Delete)

② **Double size letter key**
Specifies that the next characters you input to double size characters. After completion of inputting double size character, press this key for normal size character.

③ **Space key**
Set a space by depression.

④ **Clear key**
Clears all input characters in the programming.

⑤ **Delete key**
Clears the last input character, much like a back space key.

⑥ **Program end key**
Terminates the character programming.

⑦ **Character enter key**
Registers the programmed characters.

⑧ **Right cursor key**
Move the cursor to the right by one to enter a character on the same tapping key.

Example:
Input “ C L A S S a ”,
enter “ <DBL> 8 8 8 5 5 5 <DBL> 8 1 1 1 1 00 1 1 1 1 <Space> 8 8 8 8 ” .

Programming descriptors and messages by entering characters

The following descriptors and messages can be programmed;

- Report descriptor (such as gross total, net total, cash in drawer…)
- Grand total
- Special character (such as mode symbol, taxable symbol…)
- Read/reset report title
- Clerk name
- PLU item descriptor
- Messages (Logo, commercial and bottom message)
- Function key descriptor
- Department key descriptor

Programming PLU descriptor

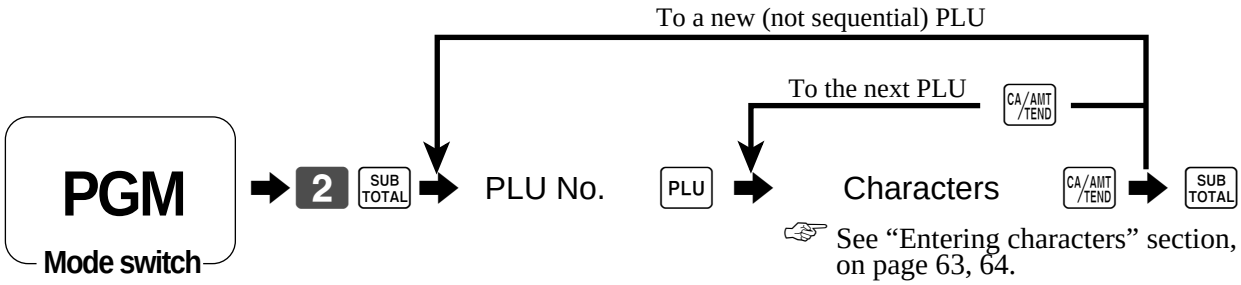

☞ See "Entering characters" section, on page 63, 64.

PLU No.	Contents	Initial character	Yours
0001	PLU0001	PLU0001	
0002	PLU0002	PLU0002	
0003	PLU0003	PLU0003	
0004	PLU0004	PLU0004	
0005	PLU0005	PLU0005	
0006	PLU0006	PLU0006	
0007	PLU0007	PLU0007	
0008	PLU0008	PLU0008	
0009	PLU0009	PLU0009	
0010	PLU0010	PLU0010	
0011	PLU0011	PLU0011	
0012	PLU0012	PLU0012	
0013	PLU0013	PLU0013	
0014	PLU0014	PLU0014	
0015	PLU0015	PLU0015	
0016	PLU0016	PLU0016	
0017	PLU0017	PLU0017	
0018	PLU0018	PLU0018	
0019	PLU0019	PLU0019	
0020	PLU0020	PLU0020	
0021	PLU0021	PLU0021	
0022	PLU0022	PLU0022	
0023	PLU0023	PLU0023	
0024	PLU0024	PLU0024	
0025	PLU0025	PLU0025	
0026	PLU0026	PLU0026	
0027	PLU0027	PLU0027	
0028	PLU0028	PLU0028	
0029	PLU0029	PLU0029	
0030	PLU0030	PLU0030	

Programming department / flat-PLU / function key descriptor

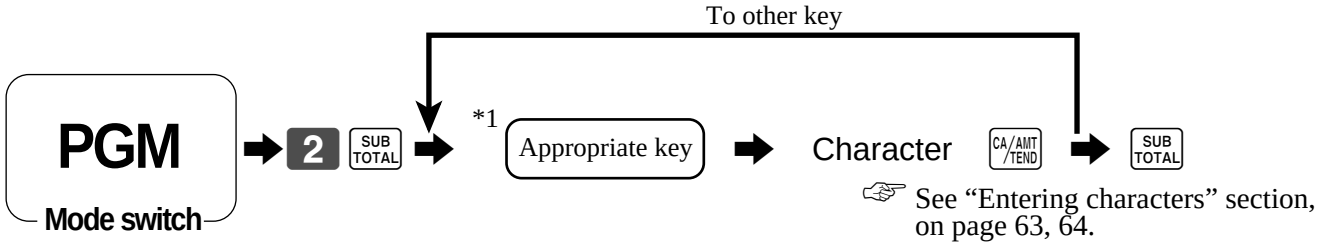

☞ See "Entering characters" section, on page 63, 64.

*1 Appropriate key: In case of shifting department, press <DEPT SHIFT> key first.
In case of shifting flat-PLU, press <MENU> key first.

Function key

Contents	Initial character	Yours
Cash/amount tendered	CASH	
Check	CHECK	
New balance	NB	
New check	NEW CHK	
Old check	OLD CHK	
Received on account	RC	
Paid out	PD	
Discount	%-	
Receipt on/off	RCT ON/OFF	
Guest / Post receipt	RCT	
Refund	RF	
Error correct/Cancel	CORR	
Sign off	SIGN-OFF	
Menu shift	MENU	
Multiplication/For/Date time	QT	
Tax shift 1	T/S1	
Tax shift 2	T/S2	
Non-add	#	
No sale	NS	
MD/ST	MDST	

Department key

Contents	Initial character	Yours
Department 001	DEPT001	
Department 002	DEPT002	
Department 003	DEPT003	
Department 004	DEPT004	
Department 005	DEPT005	
Department 006	DEPT006	
Department 007	DEPT007	

Flat-PLU key

Contents	Initial character	Yours
PLU0001	PLU0001	
PLU0002	PLU0002	
PLU0003	PLU0003	
PLU0004	PLU0004	
PLU0005	PLU0005	
PLU0006	PLU0006	
PLU0007	PLU0007	

Programming message

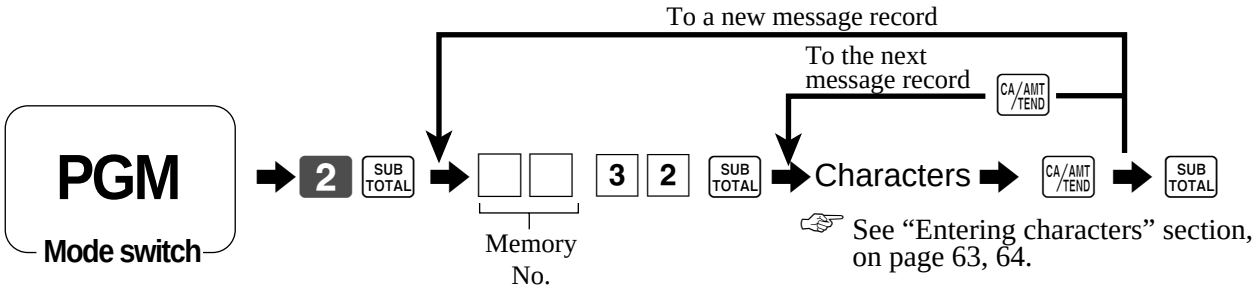

Receipt message

Refer to "(message control)" on page 75.

Memory No.	Contents	Initial character	Yours
01	1st line of logo message	YOUR RECEIPT	
02	2nd line of logo message	THANK YOU	
03	3rd line of logo message	CALL AGAIN	
04	4th line of logo message		
05	1st line of commercial message		
06	2nd line of commercial message		
07	3rd line of commercial message		
08	4th line of commercial message		
09	1st line of bottom message		
10	2nd line of bottom message		
11	3rd line of bottom message		
12	4th line of bottom message		
:	:		
25	(not used)	DUPLICATE RECEIPT	
:	:		
40	Australian GST message 1st. line	TAX INVOICE	
41	Australian GST message 2nd. line	* INDICATES	
42	Australian GST message 3rd. line	TAXABLE SUPPLY	

Programming Clerk name

Clerk name

Clerk No.	Contents	Initial character	Yours
01	Clerk 01	C01	
02	Clerk 02	C02	
03	Clerk 03	C03	
04	Clerk 04	C04	

Programming other descriptors

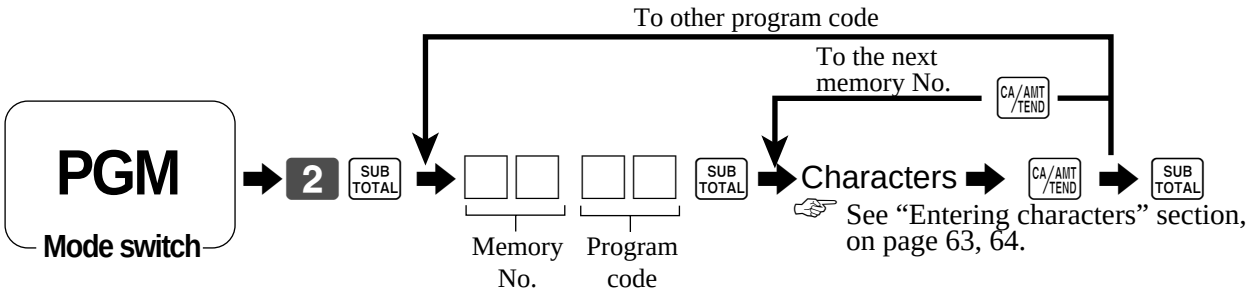

Report descriptor

Memory No.	Program code	Contents	Initial character	Yours
01	01	Gross total	GROSS	
02		Net total	NET	
03		Cash in drawer	CAID	
04		Charge in drawer	CHID	
05		Check in drawer	CKID	
06		Credit 1 in drawer	CRID(1)	
07		Credit 2 in drawer	CRID(2)	
08		Credit 3 in drawer	CRID(3)	
09		Credit 4 in drawer	CRID(4)	
10		Cash in drawer for sub currency	CAID2	
11		Charge in drawer for sub currency	CHID2	
12		Check in drawer for sub currency	CKID2	
17		Refund mode total	RF	
18		Customer count	CUST	
19		Average sales per customer	AVER	
20		Clerk commision 1 total	C-1	
21		Clerk commision 2 total	C-2	
22		Foreign currency cash in drawer	CECA1	
23		Foreign currency check in drawer	CECK1	
26		Reduction	DC	
27		Coupon	COUPON	
28		Item return	REF	
29		Rounding for sub currency	ROUND	
30		Rounding	ROUND	
31		Cancellation	CANCEL	
33		Taxable amount 1	TA1	
34		Tax 1	TX1	
35		Taxable amount 2	TA2	
36		Tax 2	TX2	
37		Taxable amount 3	TA3	
38		Tax 3	TX3	
39		Taxable amount 4	TA4	
40		Tax 4	TX4	
41		Non taxable amount	NON TAX	

Text recall character

Memory No.	Program code	Contents	Initial character	Yours
01	39	Text recall character 01		
02		Text recall charecter 02		
03		Text recall character 03		
04		Text recall character 04		
05		Text recall character 05		

Grand total, special character

Memory No.	Program code	Contents	Initial character	Yours
01	23	main currency symbol (2), @ (2), No. (2), split pricing (2), not used (4), sub currency symbol (2)		$@ No/ **
02		No. of item sold (2), No. of customer (2), not used (6),multiplication display (2)		NoCT @LB *QT
03		multiplication (6) not used (6)		BUSY
04		taxable symbol 1 (3 each) for tax 1, tax 2, tax 3, tax 4		T1 T2 T3 T4 T5
06		taxable symbol 3 (3 each) for tax 1/2, tax 1/3, not used, not used, tax 2/3		T12T13T14 T23
08		foreign currency (2 each), not used (8)		* * * * *
09		mode symbol 1 (4 each) REG1/2, RF, not used		REG RF FR –
10		mode symbol 2 (4 each) PGM, Daily X, Daily Z, Periodic		PnX Z XZ
11		mode symbol 3 (4 each) not used, PGM read		TRG PGMX
12		decimal: amount/q'ty, separator (main/sub) (1 each), not used (3), square (7)		.,.,.,.,. X
13		A.M., P.M. (3 each), ST displayed on the dot display (2)		AM PM ST
16		display subtotal symbol (ST key) (16)		ST
17		subtotal discount / premium symbol (16)		ST
18		post receipt total symbol (16)		TL
19		change symbol (16)		CG
01	20	Grand total (16)		GT

Report title

Memory No.	Program code	Contents	Initial character	Yours
01	24	Fixed total report title	FIX	
02		Transaction key report title	TRANS	
03		PLU sales report title	PLU	
04		Department sales report title	DEPT	
05		Group sales report title	GROUP	
06		Clerk sales report title	CASHIER	
08		Hourly sales report title	HOURLY	
09		Monthly sales report title	MONTHLY	
16		Financial report title	FLASH	

Machine feature program

General control program

Programming procedure

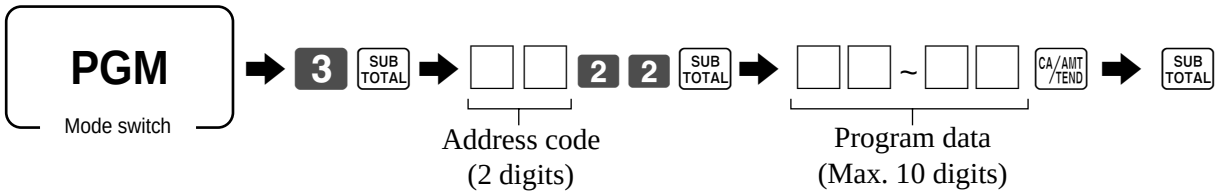

Program data (by address code)

Address code 02 (machine number)

Description	Choice	Program code	Initial value
Machine number	Significant numbers	D_4 D_3 D_2 D_1	0 0 0 0 D_4 D_3 D_2 D_1

Address code 03 (consecutive number)

Description	Choice	Program code	Initial value
Reset consecutive number after daily reset report is issued.	Yes = 0 No = 1	D_8	0 D_8
Always “00000000”		D_7 ~ D_1	0 ~ 0 D_7 ~ D_1

Address code 04 (tax system)

Description	Choice	Program code	Initial value
Tax system U.S. tax system = 1, Canadian tax system = 2	Significant number	D_9	1 or 2 (U.S.) (Canada) D_9
Always “00000000”		D_8 ~ D_1	0 ~ 0 D_8 ~ D_1

Address code 05 (print control for receipt)

Description		Choice	Program code	Initial value
Print total line during finalization.	a	Yes = 0 No = 1	□ (a+b) D_{10}	0 (a+b) D_{10}
Time system: ① 24 hour system, ② 12 hour system	b	① = 0 ② = 2		
Buffered receipt print *1		No = 0 Yes = 2	□ D_9	0 D_9
Skip item lines on journal. (journal skip)		No = 0 Yes = 1	□ D_8	0 D_8
Always “000”			0 0 0 D_7 D_6 D_6	0 0 0 D_7 D_6 D_5
Print number of item sold. (item counter)	a	No = 0 Yes = 1	□ (a+b) D_4	0 (a+b) D_4
Print tax symbols.	b	Yes = 0 No = 2		
Always “00”			0 0 D_3 D_2	0 0 D_3 D_2
Print number of customers on header.		Yes = 0 No = 2	□ D_1	0 D_1

*1: Select “Yes” if you want to print receipts with watermarks.

Address code 06 (calculation & operation control)

Description		Choice	Program code	Initial value
Follow the taxable status and commission status of previous item when +/- operation is performed.	a	Yes = 0 No = 1	□ (a+b) D_{10}	0 (a+b) D_{10}
Force a money declaration before read/reset operation.	b	No = 0 Yes = 4		
Force to press [SUB TOTAL] before finalization	a	No = 0 Yes = 1	□ (a+b+c) D_9	0 (a+b+c) D_9
Allow credit balance while finalization.	b	Yes = 0 No = 2		
Allow multiple refund operation.	c	Yes = 0 No = 4		
Affect the result of +/-, %+/%- to the item. (Net totalling)		No = 0 Yes = 1	□ D_8	0 D_8
Include commission in net total.		Yes = 0 No = 2	□ D_7	0 D_7
Clear the key buffer when a receipt is issued. (REG mode only)	a	No = 0 Yes = 1	□ (a+b+c) D_6	0 (a+b+c) D_6
Sounds key catch tone.	b	Yes = 0 No = 2		
Allow to issue post receipt, even if the original one is issued.	c	No = 0 Yes = 4		
Always “00”			0 0 D_5 D_4	0 0 D_5 D_4
Treatment of flat-PLU key numeric inputs: ① Treat as amount override ② Treat as quantity extensions		① = 0 ② = 2	□ D_3	□ D_3
Always “00”.			0 0 D_2 D_1	0 0 D_2 D_1

Address code 08 (print control for fixed total report)

Description		Choice	Program code	Initial value
Print gross sales total on fixed total report (GROSS)	a	Yes = 0 No = 1	□ (a+b+c) D_{10}	0 (a+b+c) D_{10}
Print net sales total on fixed total report (NET)	b	Yes = 0 No = 2		
Print cash in drawer total on fixed total report (CAID)	c	Yes = 0 No = 4		
Print charge in drawer total on fixed total report (CHID)		Yes = 0 No = 2	□ D_9	0 D_9
Print check in drawer total on fixed total report (CKID)	a	Yes = 0 No = 1	□ (a+b) D_8	0 (a+b) D_8
Print credit in drawer total on fixed total report (CRID(1) ~ (4))	b	Yes = 0 No = 4		
Always “0”			0 D_7	0 D_7
Print RF mode total on fixed total report (RF)		Yes = 0 No = 4	□ D_6	0 D_6
Print the net number of customers on fixed total report (CUST)	a	Yes = 0 No = 1	□ (a+b) D_5	2 (a+b) D_5
Print the average sales per customer on fixed total report (AVER)	b	Yes = 0 No = 2		
Always “0”			0 D_4	0 D_4
Print commission 1 total on fixed total report (C-1)	a	Yes = 0 No = 1	□ (a+b+c) D_3	7 (a+b+c) D_3
Print commission 2 total on fixed total report (C-2)	b	Yes = 0 No = 2		
Print foreign currency cash in drawer and check in drawer totals on fixed total report (CECA1 ~ 2, CECK1 ~ 2)	c	Yes = 0 No = 4		
Print <MINUS>, <COUPON>, <%–> and mix & match operation net total on fixed total report (DC)	a	Yes = 0 No = 1	□ (a+b+c) D_2	3 (a+b+c) D_2
Print <REFUND> and <VOID> operation net total on fixed total report (REF)	b	Yes = 0 No = 2		
Print nontaxable totals on fixed total report (NON TAX)	a	Yes = 0 No = 1	□ (a+b+c) D_1	3 (a+b+c) D_1
Print rounding totals on fixed total report (ROUND)	b	Yes = 0 No = 2		
Print cancellation total on fixed total report (CANCEL)	c	Yes = 0 No = 4		

Address code 10 (print control for taxable amount)

Description		Choice	Program code	Initial value
Print taxable amount 1 on receipt/journal.	a	Yes = 0 No = 1	□ (a+b+c) D_{10}	0 (a+b+c) D_{10}
Print taxable amount 2 on receipt/journal.	b	Yes = 0 No = 2		
Print taxable amount 3 on receipt/journal.	c	Yes = 0 No = 4		
Print taxable amount 4 on receipt/journal.		Yes = 0 No = 1	□ D_9	0 D_9
Always “00000000”			0 ~ 0 D_8 ~ D_1	0 ~ 0 D_8 ~ D_1

Address code 14 (currency exchange control)

Description		Choice	Program code	Initial value
Monetary mode of CECA1 and CECK1 in fixed total report:		Significant number (0 ~ 9)	□ D_8	0 D_8
Decimal for CECA1 and CECK1 in fixed total report: ① Period = 0, ② Comma = 1	a	① = 0 ② = 1	□ (a+b) D_7	0 (a+b) D_7
Separator for CECA1 and CECK1 in fixed total report: ① Comma = 0, ② Period = 1	b	① = 0 ② = 4		
Monetary mode of CECA2 and CECK2 in fixed total report:		Significant number (0 ~ 9)	□ D_6	0 D_6
Decimal for CECA2 and CECK2 in fixed total report: ① Period = 0, ② Comma = 1	a	① = 0 ② = 1	□ (a+b) D_5	0 (a+b) D_5
Separator for CECA2 and CECK2 in fixed total report: ① Comma = 0, ② Period = 1	b	① = 0 ② = 4		
Always “0000”			0 0 0 0 D_4 D_3 D_2 D_1	0 0 0 0 D_4 D_3 D_2 D_1

Address code 15 (print control for reports)

Description		Choice	Program code	Initial value
Zero skip department report.	a	Yes = 0 No = 1	□ (a+b) D_{10}	0 (a+b) D_{10}
Zero skip clerk report.	b	Yes = 0 No = 2		
Zero skip transaction report.	a	Yes = 0 No = 1	□ (a+b+c) D_9	0 (a+b+c) D_9
Zero skip PLU report.	b	Yes = 0 No = 2		
Zero skip hourly report.	c	Yes = 0 No = 4		
Zero skip group report.		Yes = 0 No = 1	□ D_8	0 D_8
Always “0”			0 D_7	0 D_7
Prohibit issuing “OPEN CHECK Z” report.		No = 0 Yes = 1	□ D_6	0 D_6
Print PLU number on the PLU report.		No = 0 Yes = 4	□ D_5	0 D_5
Print sales ratio.	a	No = 0 Yes = 1	□ (a+b) D_4	0 (a+b) D_4
Issue double Z report.	b	No = 0 Yes = 2		
Always “000”			0 0 0 D_3 D_2 D_1	0 0 0 D_3 D_2 D_1

Address code 16 (print control for grand total)

Description	Choice	Program code	Initial value
Print consecutive number range of the day on daily fixed total report.	No = 0 Yes = 1	□ D_7	0 D_7
Always “00000”		□ ~ □ D_6 ~ D_2	0 ~ 0 D_6 ~ D_2
Print grand total on daily sales reset report.	Yes = 0 No = 1	□ D_1	0 D_1

Address code 17 (print control)

Description		Choice	Program code	Initial value
Print date on journal.	a	Yes = 0 No = 2	□ (a+b) D_4	0 (a+b) D_4
Print consecutive number on receipt/journal.	b	Yes = 0 No = 4		
Print time on receipt.	a	Yes = 0 No = 1	□ (a+b) D_3	0 (a+b) D_3
Print time on journal.	b	Yes = 0 No = 2		
Always “00”			0 0 D_2 D_1	0 0 D_2 D_1

Address code 18 (print control for guest receipt)

Description		Choice	Program code	Initial value
Classify registered item by group on guest receipt.		No = 0 Yes = 4	□ D_6	0 D_6
Always “0”			0 D_5	0 D_5
Print date on guest receipt.	a	Yes = 0 No = 1	□ (a+b) D_4	0 (a+b) D_4
Print time on guest receipt.	b	Yes = 0 No = 2		
Merge the same registration on guest receipt. (Item consolidation)		No = 0 Yes = 4	□ D_3	0 D_3
Always “00”			0 0 D_2 D_1	0 0 D_2 D_1

Address code 19 (receipt control)

Description	Choice	Program code	Initial value
Print receipt in double-height characters.	No = 0 Yes = 1	□ D_7	0 D_7
Always “000000”		0 ~ 0 D_6 ~ D_1	0 ~ 0 D_6 ~ D_1

Address code 21 (message control)

Description		Choice	Program code	Initial value
Print graphic type logo. (If select “No”, character type logo is printed.)	a	No = 0 Yes = 2	□ (a+b) D_{10}	0 (a+b) D_{10}
Print watermark on receipt.	b	Yes = 0 No = 4		
Print commercial message on guest receipt.	a	No = 0 Yes = 1	□ (a+b) D_9	0 (a+b) D_9
Print bottom message on guest receipt.	b	No = 0 Yes = 2		
Always “00”			0 0 D_8 D_7	0 0 D_8 D_7
Print commercial message on receipts in REG/RF mode.	a	No = 0 Yes = 1	□ (a+b) D_6	0 (a+b) D_6
Print bottom message on receipts in REG/RF mode.	b	No = 0 Yes = 2		
Always “0000”			0 0 0 0 D_5 D_4 D_3 D_2	0 0 0 0 D_5 D_4 D_3 D_2
Always “0”			0 D_1	0 D_1

Address code 26 (check tracking)

Description		Choice	Program code	Initial value
Check number compulsory	a	No = 0 Yes = 1	□ (a+b+c) D_7	0 (a+b+c) D_7
Number of customer compulsory	b	No = 0 Yes = 2		
Guest receipt compulsory (at finalization)	c	No = 0 Yes = 4		
Always “0”			0 D_6	0 D_6
Tax calculation by new balance (Calculation result is not saved into totalizer.)		No = 0 Yes = 1	□ D_5	0 D_5
Always “0000”			0 0 0 0 D_4 D_3 D_2 D_1	0 0 0 0 D_4 D_3 D_2 D_1

Address code 27 (clerk control)

Description	Choice	Program code	Initial value
Enable clerk interrupt.	No = 0 Yes = 1	□ D_{10}	0 D_{10}
Enable clerk function.	No = 0 Yes = 4	□ D_9	0 D_9
Always “00000000”		0 ~ 0 D_8 ~ D_1	0 ~ 0 D_8 ~ D_1

Address code 30 (thermal printer control)

Description		Choice	Program code	Initial value
Print preset receipt message and graphic	a	No = 0 Yes = 1	□ (a+b) D_5	0 (a+b) D_5
Print preset receipt message and graphic: ① at the bottom of the receipt / ② at the top of the receipt	b	① = 0 ② = 2		
Journal compressed print (print by half height characters)		Yes = 0 No = 1	□ D_4	0 D_4
Always “000”			0 0 0 D_3 D_2 D_1	0 0 0 D_3 D_2 D_1

Address code 34 (backlight control)

Description	Choice	Program code	Initial value
Backlight	Available = 0 Not available = 1	□ D_4	0 D_4
Always “000”		0 0 0 D_3 D_2 D_1	0 0 0 D_3 D_2 D_1

Key function program

Department key/Flat-PLU key/PLU program (Batch feature programming)

Programming procedure

Department/Flat-PLU key

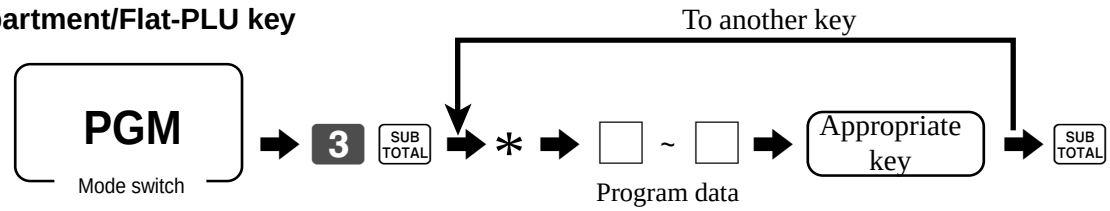

*: In case of shifting department, press <DEPT SHIFT> key first.
In case of shifting flat-PLU, press <MENU SHIFT> key first.

PLU

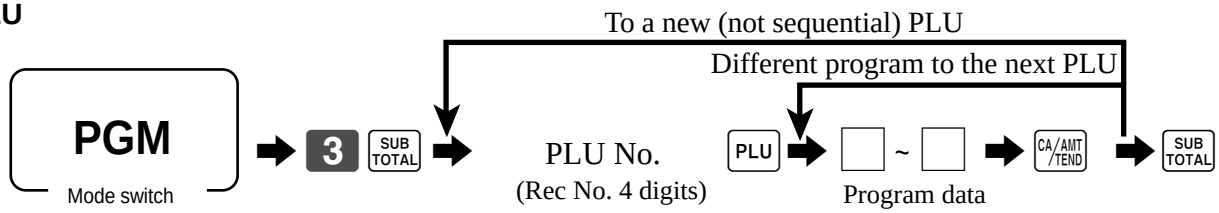

Program data

Description		Choice	Program code	Initial value
Age limitation (“00” means no limitation)		Significant number (00 - 99)	D_{14} D_{13}	0 0
Single item control: Normal receipt = 0, Single item receipt = 3		Significant number	D_{12}	0
Always “0”			D_{11}	0
Normal / condiment / preparation (Only for PLU, Flat-PLU) Normal item = 0, Condiment = 1, Preparation = 2		Significant number	D_{10}	0
Always “0”			D_9	0
Taxable status: See page 81.			D_8 D_7	D_8 D_7
Enable 0 unit price.	a	No = 0 Yes = 1	(a+b+c) D_6	(a+b+c) D_6 0
Enable negative price.	b	No = 0 Yes = 2		
Hash	c	No = 0 Yes = 4		
Always “0”			D_5	0
Low digit limitation (LDL) for manually entered unit price.		Significant number	D_4	0
Open PLU (only for PLU)		No = 0 Yes = 4	D_3	0
Commission 1	a	No = 0 Yes = 1	(a+b) D_2	(a+b) D_2 0
Commission 2	b	No = 0 Yes = 2		
Always “0”			D_1	0

Department key/Flat-PLU key/PLU program (Individual feature programming)

Programming procedure

Department/Flat-PLU key

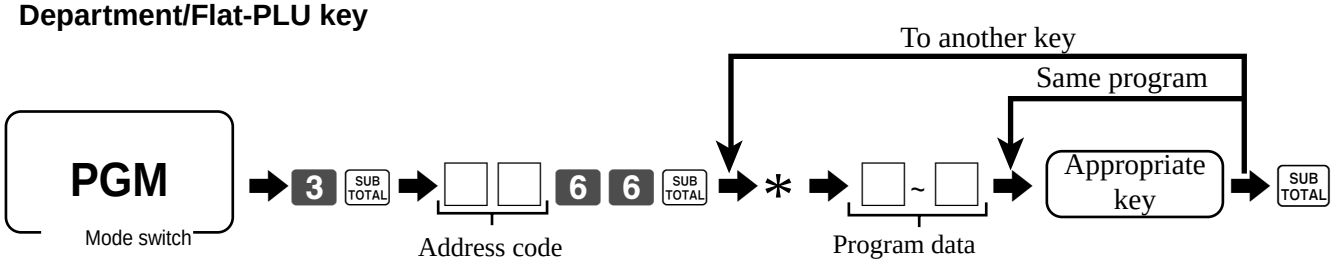

*: In case of shifting department, press <DEPT SHIFT> key first.
In case of shifting flat-PLU, press <MENU SHIFT> key first.

PLU

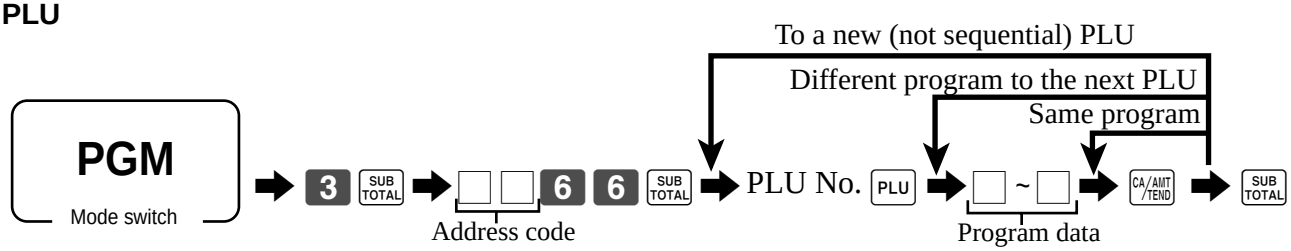

Program data (by address code)

Address code 11 (link)

Description	Choice	Program code
Link group record number: (000 ~ 999)	Significant numbers	□ □ □ D_7 D_6 D_5
Always "0"		0 D_4
Link department record number: (000 ~ 999) (only for PLU)	Significant numbers	□ □ □ D_3 D_2 D_1

Address code 13 (set menu)

Description	Choice	Program code
Set menu table record number (only for PLU)	Significant numbers	□ □ □ □ D_4 D_3 D_2 D_1

Address code 15 (high amount limit)

Description	Choice	Program code
High amount limit for entering unit price manually.	Significant numbers	□ □ □ □ □ □ D_6 D_5 D_4 D_3 D_2 D_1

Other address code

Address code	Description		Choice	Program code
18	Single item control: Normal receipt = 0, Single item receipt = 3		Significant number	□
01	Normal/condiment/preparation Normal item = 0, Condiment = 1, Preparation = 2		Significant number	□
03	Taxable status: See page 81.		Significant numbers	□ □ D_2 D_1
05	Enable 0 unit price.	a	No = 0 Yes = 1	□ (a+b+c)
	Enable negative price.	b	No = 0 Yes = 2	
	Hash	c	No = 0 Yes = 4	
07	Low digit limitation (LDL) for manually entered unit price.		Significant number	□
04	Open PLU (Only for PLU)		No = 0 Yes = 4	□
09	Commission 1	a	No = 0 Yes = 1	□ (a+b)
	Commission 2	b	No = 0 Yes = 2	
26	Age limitation ("00" means no limitation)		Significant number (00 ~ 99)	□ □

Taxable status

for the U.S.

Always “0”			0 → D_8
Taxable 1 status	a	No = 0 Yes = 1	□ (a+b+c) → D_7
Taxable 2 status	b	No = 0 Yes = 2	
Taxable 3 status	c	No = 0 Yes = 4	

for Canada

Always “0”			0 → D_8
Non tax = 0 Taxable 1 = 1 Taxable 2 = 2	Taxable 3 = 3 Taxable 4 = 4 Taxable 1 & 2 = 5	Taxable 1 & 3 = 6 Taxable 1 & 4 = 7	Significant number → □ → D_7

Transaction key program

Programming procedure

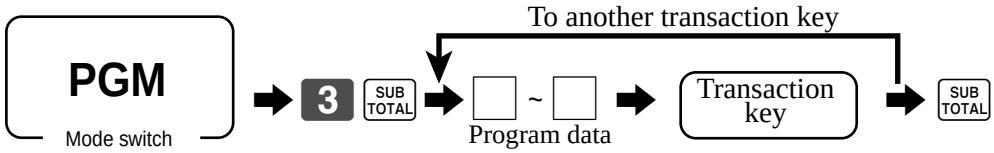

Program data

<CASH>, <CHARGE>, <CHECK>

Description		Choice	Program code
Prohibit entry of a partial payment	a	No = 0 Yes = 1	□ (a+b+c) → D_7
Prohibit the entry of the amount tendered.	b	No = 0 Yes = 2	
Force entry of the amount tendered.	c	No = 0 Yes = 4	
Print VAT breakdown. *1		No = 0 Yes = 1	□ → D_6
Always “0”			0 → D_5
High amount limit specification for subtotal and tendering amounts.		Maximum value (0 ~ 9) Number of zeros (0 ~ 9)	□□ → D_4 D_3
High amount limit specification for change amount due.		Maximum value (0 ~ 9) Number of zeros (0 ~ 9)	□□ → D_2 D_1

*1 This is valid option for Auto Cash, Single item or Currency exchange (include partial tender) as well.

<RECEIVED ON ACCOUNT>, <PAID OUT>

Description	Choice	Program code
High amount limit specification for entering amounts	Maximum value (0 ~ 9)	□□ D_4 D_3
	Number of zeros (0 ~ 9)	
Always “00”		0 0 D_2 D_1

<ADDITION (PLUS)>, <REDUCTION (MINUS)>, <COUPON>

Description		Choice	Program code
Taxable status: See page 81.			□□ D_8 D_7
Allow credit balance. (–, CPN only)	a	No = 0 Yes = 1	□ (a+b) D_6
Allow out of sales (+ only)	b	No = 0 Yes = 2	
Always “00”			0 0 D_5 D_4
High digit limitation (HDL) for manually entered unit price (“9” means NOT allow manual entry.)		Significant number	□ D_3
Commission 1	a	No = 0 Yes = 1	□ (a+b) D_2
Commission 2	b	No = 0 Yes = 2	
Always “0”			0 D_1

<PREMIUM (%+)>, <DISCOUNT (%-)>

Description		Choice	Program code
Taxable status: See page 81.			□□ D_8 D_7
Prohibit manual rate override.		No = 0 Yes = 2	□ D_6
Rounding: Round off = 0, cut off = 1, round up = 2		Significant number	□ D_5
Always “00”			0 0 D_4 D_3
Commission 1	a	No = 0 Yes = 1	□ (a+b) D_2
Commission 2	b	No = 0 Yes = 2	
Always “0”			0 D_1

<NON-ADD (#)>, <NON-ADD (#)/NO SALE>

Description	Choice	Program code
Allow mode change or clerk change after non-add registration as first transaction. (only for non-add function)	Yes = 0 No = 1	□ D_7
Always “0000”		0 0 0 0 D_6 D_5 D_4 D_3
Always “00”		0 0 D_2 D_1

<CURRENCY EXCHANGE>

Description		Choice	Program code
Define amount symbol. (0, 1 ~ 2) ("0" means local currency symbol.)		Significant number	□ D_7
Define foreign currency totalizer. (0, 1 ~ 2) ("0" treats as "1".)		Significant number	□ D_6
Rounding: Round off = 0, cut off = 1, round up = 2		Significant number	□ D_5
Always "0"			0 D_4
Monetary mode (0 ~ 9): 0.00 = 2, 0.0 = 1, 0 = 0, 0.000 = 3		Significant number	□ D_3
Monetary symbol for decimal	a	Decimal = 0 Comma = 1	□ (a+b) D_2
Monetary symbol for separator	b	Comma = 0 Decimal = 4	
Always "0"			0 D_1

<MULTIPLICATION / FOR>

Description	Choice	Program code
Multiplication procedure: (<X> only) ① Quantity × Amount, ② Amount × Quantity	① = 0 ② = 1	□ D_6
Rounding: Round off = 0, cut off = 1, round up = 2	Significant number	□ D_5
Always "0000"		0 0 0 0 D_4 D_3 D_2 D_1

<AGE VERIFICATION>

Description	Choice	Program code
Print when this key is registered.	Yes = 0 No = 1	□ D_{10}
Always "000"		0 0 0 D_9 D_8 D_7
Always "000000"		0 0 0 0 0 0 D_6 D_5 D_4 D_3 D_2 D_1

<SUBTOTAL>, <MERCHANDISE SUBTOTAL>

Description	Choice	Program code
Print when key is pressed.	No = 0 Yes = 4	□ D_6
Always "00000"		0 0 0 0 0 D_5 D_4 D_3 D_2 D_1

<TAX SHIFT>

Description	Choice	Program code
Taxable status (00, 01 ~ 04) ("00" means taxable 1.)	Significant numbers	□ □ D_8 D_7
Always "000000"		0 0 0 0 0 0 D_6 D_5 D_4 D_3 D_2 D_1

<CREDIT>

Description		Choice	Program code
Prohibit entry of a partial payment	a	No = 0 Yes = 1	□ (a+b+c) D_7
Prohibit the entry of the amount tendered.	b	No = 0 Yes = 2	
Force entry of the amount tendered.	c	No = 0 Yes = 4	
Print VAT breakdown.		No = 0 Yes = 1	□ D_6
Always “0”			0 D_5
High amount limit specification for subtotal and tendering amounts.		Maximum value (0 ~ 9) Number of zeros (0 ~ 9)	□ □ D_4 D_3
Always “0”			0 D_2
Specify credit in drawer total in the fixed totalizer.		Significant number (0 ~ 4)	□ D_1

<NEW BALANCE>

Description	Choice	Program code
Cancel the transaction if no item is registered.	No = 0 Yes = 4	□ D_{10}
Always “00”		0 0 D_9 D_8
Function after normal (not in check tracking) registration: Operation error = 0, Auto Cash = 1	Significant number	□ D_7
Print VAT breakdown.	No = 0 Yes = 1	□ D_6
Always “00000”		0 0 0 0 0 D_5 D_4 D_3 D_2 D_1

<ARRANGEMENT>

Description	Choice	Program code
Treat numeric entry as arrange table number	No = 0 Yes = 1	□ D_7
Arrangement table link number	Significant numbers	□ □ □ □ □ □ D_6 D_5 D_4 D_3 D_2 D_1

<TEXT RECALL>

Description	Choice	Program code
Order character file record number	Significant numbers	□ □ D_6 D_5
Always “0000”		0 0 0 0 D_4 D_3 D_2 D_1

Clerk program

Clerk number, check number programming

Programming procedure

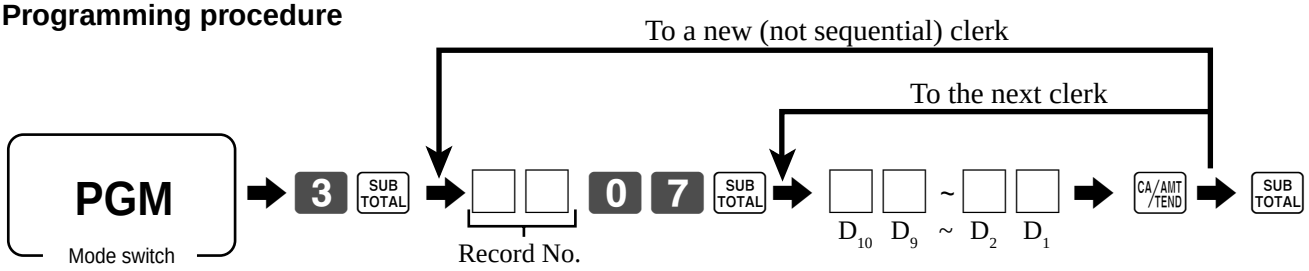

Program Data

Description	Choice	Program code
Check number for clerk interrupt	Significant numbers	D10 D9 D8 D7 D6 D5
Clerk secret number	Significant numbers	D4 D3 D2 D1

Clerk other programming

Programming procedure (individual)

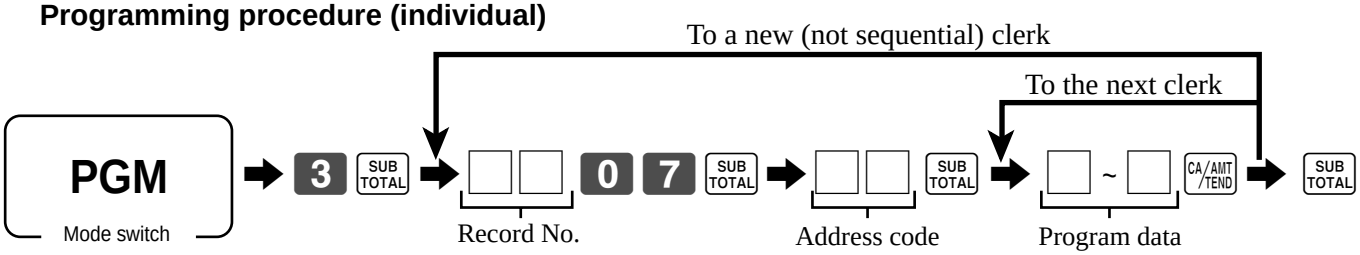

Program data

Address code 67 (Clerk control)

Description	Choice	Program code
Training clerk	No = 0 Yes = 1	D6
Always “00000”		0 ~ 0 D5~ D1

Address code 68 (Commission rate)

Description	Choice	Program code
Commission rate 1 (integer: 00 ~ 99)	Significant numbers	D8 D7
Commission rate 1 (decimal: 00 ~ 99)	Significant numbers	D6 D5
Commission rate 2 (integer: 00 ~ 99)	Significant numbers	D4 D3
Commission rate 2 (decimal: 00 ~ 99)	Significant numbers	D2 D1

Set menu programming

Programming set menu includes two steps;
① Assigning PLUs and flat-PLUs to set menu tables. (These items are treated as “child” PLU.)
② Assigning set menu tables to “parent” PLU
(When a “parent” PLU is registered, all “child” PLUs in the designated set menu table are registered.)

Programming procedure

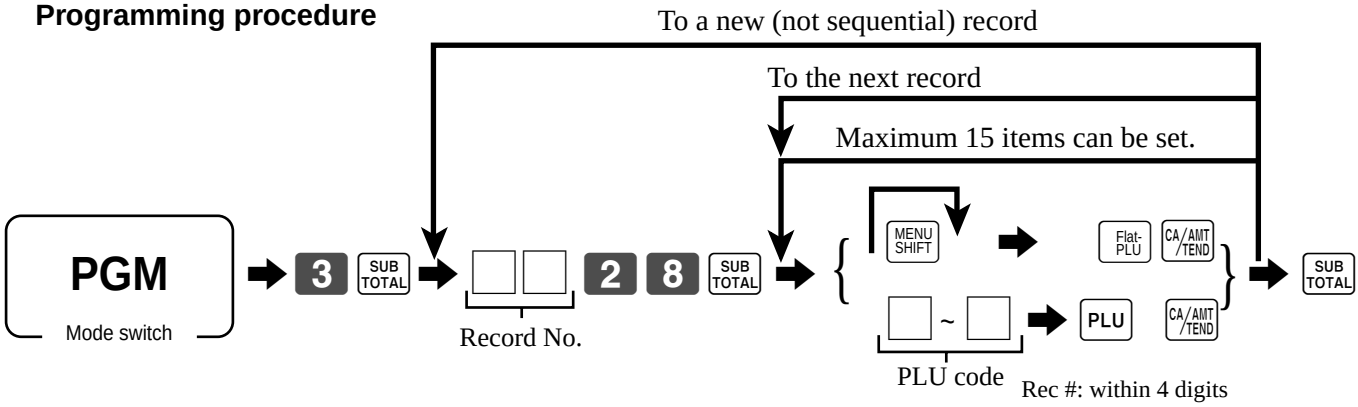

Arrangement programming

Programming procedure

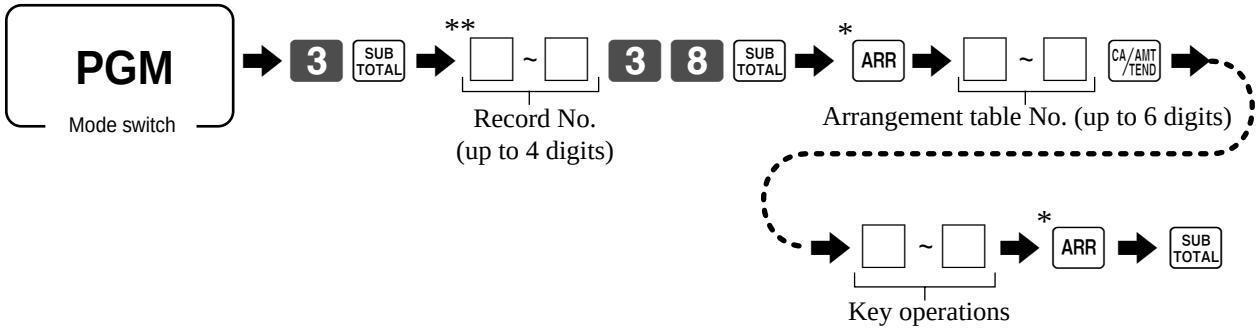

* The same ARR should be pressed.

** Vacant record search: If you want to set an arrangement program to a new record, “vacant record search” is possible. (enter 0 0 0 0 instead of entering a record No.)

Keyboard layout change

You can change the keyboard layout or allocate some new functions on the keyboard.
Note: Before changing the keyboard layout, you must issue the daily and periodic reset reports.

Configuration of the physical key layout

The shadowed keys are fixed function keys. You cannot change the function of these keys.

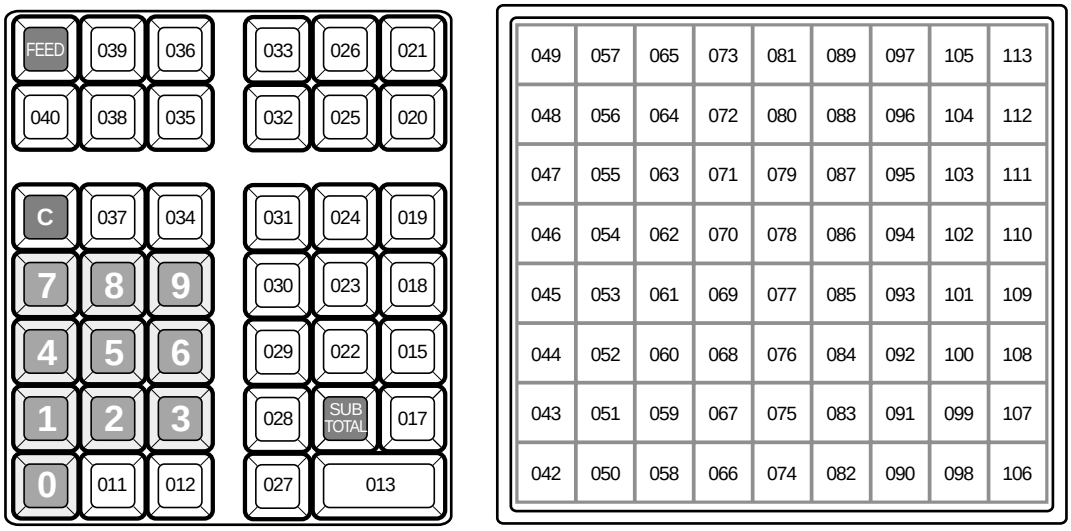

Note: The CA/AMT =/TEND key in programming procedures mean the #-013 key on the keyboard.

Programming the function of each key

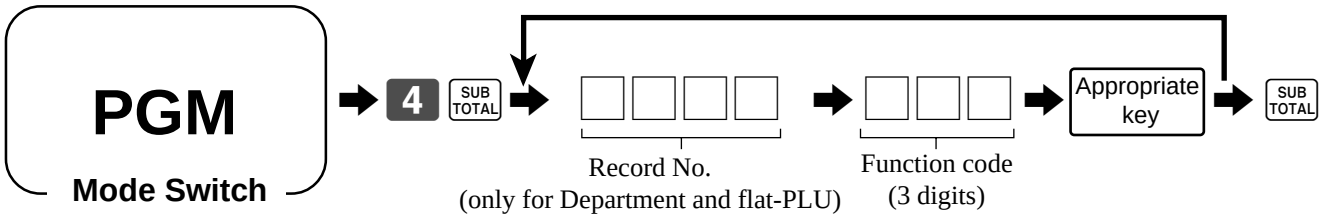

Content	Function code
Cash/amount tendered	001
Charge	002
Check tendered	003
Credit	004
New balance	006
Text recall	010
Tip	015
Received on account	020
Paid out	021
Reduction (Minus)	027
Discount	028
Addition (Plus)	029
Premium	030
Manual tax	032
Refund	033
Error correct/cancel	034
Void	035
Receipt	038

Content	Function code
Non-add	040
Non-add/no sale	041
No sale	042
Customer number	043
Arrangement	044
Currency exchange	045
VAT	046
PLU	048
Price	049
Department	051
Tax shift	057
Flat PLU	063
Menu shift	064
Open	067
Clerk number	072
Subtotal	075
Receipt on/off	076
Merchandise subtotal	080

Content	Function code
Multiplication	082
Quantity/For	083
VAT	089
New check	091
Old check	092
New/old check	093
Add check	094
Age verification	106
Open check	117
Help	141
Sign off	150
Tax Program	151
Dept no./Dept shift	152
Cancel	236
“00” double zero *1	096
“000” triple zero *1	097
“.” decimal point *1	098

*1 Two zero key, three zero key, decimal point key can only be allocated in #-011 and #-012 position.

Printing read/reset reports

• Daily sales read report (“X” mode)

You can print read reports at any time during the business day without affecting the data stored in the cash register's memory.

• Daily sales reset report (“Z” mode)

You should print reset reports at the end of the business day.

Important!

- The reset operation issues a report and also clears all sales data from the cash register's memory.
- Be sure to perform the reset operations at the end of each business day. Otherwise, you will not be able to distinguish between the sales data for different dates.

To print the individual department, PLU read report

This report shows sales for specific departments or PLUs.

OPERATION **DISPLAY**

1. Turn to X mode.

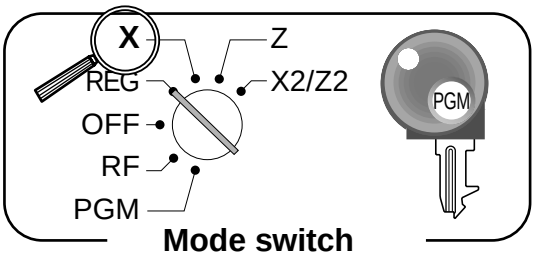

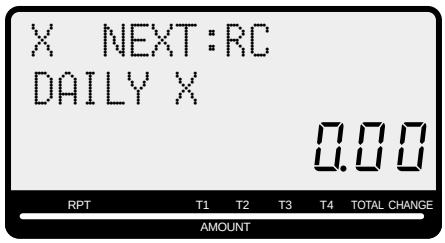

2. Specify a department / PLU / flat PLU.

   - Specifying a department
     [1], [2], [DEPT# DEPT SHIFT] [3]...
   - Specifying a PLU
     [1] [PLU], [1] [0] [PLU]...
   - Specifying a flat-PLU
     [001], [002], [MENU SHIFT] [003]...

3. Press <ST> to exit this report.

REPORT

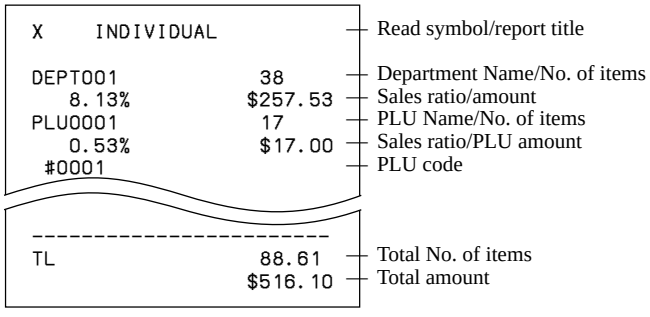

To print daily read reports (except open check and electronic journal)

You can select the appropriate report shown in the display.

OPERATION **DISPLAY**

1. Turn to X mode.

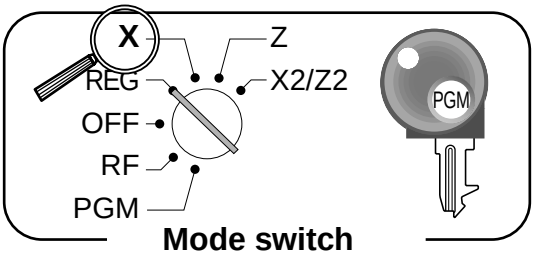

Mode switch

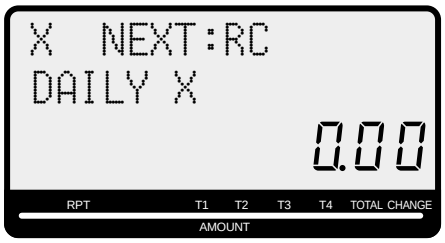

2. Select report you want to get by the <RC> key.

3. Press <CASH> to print report. *1

*1 If money declaration is necessary, count how much cash is in the drawer and input this amount (up to 10 digits) and press <#> key.
The cash register will automatically compare the input with the cash in drawer in the memory and print the difference between these two amounts.
Note that if money declaration is required by programming, you cannot skip this procedure.

To print electronic journal read report

OPERATION

1. Turn to X mode.
2. Select electronic journal report by the <RC> key.
3. Press <CASH> key, enter start date and/or consecutive no. and press <CASH> key.

To print open check read report

OPERATION

1. Turn to X mode.
2. Select open check report by the <RC> key.
3. Press <CASH> key

4-a. Press <CASH> key to issue all open check.
4-b. Enter check no. and press <NEW> / <OLD> key to issue indidual check report.
4-c. Enter clerk no. and press <CASH> key to issue check by clerk.

To print daily reset reports (except open check)

You can select the appropriate report shown in the display.

OPERATION **DISPLAY**

1. Turn to Z mode.

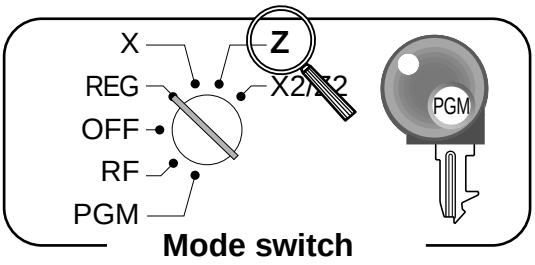

Mode switch

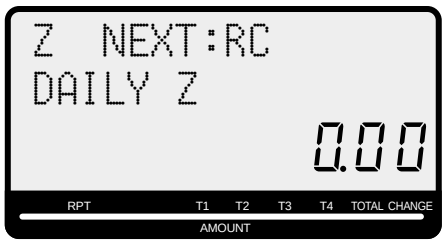

2. Select report you want to get by the <RC> key.

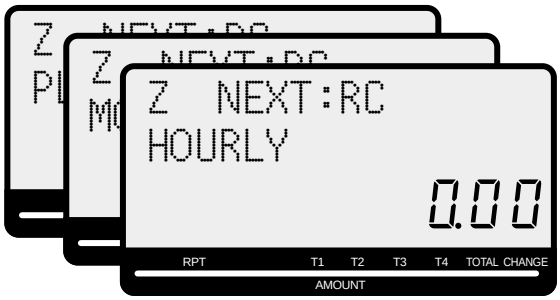

3. Press <CASH> to print report. *1

*1 If money declaration is necessary, count how much cash is in the drawer and input this amount (up to 10 digits) and press <#/NS> key.
The cash register will automatically compare the input with the cash in drawer in the memory and print the difference between these two amounts.
Note that if money declaration is required by programming, you cannot skip this procedure.

To print open check reset report

OPERATION

1. Turn to Z mode.
2. Select open check eport by the <RC> key.
3. Press <CASH> key

4-a. Enter check no. and press <NEW> / <OLD> key to issue indidual check report.
4-b. Enter clerk no. and press <CASH> key to issue check by clerk.

Read / reset report sample

Daily report

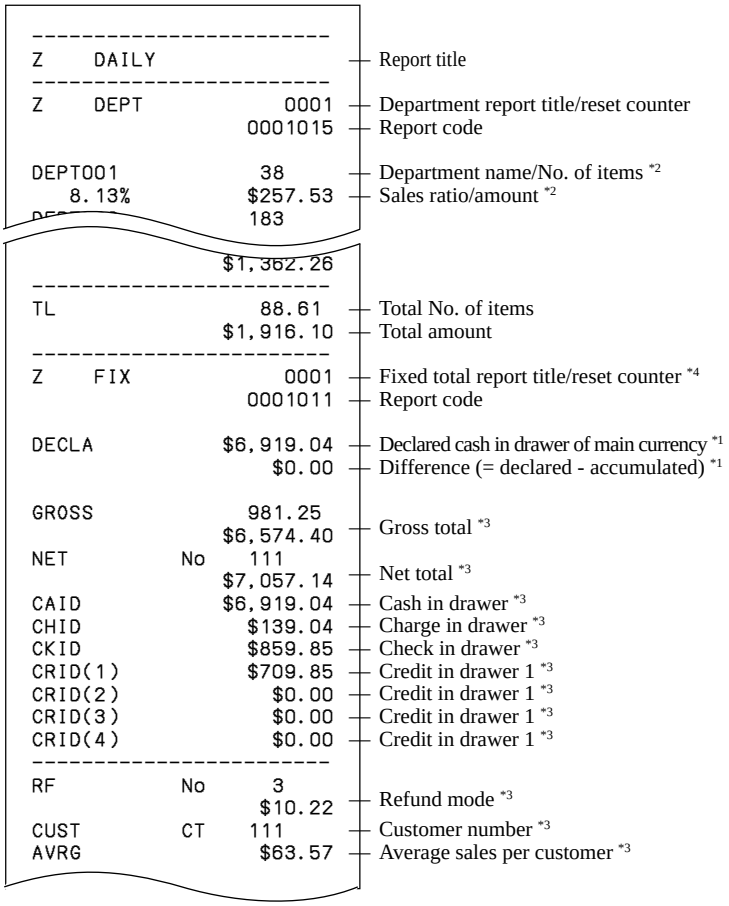

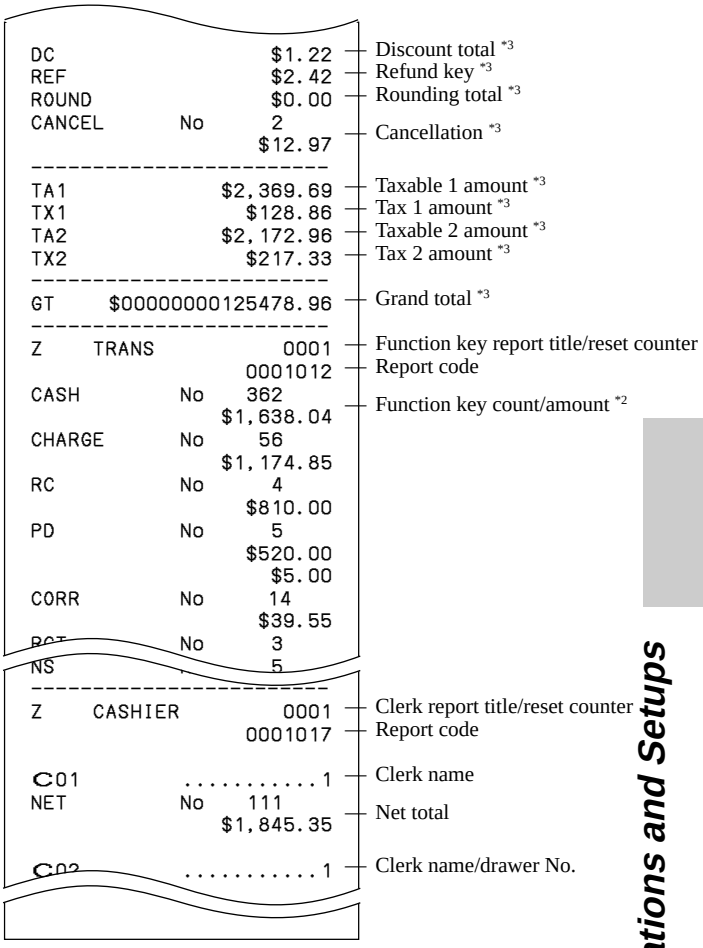

*1 Zero totalled departments/functions (the amount and item numbers are both zero) are not printed.

*2 These items can be skipped by programming.

Flash report

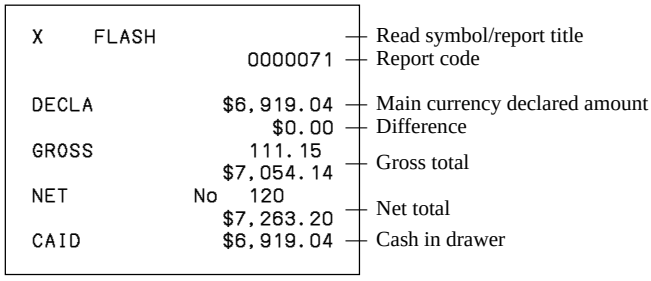

PLU report

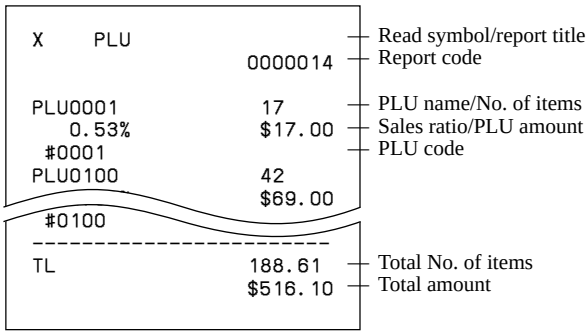

Hourly report

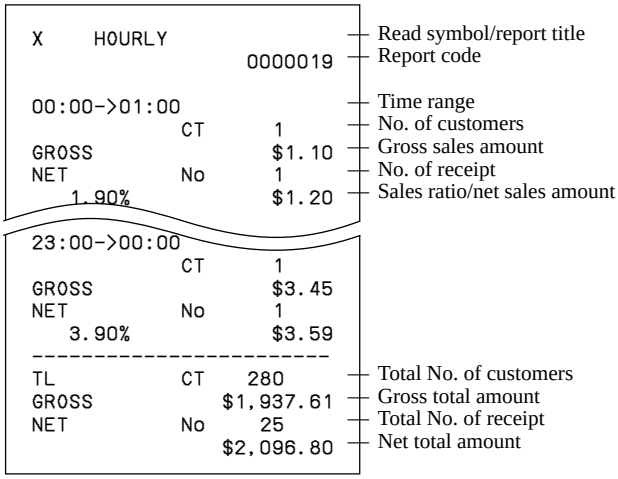

Monthly report

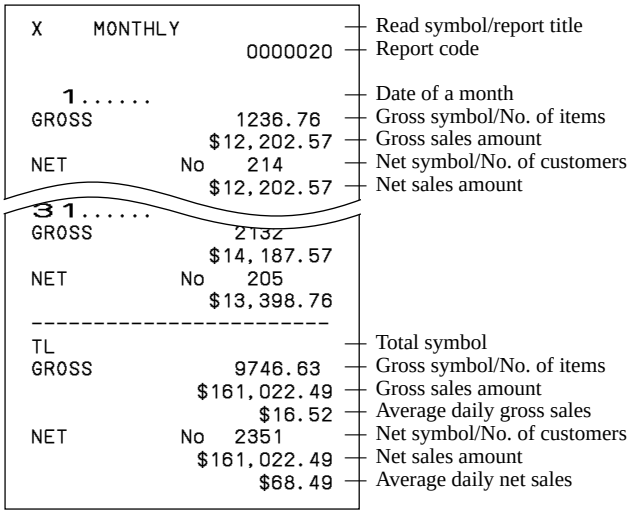

Group report

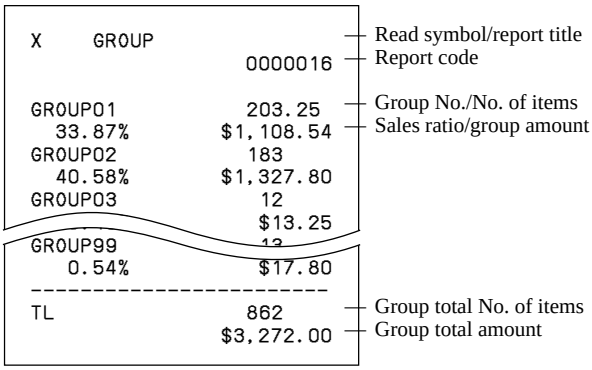

Open check report

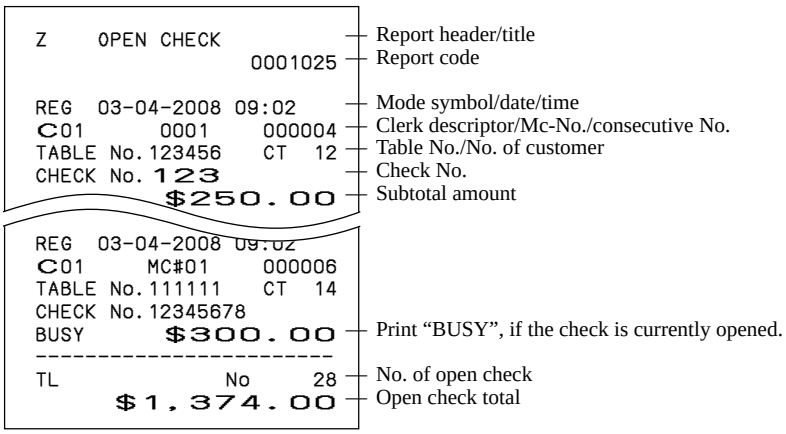

Electronic journal report

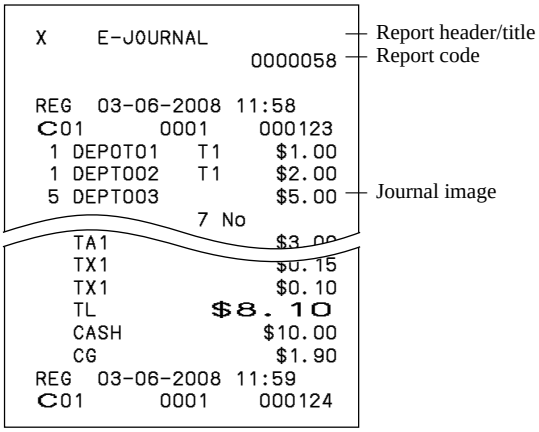

• Periodic sales read report (“X2” mode)

You can print read reports at any time during the business day without affecting the data stored in the cash register's memory.

• Periodic sales reset report (“Z2” mode)

You should print reset reports at the end of the business day.

To print the periodic 1/2 sales read/reset reports

These reports show sales breakdowns of sales by any two kinds of period you want.

OPERATION **DISPLAY**

1. Turn to X2/Z2 mode.

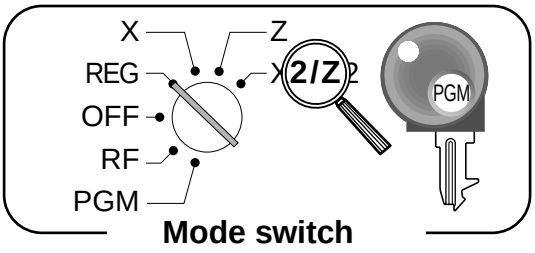

Mode switch

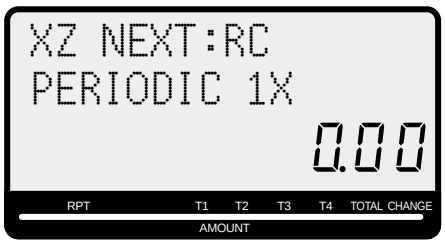

2. Select report you want to get by the <RC> key.

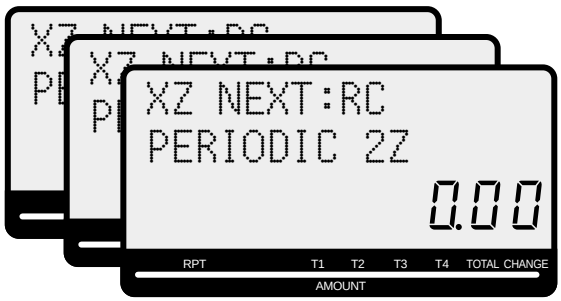

3. Press <CASH> to print report.

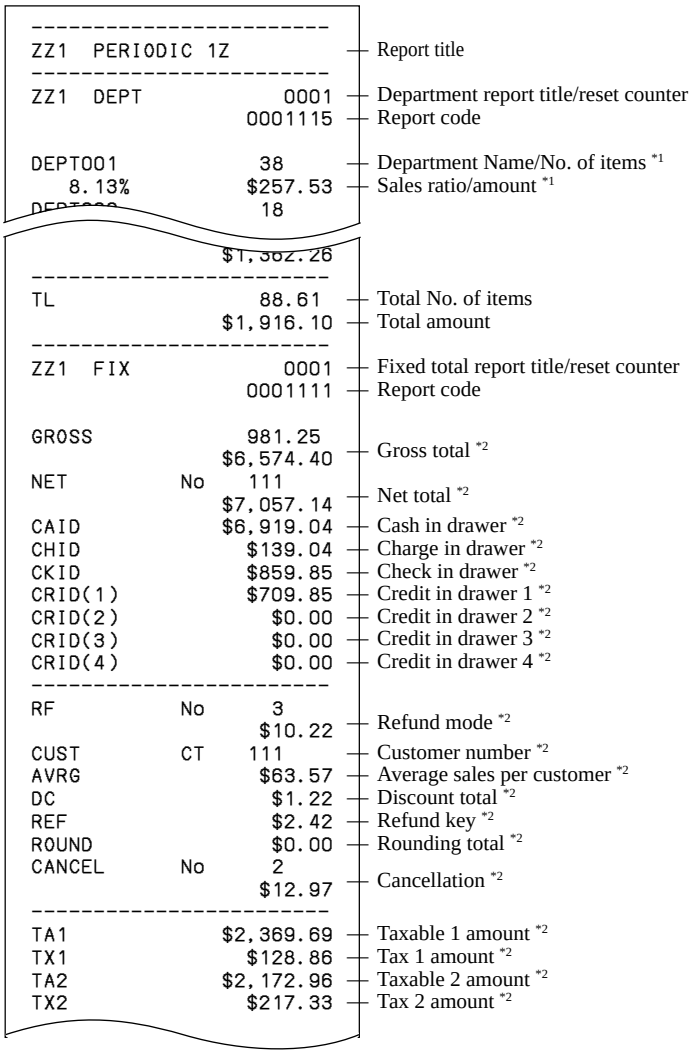

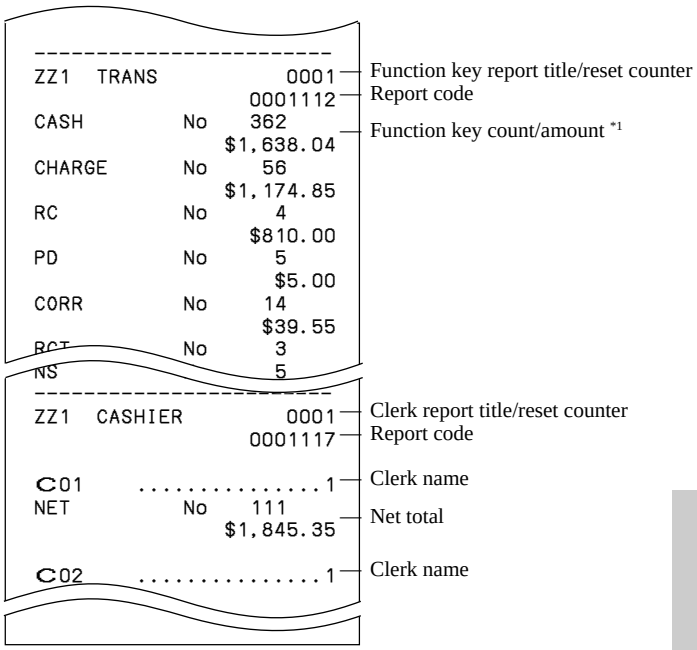

*1 Zero totalled departments/functions (the amount and item numbers are both zero) are not printed.

*2 These items can be skipped by programming.

Reading the cash register's program

To print unit price/rate program (except PLU)

OPERATION	REPORT

1. Turn to PGM mode.
2. Enter <1> and press <ST> key.
3. Press <ST> key.

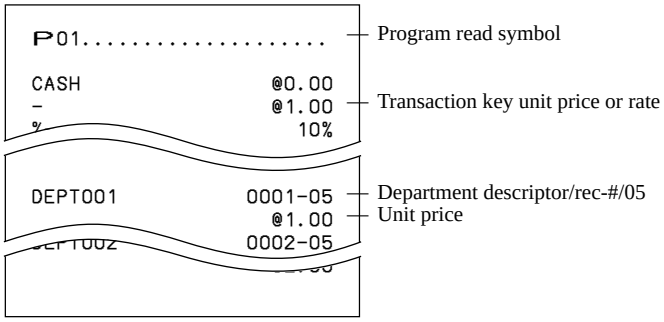

To print key descriptor, name, message program (except PLU)

OPERATION	REPORT

1. Turn to PGM mode.
2. Enter <2> and press <ST> key.
3. Press <ST> key.

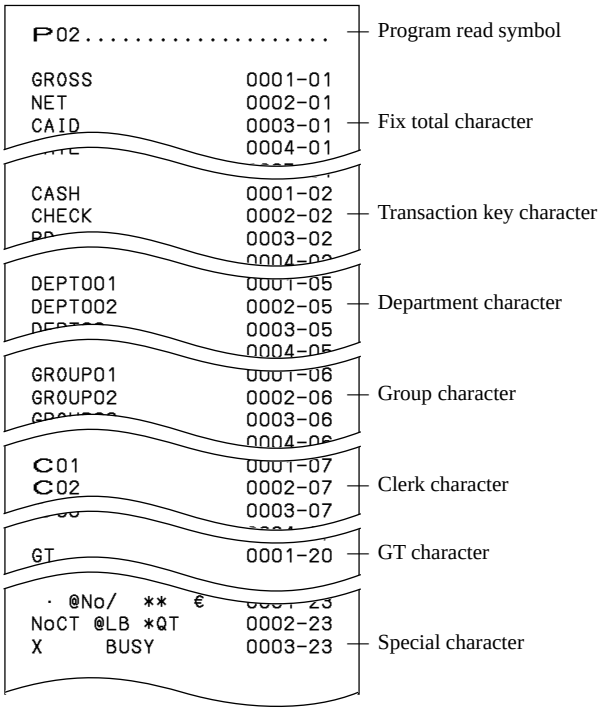

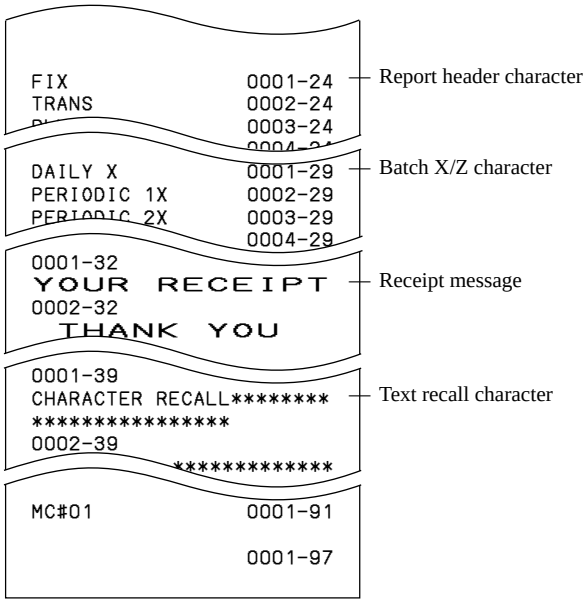

To print the machine program (except PLU)

OPERATION **REPORT**

1. Turn to PGM mode.
2. Enter <3> and press <ST> key.
3. Press <ST> key.

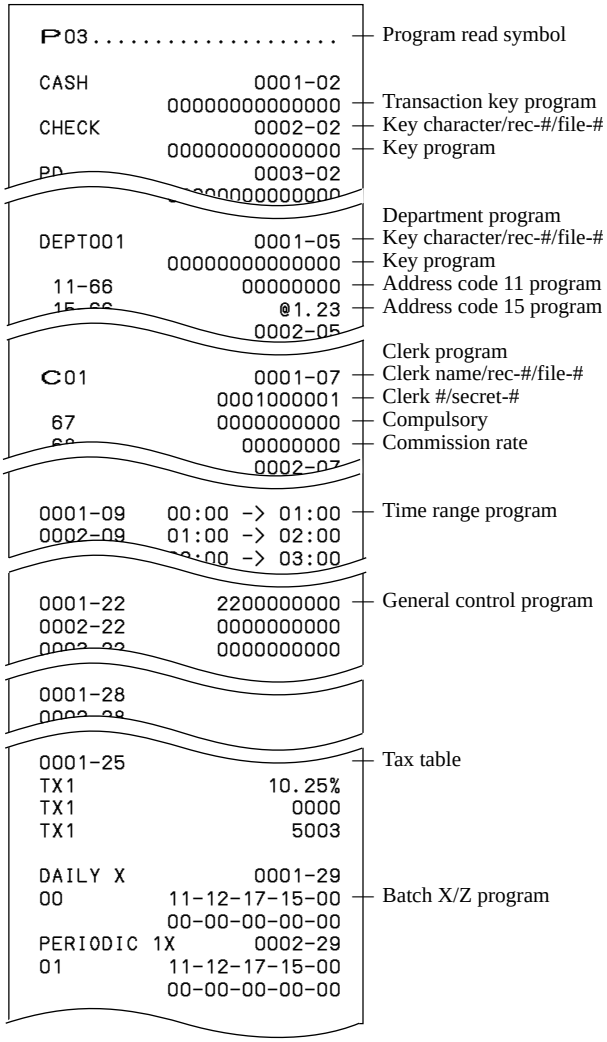

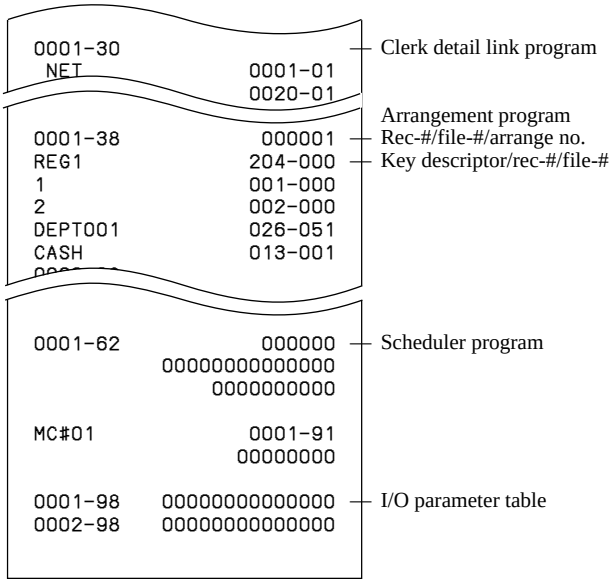

To print the PLU unit price

OPERATION

1. Turn to PGM mode.
2. Enter <6> and press <ST> key.
3. Enter <104> and press <ST> key.
4. Enter <start rec-#> and <CA> key.
5. Enter <end rec-#> and <CA> key.

REPORT

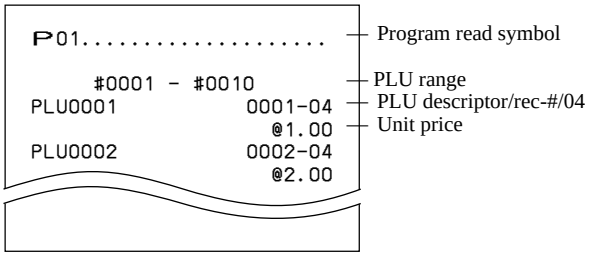

To print the PLU descriptor

OPERATION

1. Turn to PGM mode.
2. Enter <6> and press <ST> key.
3. Enter <204> and press <ST> key.
4. Enter <start rec-#> and <CA> key.
5. Enter <end rec-#> and <CA> key.

REPORT

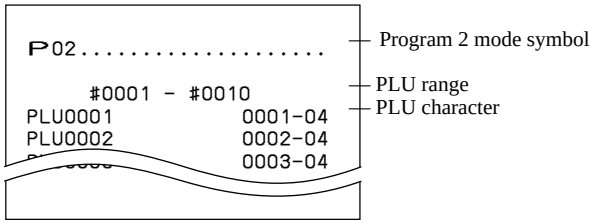

To print the PLU program

OPERATION

1. Turn to PGM mode.
2. Enter <6> and press <ST> key.
3. Enter <304> and press <ST> key.
4. Enter <start rec-#> and <CA> key.
5. Enter <end rec-#> and <CA> key.

REPORT

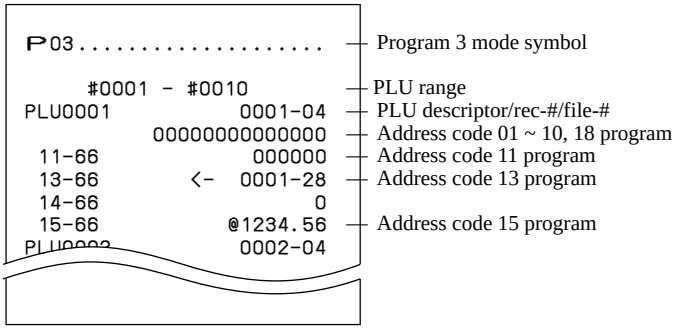

To print the key allocation program

OPERATION

1. Turn to PGM mode.
2. Enter <4> and press <ST> key.
3. Press <ST> key.

REPORT

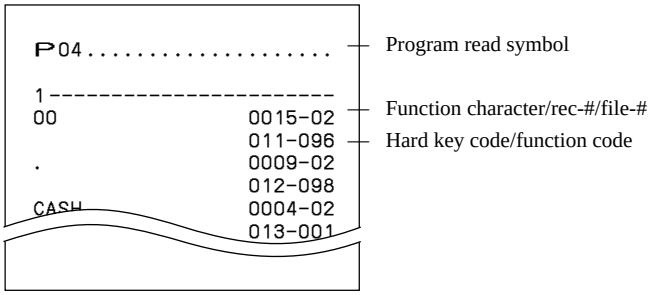

This section describes what to do when you have problems with operation.

When an error occurs

Errors are indicated by an error codes. When this happens, you can usually find out what the problem is as illustrated below.

Press [C] and check the appropriate section of this manual for the operation you want to perform.

Error code	Message	Meaning	Action
E001	Wrong mode	Mode switch position changed before finalization.	Return the mode switch to its original setting and finalize the operation.
E003	Wrong operator	The signed on clerk differs from the clerk performed the tracking check registration.	Input correct check number or assign the proper clerk number.
E004	Error INIT/FC	Initialization or unit lock clear operation in progress.	Complete operation.
E008	Please sign on	Registration without entering a clerk number.	Enter a clerk number.
E010	Close the drawer	The drawer is left open longer than the program time (drawer open alarm).	Close the drawer.
E011	Close the drawer	Attempt to register while the cash drawer is open.	Shut the cash drawer.
E016	Change back to REG mode	Two consecutive transactions attempted in the refund mode.	Switch to another mode and then back to the RF mode for the next transaction.
E017	Enter CHK/TBL number	Attempt made to register an item without inputting a check number.	Input a check number.
E018	Enter Table number	Attempt made to register an item without inputting a table number.	Input a table number.
E019	Enter number of customers	Finalize operation attempted without entering the number of customer.	Enter the number of customer.
E021	No DEPT Link	No department linked PLU is registered.	Correct the program.
E026	Enter condiment/ preparation PLU	No condiment/preparation PLU is registered.	Register condiment/preparation PLU.
E029	In the tender operation	Item registration is prohibited, while partial tender.	Finalize the transaction.
E031	Press ST key	Finalization of a transaction attempted without confirming the subtotal.	Press <SUBTOTAL>.
E033	Enter tendered amount	Finalize operation attempted without entering amount tender.	Enter the amount tendered.
E035	Change amount exceeds limit	Change amount exceeds preset limit.	Input amount tendered again.
E036	Remove money from the drawer	Contents of the drawer exceed programmed limit.	Perform paidout operation.
E037	Digit or amount limitation over	High amount lock out/low digit lock out error	Enter correct amount.
E038	Perform money declaration	Read/reset operation without declaring cash in drawer. This error appears only when this function is activated.	Perform money declaration.
E040	Issue guest receipt	Attempt to register a new transaction without issuing a guest receipt.	Issue a guest receipt.
E046	REG buffer full	Registration buffer full.	Finalize the transaction.
E049	CHECK memory full	Check tracking index memory full.	Finalize and close the check number currently used.
E050	DETAIL memory full	Check tracking detail memory full.	Finalize and close the check number currently used.
E051	CHK/TBL No. is occupied	Attempt to made use <New Check> to open a new check using a number that is already used for an existing check in check tracking memory.	Finalize and close the check that is currently under the number that you want to use or use a different check number.
E053	CHK/TBL No. is not opened	Attempt made to use <Old Check> reopen a new check using a number that is not used for an existing check in check tracking memory.	Use the correct check number (if you want to reopen a check that already exists in check tracking memory) or use <New Check> to open a new check.
E075	Negative balance cannot be finalized	Attempt to finalize a transaction when balance is less than or equal to zero.	Register item(s) until the balance becomes positive amount.

Error code	Message	Meaning	Action
E101	PLU maintenance file full. Press <#2> to exit	Scanning PLU direct maintenance/batch maintenance file becomes full.	Terminate the maintenance.
E103	PLU Code is not exist. Input the PLU Code	PLU code is not existed in the file.	Enter proper PLU code.
E105	PLU file full	Scanning PLU file full	Modify the designated item.
E106	Item exists in the PLU FILE	The designated item has already existed in the scanning PLU file.	
E112	Close the journal platen arm	The journal platen arm is opened.	Close the journal platen arm.
E114	Close the receipt platen arm	The receipt platen arm is opened.	Close the receipt platen arm.
E139	Negative balance is not allowed	Attempt to register <–> or <CPN> when the balance becomes negative.	Enter proper minus/coupon amount.
E146	Arrangement file full	Arrangement file is full.	Set the arrangement properly.
E200	Insert RAC	RAC is set.	Set RAC.
E201	Illegal Format	Illegally formatted RAC	Format the RAC.
E202	File not found	The designated file is not found in the RAC.	Enter proper file name.
E205	File already exist.	Can not write, because designated file has already been in the RAC.	Check the operation and retry.

When the ✳ sign appears on the display

• Electronic journal memory near-end and memory full:

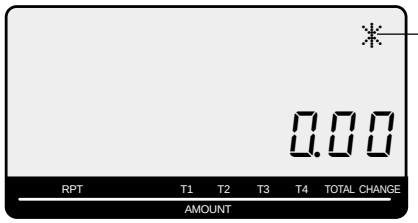

Electronic journal memory near end memory full symbol

Important!

•When the register shows this sign, issue electronic journal read report (if necessary) and reset this memory immediately.

When the cash drawer does not open!

In case of power failure or the machine is in malfunction, the cash drawer does not open automatically. Even in these cases, you can open the cash drawer by pulling drawer release lever (see below).

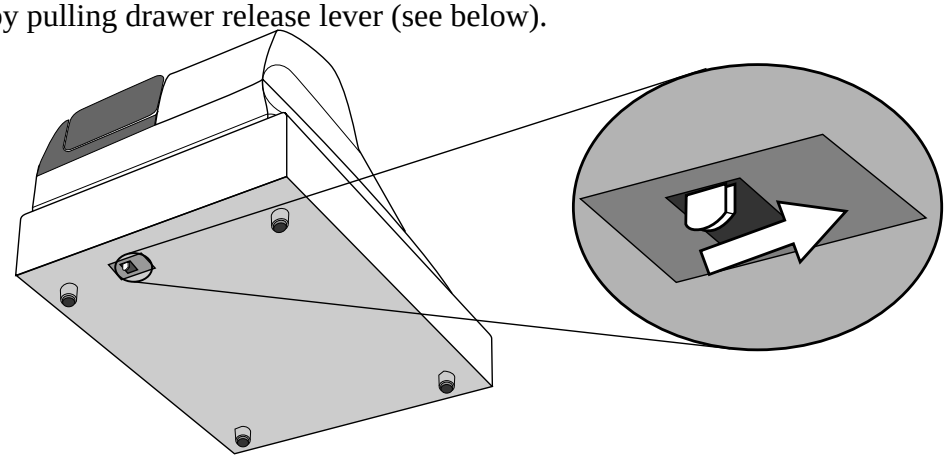

Important!

The drawer will not open, if it is locked with a drawer lock key.

When the register does not operate at all

Perform the following check whenever the cash register enter an error condition as soon as you switch it on. The results of this check are required by service personnel, so be sure to perform this check before you contact a CASIO representative for servicing.

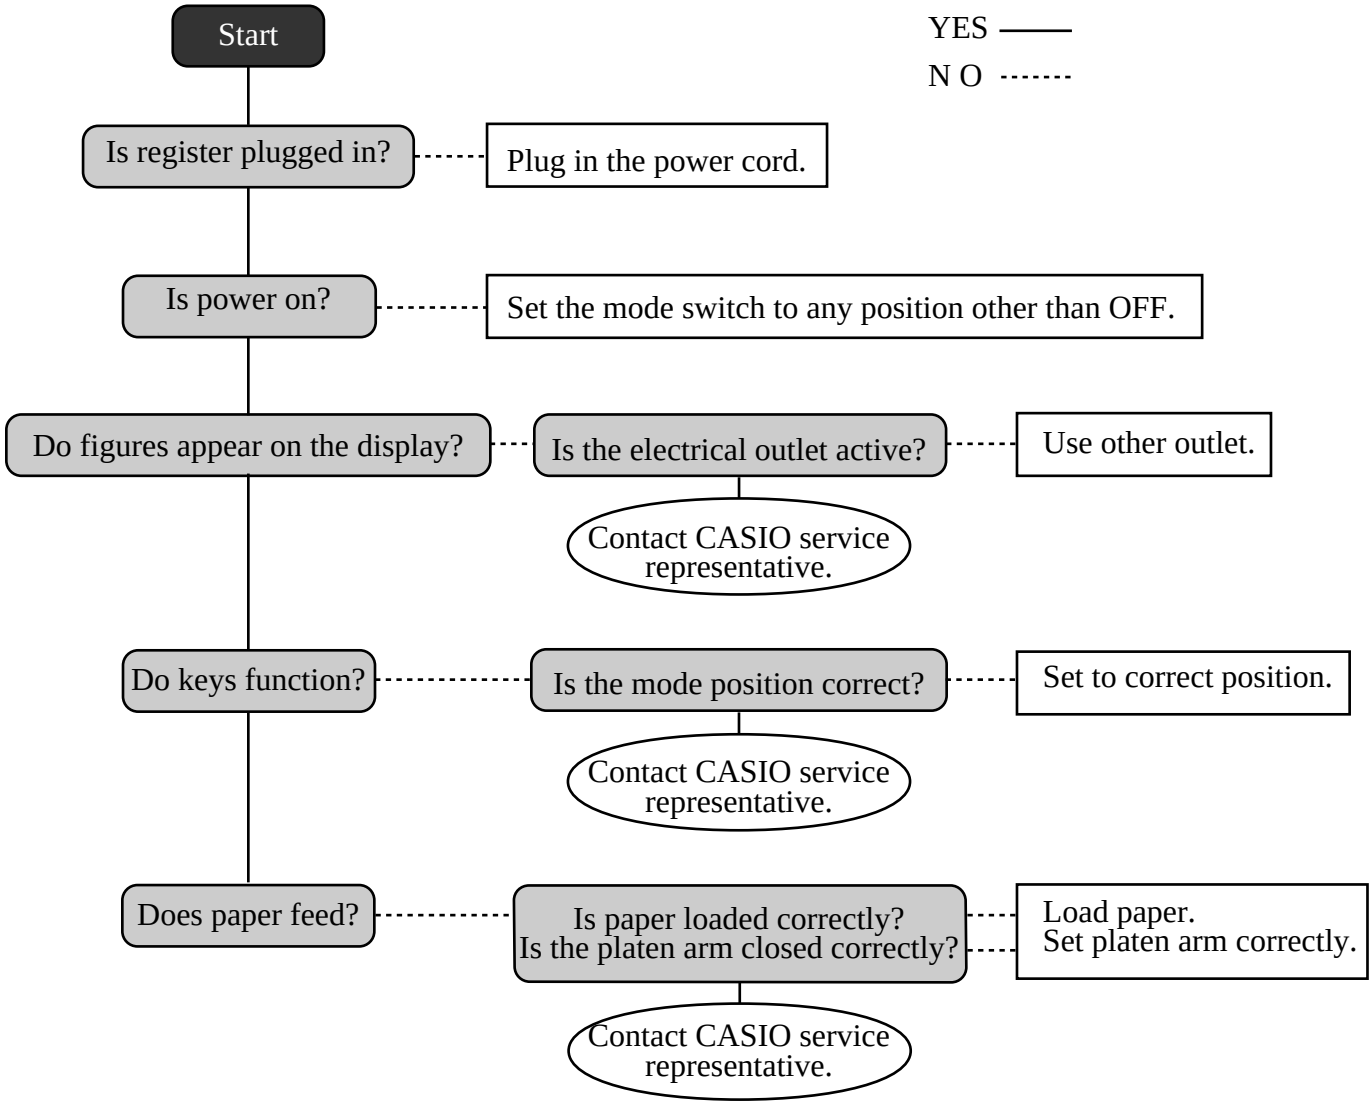

Clearing a machine lock up

If you make a mistake in operation, the cash register may lock up to avoid damage to programs and preset data. Should it happens, you can use the following procedure to clear the lock up without losing any data.

1 Power off the register.
2 Insert the PGM key in the mode switch.
3 Press down [FEED], and turn the mode switch to PGM mode.
4 The display shows 0.00, then release [FEED].
5 Press [SUB TOTAL], then issue a receipt.

In case of power failure

If the power supply to the cash register is cut by a power failure or any other reason, simply wait for power to be restored. The details of any ongoing transaction as well as all sales data in memory are protected by the memory backup batteries. (This is the reason to install the batteries.)

- Power failure during a registration
  The subtotal for items registered up to the power failure is retained in memory. You will be able to continue with the registration when power is restored.
- Power failure during printing a read / reset report
  The data already printed before the power failure is retained in memory. You will be able to issue a report when power is restored.
- Power failure during printing of a receipt / journal
  Printing will resume after power is restored. A line that was being printed when the power failure occurred is printed in full.
- Other
  The power failure symbol is printed and any item that was being printed when the power failure occurred is reprinted in full.

Important!

Once receipt / journal printing or printing of a report starts, it can be stopped only by interruption of power to the cash register.

When the L sign appears on the display

About the low battery indicator…

The following shows the low battery indicator.

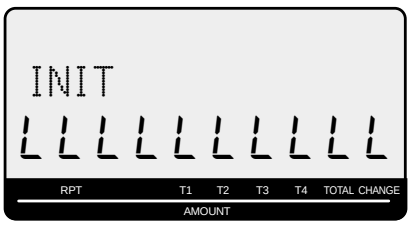

If this indicator appears when you switch the cash register on, it can mean one of three things:

- No memory backup batteries are loaded in the cash register.
- The power of the batteries loaded in the unit is below a certain level.
- The batteries loaded in the unit are dead.

Important!

Whenever the low battery indicator appears on the display, load a set of two new batteries as soon as possible. If there is a power failure or you unplug the cash register when this indicator appears, you will lose all of your sales data and settings.

BE SURE TO KEEP THE POWER CORD OF THE CASH REGISTER PLUGGED IN WHENEVER YOU REPLACE THE BATTERIES.

To replace journal paper

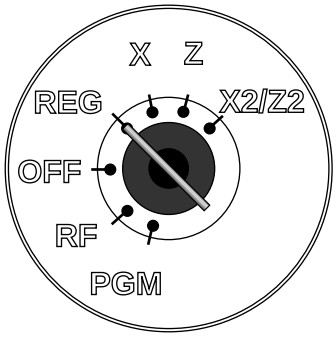

Step 1

Set the mode switch to the REG position and remove the printer cover.

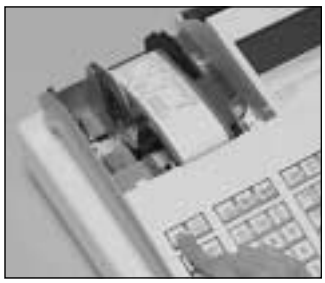

Step 2

Press FEED to feed about 20 cm of paper.

Step 3

Cut the journal paper at the point where nothing is printed.

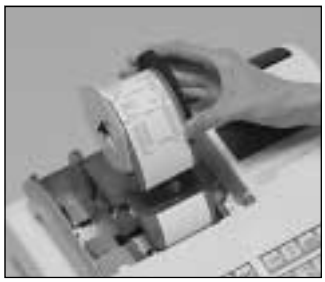

Step 4

Remove the journal take-up reel from its holder.

Step 5

Remove the paper guide from the take-up reel.

Step 6

Slide the printed journal from the take-up reel.

Step 7

Open the platen arm.

Step 8

Remove the old paper roll from the cash register.

Step 9

Load new paper.

Go to the step 3 described on page 12 of this manual.

To replace receipt paper

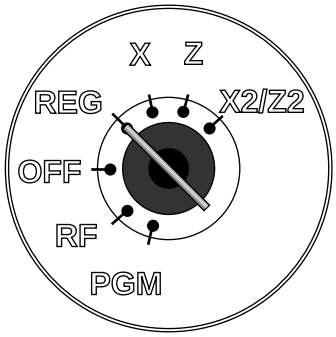

Step 1

Set the mode switch to the REG position and remove the printer cover.

Step 2

Open the platen arm.

Step 3

Remove the old paper roll from the cash register.

Step 4

Load new paper.

Go to the step 3 described on page 11 of this manual.

Options

P-5880T roll paper

WT-90, 91 wetproof cover

The optional wetproof cover protects the keyboard from moisture damage.

Consult your CASIO dealer for details.

Specifications

Input method
- Entry: 10-key system, buffer memory 8 keys (2-key roll over)
- Department: Full key system

Display
- Main: Amount 10 digits (zero suppression); No. of repeats, total, change, transaction indicator
  Descriptor 16 digits × 2 lines; item descriptor, No. of items, mode, clerk name
- Customer: Amount 8 digits (zero suppression)

Printer
- Receipt / Journal: Thermal alpha-numeric system 24 digits
  Receipt: Store name or slogan is printed automatically / with receipt on/off key
  Journal: Automatic take up roll winding
- Paper roll: 58 (W) × 80 (D) mm
- Paper thickness: 0.06 ~ 0.085 mm
- Paper feed: Separate for receipt and journal
- Print speed: About 14 l/s

Listing capacity
- Amount: 99999999
- Quantity: 9999.999
- Tendered amount: 9999999999
- Percent: 99.99
- Tax rate: 9999.9999
- Numbers: 9999999999999999

Chronological data
- Date print: Automatic date printout on receipt or journal, automatic calendar
- Time print: Automatic time printout on receipt or journal, 24-hour system/12-hour system

Alarm

Key catch tone, error alarm, sentinel alarm

Memory protection battery

The effective service life of memory protection batteries (two new size AA alkaline batteries) is approximately one year from installation into the machine.

Power supply/power consumption

See the rating plate.

Operation temperature

0˚C ~ 40˚C (32˚F ~ 104˚F)

Humidity

10 ~ 90%

Dimensions and weight

198mm (H) × 330mm (W) × 360mm (D) / 5.5kg …with small size drawer
(7.8" (H) × 13" (W) × 14.1" (D) / 12lbs. 2oz.)

Category	No. of Totalizers	Contents				Periodic Totalizer
		Amount (10 digits)	No. of items (4 digits)	Count (4 digits)	No. of customers (4 digits)	
Department	200	✔ *1	✔ *3			✔
PLU	2000	✔ *1	✔ *3			
Hourly sales	24	✔ *1			✔ *4	
Monthly	31	✔ *1			✔ *4	
Clerk	30	✔ *1			✔ *4	
Transaction key & fix total	--	✔ *1 or	✔ *4 or	✔ *4 or	✔ *4	✔
Non resettable grand sales total	1	✔ *2				
Reset counter	8			✔ *4		✔
Consecutive No.	1			✔ *4		

*1: -9,999,999.99 ~ 99,999,999.99 *2: -999,999,999.99 ~ 9,999,999,999.99 *3: -999.99 ~ 9999.99 *4: 1 ~ 9999

**** Specifications and design are subject to change without notice.***

A

add check 26, 56
addition 26, 61, 82
age limitation 78, 81
age verification 26, 53, 83
allocatable function 26
alphabet key 63, 64
arrangement 26, 60, 84, 86

B

backlight 76
bottom message 28

C

cancel 24, 26, 46
CAPS key 63
cash 24, 26, 81
cash in drawer 47
change 31
character enter key 63, 64
character keyboard 63
character manual input 63
charge 26, 40, 81
check 24, 26, 40, 81
check adding 54
check closing 55
check opening 54
check tracking 54, 75
clear 24
clear key 63, 64
clerk 48
clerk function 74
clerk interrupt 58, 74
clerk name 67
clerk number 24, 26, 48, 85
commercial message 28
commission 78, 81, 85
compressed print 76
condiment / preparation 59, 78
consecutive number 28, 70
correction 44, 45
coupon 26, 52, 82
credit 26, 40, 84
credit balance 71
currency exchange 26, 50, 73, 83
customer display 20, 22
customer number 26, 57

D

daily sales X 20
daily sales X report 88
daily sales Z 20
daily sales Z report 47, 88
daily X report 89
daily Z report 17, 90
date 30
date set 13
delete key 63, 64
department 25, 26, 31, 66, 78, 79, 88
department number 26, 32
department report 47
department shift 26, 32
descriptor 62
descriptors by list 62
discount 24, 26, 38, 82
display 22
double size letter key 63, 64
double Z report 73
drawer 20
drawer key 20
drawer lock 20

E

electronic journal 89
electronic journal report 93
enter 26
error correct 24, 26

F

feed 24
fixed total report 47
flash report 92
flat-PLU 26, 57, 66, 78, 79
function code 86
function key 66
function key report 47

G

general control program 70
grand total 47, 69
gross total 47
group report 93
guest receipt 24, 27, 55

H

hash 78, 81
help 24, 26
high amount limit 33, 80
high amount limitation 34
hourly report 92

I

individual key report 88
item counter 28, 71

J

journal 12, 28
journal skip 71

K

key catch tone 71
key function program 78
keyboard 20
keyboard layout 87

L

link 80
logo message 28
low digit limitation 78, 81

M

machine feature program 70
machine number 28, 70
magnetic plate 20
main display 20, 22
manual tax 26
memory protection 10
menu sheet 21
menu shift 25, 26, 57
merchandise subtotal 25, 26, 41, 83
message 67
message control 75
mixed tender 40
mode switch 20, 21
monthly report 92
multi tapping 64
multiplication 24, 26, 32, 36
multiplication / for 24, 27, 32, 37, 83

N

negative price 78, 81
net total 47
new / old check 26, 54, 55
new balance 25, 26, 84
new check 25, 26, 54
no sale 25, 26, 43
non-add 25, 26, 82
non-add / no sale 26, 82

O

OFF mode 20
old check 25, 26, 54
open 26
open check report 89, 93
open PLU 37, 78, 81
operator key 20

P

paid out 24, 26, 43, 82
paper install 11
periodic sale X/Z 20
periodic sales X report 94
periodic sales Z report 94
PGM mode 20
platen 11
PLU 24, 27, 35, 78, 79, 88
PLU report 92
pop-up display 20, 21
post receipt 24, 27
premium 27, 52, 82
preset graphic 28, 62, 76
preset message 28, 62, 76
preset price 34
preset tax status 34
price 24, 27
print control 71, 72, 73, 74
printer 20
printer cover 20
program backup 16
program end key 63, 64
program key 20
program mode 20
program report 96

R

R/J selection 16
rate 38
receipt 11, 28
receipt control 74
receipt on/off 24, 27
received on account 24, 27, 43, 82
reduction 24, 26, 39, 82
refund 24, 27, 42
refund mode 20
REG mode 20
register mode 20
repeat 23, 31, 36
report 88
report descriptor 68
report sample 91
report title 47, 69
RF mode 20, 42
right cursor key 64
roll paper 20

S

set menu 59, 80, 86
shift key 63
sign off 24, 27, 48
sign on 48
single item 31, 36, 49, 78, 81
space key 64
special character 69
stand-by 20
status indicator 23
subdepartment 24, 27
subtotal 24, 27, 31, 83
subtotal compulsory 71

T

take-up reel 12, 20
tax program 24, 27
tax shift 25, 27, 41, 83
tax status 33, 35, 38, 39
tax system 70
tax table 14
taxable status 81
text recall 27, 57, 69, 84
thermal paper 11
time 30
time set 13
tip 27, 60
training clerk 84

U

unit price 31, 33, 35

V

VAT 27
void 27, 61

W

watermark 16

X

X mode 20, 88
X2/Z2 mode 20, 94

Z

Z mode 20, 88
zero skip 73
zero unit price 78, 81

LIMITED WARRANTY: ELECTRONIC CASH REGISTERS

This product, except the battery, is warranted by Casio to the original purchaser to be free from defects in material and workmanship under normal use for a period, from the data of purchase, of one year for parts and 90 days for labor. For one year, upon proof of purchase, the product will be repaired or replaced (with the same or a similar model) at Casio's option, at a Casio Authorized Service Center without charge for parts. Labor will be provided without charge for 90 days. The terminal resident software and programmable software, if any, included with this product or any programmable software which may be licensed by Casio or one of its authorized dealers, is warranted by Casio to the original licensee for a period of ninety (90) days from the date of license to conform substantially to published specifications and documentation provided it is used with the Casio hardware and software for which it is designed.

For a period of ninety (90) days, upon proof of license, Casio will, at its option, replace defective terminal resident software or programmable software, correct significant program errors, or refund the license fee for such software. Significant program errors will be significant deviations from written documentation or specifications. These are your sole remedies for any breach of warranty. In no event will Casio's liability exceed the license fee, if any, for such software. This warranty will not apply if the product has been misused, abused, or altered.

Without limiting the foregoing, battery leakage, bending of the unit, a broken display tube, and any cracks or breaks in the display will be presumed to have resulted from misuse or abuse. To obtain warranty service you must take or ship the product, freight prepaid, with a copy of the sales receipt or other proof of purchase and the date of purchase, to a Casio Authorized Service Center. Due to the possibility of damage or loss, it is recommended when shipping the product to a Casio Authorized Service Center that you package the product securely and ship it insured. CASIO HEREBY EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR OF FITNESS FOR A PARTICULAR PURPOSE. NO RESPONSIBILITY IS ASSUMED FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION DAMAGES RESULTING FROM MATHEMATICAL INACCURACY OF THE PRODUCT OR LOSS OF STORED DATA. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

CASIO, INC.
570 MOUNT PLEASANT AVENUE,
P. O. BOX 7000, DOVER, NEW JERSEY 07801 U.S.A.

Model:.....Serial Number:.....Date of Purchase:.....

Your Name:.....

Address:.....

Dealer's Name:.....

Address:.....

CASIO

CASIO COMPUTER CO., LTD.
6-2, Hon-machi 1-chome
Shibuya-ku, Tokyo 151-8543, Japan

MO0712-A Printed in Indonesia

TK-950*E